

# COAX PATCH JACKS

J3W Shown

**PATCH JACK**  
**BNC REAR INTERFACE**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J3**  
**J3W**

**PATCH JACK**  
**"N"**

50Ω "N", RCA Center pin -.070"  
75Ω "N", WE Center pin -.090"

**J9**  
**UJ9W**

Minimum vertical/horizontal centers .875"

**PATCH JACK**  
**CRIMP**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J3C-⚠**  
**J3CW-⚠**

Microswitch not available.

**PATCH JACK**  
**BNC**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J10**  
**J10W**

Requires special threaded panel .5-.28 UNEF-2A. Contact Factory when ordering panels.

**PATCH JACK**  
**SOLDER POT**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J3D**  
**J3WD**

(WECO 468 type)

**PATCH JACK**  
**TNC**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J5**  
**J5W**

J3E-1 Shown

**PATCH JACK**  
**CABLE ENTRY**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J3E-⚠**  
**J3WE-⚠**

(WECO 447 type) Microswitch not available

**PATCH JACK**  
**SELF-TERMINATING**

BNC 50Ω RCA Center pin-.070"  
BNC 75Ω WE Center pin-.090"  
(WECO 477B type)

TNC 50Ω  
TNC 75Ω

**J13-R**  
**J13W-R**  
**J13H-R**  
**J13WH-R**

**BNC**  
**PATCH JACK**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J3A**  
**J3WA**

External SPDT Microswitch (125-250 VAC, 5 amps/28 VDC, 1amp res, 3 amp. ind)

**PATCH JACK**  
**SELF-TERMINATING**

50Ω RCA Center pin-.070"  
75Ω WE Center pin-.090"

**J13C-R-⚠**  
**J13WC-R-⚠**

Cable crimp: Circuit is terminated when plug is removed.

⚠ - Refers to Cable Group Table, see pages 91-133. Standard Panels are on page 51-54. Consult with the factory for special requirements. R = Resistance