

07/08/2015


Product Change Notification

Dear Customer,

As part of our continual commitment to deliver outstanding service to our customers and accelerate Eaton's competitiveness in the marketplace, Eaton is currently working to streamline its manufacturing operations in Europe.

Following on from our previous communication, all manufacturing of Low Voltage, Medium Voltage and High Speed fuses will transfer from our Burton-on-the-Wolds facility in the United Kingdom to our Gyor facility in Hungary. At the same time, Eaton is transitioning all Legacy Cooper businesses to the Eaton brand.

As part of these changes, affected products will carry a changed Country of Origin and the Eaton Bussmann series marking. The below drawing illustrates how the product marking will reflect the Eaton brand and changed Country of Origin.

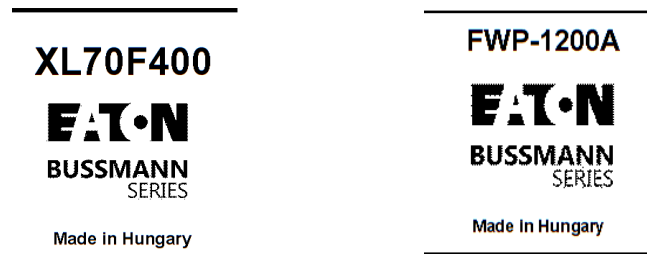

Please find attached to this document a list of the affected part numbers, Further correspondence will follow as more product families are transferred to the Gyor manufacturing site.

Please note that this change will not impact the order capture process or the quality and performance of our products.

If you would like further information on this change, please contact the undersigned or your local sales representative.

Yours faithfully,

Simon Pinkney
Director of Product Marketing
Bussmann series products- Industrial Control & Protection Division
E-Mail: SimonPinkney@eaton.com

Part Number	Description
XL50FM125	125A 500V SEMI CONDUCTOR FUSE
XL50FM150	150A 500V SEMI-CONDUCTOR FUSE
XL50FM175	175A 500V SEMI-CONDUCTOR FUSE
XL50FM200	200A 500V SEMI-CONDUCTOR FUSE
XL50F225A	225A 500V SEMI-CONDUCTOR FUSE
XL50F250A	250A 500V SEMI-CONDUCTOR FUSE
XL50F300A	300A 500V SEMI-CONDUCTOR FUSE
XL50F350A	350A 500V SEMI-CONDUCTOR FUSE
XL50F400A	400A 500V SEMI-CONDUCTOR FUSE
XL50F450A	450A 500V SEMI-CONDUCTOR FUSE
XL50F500A	500A 500V SEMI-CONDUCTOR FUSE
XL50F550A	550A 500V SEMI-CONDUCTOR FUSE
XL50F600A	600A 500V SEMI-CONDUCTOR FUSE
IXL50F500A	500A 500V INDICATED SEMI-COND
IXL50F600	600A 500V INDICATED SEMI-COND
XL50F700A	700A 500V SEMI-CONDUCTOR FUSE
XL50F800A	800A 500V SEMI-CONDUCTOR FUSE
XL70F125	125A 700V SEMI-CONDUCTOR FUSE
XL70F150	150A 700V SEMI-CONDUCTOR FUSE
XL70F175	175A 700V SEMI-CONDUCTOR FUSE
XL70F200	200A 700V SEMI-CONDUCTOR FUSE
XL70F225	225A 700V SEMI-CONDUCTOR FUSE
XL70F250	250A 700V SEMI-CONDUCTOR FUSE
XL70F300	300A 700V SEMI-CONDUCTOR FUSE
XL70F350	350A 700V SEMI-CONDUCTOR FUSE
XL70F400	400A 700V SEMI-CONDUCTOR FUSE
IXL70F150	150A 700V INDICATED SEMI-COND
IXL70F175	175A 700V INDICATED SEMI-COND
IXL70F200	200A 700V INDICATED SEMI-COND
IXL70F250	250A 700V INDICATED SEMI-COND
IXL70F300	300A 700V INDICATED SEMI-COND
IXL70F350	350A 700V INDICATED SEMI-COND
IXL70F400	400A 700V INDICATED SEMI-COND
XL70F470	470A 700V INDICATED SEMI-COND
XL70F500	500A 700V SEMI-CONDUCTOR FUSE
XL70F600	600A 700V SEMI-CONDUCTOR FUSE
IXL70F450	450A 700V SEMI-CONDUCTOR FUSE
IXL70F500	500A 700V SEMI-CONDUCTOR FUSE
IXL70F600	600A 700V SEMI-CONDUCTOR FUSE
XL70FE450	450A 700V SEMI-CONDUCTOR FUSE
XL50F150P	150A 500V SEMI-CONDUCTOR FUSE
XL70F30P	30A 700V SEMI-CONDUCTOR FUSE

Part Number	Description
FWA-450A	450A 130V SEMI-COND FUSE
FWA-500A	500A 150V SEMI-COND FUSE
FWA-600A	600A 150V SEMI-COND FUSE
FWA-700A	700A 150V SEMI-COND FUSE
FWA-800A	800A 150V SEMI-COND FUSE
FWA-500AI	500A SEMI-COND/INDICATOR
FWA-1000AH	1000A 130V SEMI-COND FUSE
FWA-1200AH	1200A 130V SEMI-COND FUSE
FWA-1500AH	1500A 130V SEMI-COND FUSE
FWA-2000AH	2000A 130V SEMI-COND FUSE
FWA-2500AH	2500A 130V SEMI-COND FUSE
FWA-2500AHI	2500A 130V SEMI-COND/INDICATOR
FWA-3000AH	3000A 130V SEMI-COND FUSE
FWA-3000AHI	3000A 130V SEMI-COND/INDICATOR
FWA-4000AH	4000A 130V SEMI-COND FUSE
FWX-1000AH	1000A 250V SEMI-COND FUSE
FWX-1200AH	1200A 250V SEMI-COND FUSE
FWX-1200AHI	1200A 250V SEMI-COND FUSE
FWX-1500AH	1500A 250V SEMI-COND FUSE
FWX-1600AH	1600A 250V SEMI-COND FUSE
FWX-2000AH	2000A 250V SEMI-COND FUSE
FWX-2500AH	2500A 250V SEMI-COND FUSE
FWX-2500AHI	2500A 250V SEMI-COND/INDICATOR
FWX-2500AHIBB	2500A 250V SEMI COND FUSE
FWP-700A	700A 700V SEMI-COND FUSE
FWP-800A	800A 700V SEMI-COND FUSE
FWP-700AI	700A 700V SEMI-COND/INDICATOR
FWP-800AI	800A 700V SEMI-COND FUSE
FWJ-250A	250A 1000V SEMI-COND FUSE
FWJ-300A	300A 1000V SEMI-COND FUSE
FWJ-300AI	300A 1000V SEMI-COND/INDICATOR
FWJ-350A	350A 1000V SEMI-COND FUSE
FWJ-400A	400A 1000V SEMI-COND FUSE
FWJ-400AI	400A 1000V SEMI-COND/ INDICATOR
FWJ-450A	450A 1000V SEMI-COND FUSE
FWJ-500A	500A 1000V SEMI-COND FUSE
FWJ-600A	600A 1000V SEMI-COND FUSE
FWH-1000A	1000A 500V SEMI-COND FUSE
FWH-1200A	1200A 500V SEMI-COND FUSE
FWH-900A	900A 500V SEMI-COND FUSE
FWH-1400A	1400A 500V SEMI-COND FUSE
FWH-1600A	1600AMP 500V AC SEMI-COND

Part Number	Description
FWJ-1400A	1400A 1000V SEMI-COND FUSE
FWJ-1000A	1000A 1000V SEMI-COND FUSE
FWJ-1200A	1200A 1000V SEMI-COND FUSE
FWJ-1600A	1600A 1000V SEMI-COND FUSE
FWJ-1800A	1800A 1000V SEMI-COND FUSE
FWJ-2000A	2000A 1000V SEMI-COND FUSE
FWJ-800A	800A 1000V SEMI-COND FUSE
FWJ-800AI	800A 1000V SEMI-COND/INDICATOR
FWP-1000A	1000A 700V SEMI-COND FUSE
FWP-900A	900A 700V SEMI-COND FUSE
FWP-900AI	900A 700V SEMI-COND FUSE
FWP-1200A	1200A 700V SEMI-COND FUSE
FWP-1200AI	1200A 700V SEMI-COND /INDICATOR
FWJ-35A-2	35A SPECIAL
FWJ-35A	35A 1000V SEMI-COND FUSE
FWJ-40A	40A 1000V SEMI-COND FUSE
FWJ-50A	50A 1000V SEMI-COND FUSE
FWJ-60A	60A 1000V SEMI-COND FUSE
FWJ-125A	125A 1000V SEMI-COND FUSE
FWJ-150A	150A 1000V SEMI-COND FUSE
FWJ-175A	175A 1000V SEMI-COND FUSE
FWJ-200A	200A 1000V SEMI-COND FUSE
FWH-001A6F	1.0A 500V SEMI COND FUSE
FWH-002A6F	2A 500V SEMI -COND FUSE
FWH-004A6F	4A 500V SEMI-COND FUSE
FWH-005A6F	5A 500V SEMI-COND FUSE
FWH-007A6F	7A 500V SEMI-COND FUSE
FWH--250A6F	0.25A 500V SEMI COND FUSE
FWH-3-15A6F	3.15A 500V SEMI-COND FUSE
FWH--500A6F	0.50A 500V SEMI COND FUSE
FWH-6-30A6F	6.3A 500V SEMI-COND FUSE
FWA-1000A	1000A 150V SEMI-COND FUSE
FWJ-30A14F-ABB	30A 1000V SEMI-COND FUSE
FWP-3A14F-ABB	3A 700V SEMI-COND FUSE
FWP-80A22FU	80A 700V SEMI-COND FUSE
FWP-1A14FS	1A 700V SEMI-COND FUSE
FWP-20A14FS	20A 700V SSEMI-COND FUSE
FWA-10A10F	10A 150V SEMI-COND FUSE
FWA-12A10F	12A 150V SEMI-COND FUSE
FWA-15A10F	15A 150V SEMI-COND FUSE
FWA-20A10F	20A 150V SEMI-COND FUSE
FWA-225B	225A 150V SEMI-COND FUSE

Part Number	Description
FWA-25A10F	25A 150V SEMI-COND FUSE
FWA-30A10F	30A 150V SEMI-COND FUSE
FWA-35A21F	35A 150V SEMI-COND FUSE
FWA-40A21F	40A 150V SEMI-COND FUSE
FWA-45A21F	45A 150V SEMI-COND FUSE
FWA-50A21F	50A 150V SEMI-COND FUSE
FWA-5A10F	5A 150V SEMI-COND FUSE
FWA-60A21F	60A 150V SEMI-COND FUSE
FWH-1A14F	1A 500V SEMI-COND FUSE
FWH-200BI	200A SEMI-COND/INDICATOR
FWH-2A14F	2A 500V SEMI-COND FUSE
FWH-3A14F	3A 500V SEMI-COND FUSE
FWH-4A14F	4A 500V SEMI-COND FUSE
FWH-50B-2	50A 500V SEMI-COND FUSE
FWH-50BI	50A 500V SEMI-COND.FUSE
FWH-60BI	60A SEMI-COND/INDICATOR
FWH-V-001A6F	1A 600V DC LEADED FUSE
FWJ-100A	100A 1000V SEMI-COND FUSE
FWJ-20A14F	20A 1000V SEMI-COND FUSE
FWJ-25A14F	25A 1000V SEMI-COND FUSE
FWJ-30A14F	30A 1000V SEMI-COND FUSE
FWJ-30A14F-AG	30A 1000V SEMI-COND FUSE
FWJ-70A	70A 1000V SEMI-COND FUSE
FWJ-80A	80A 1000V SEMI-COND FUSE
FWJ-90A	90A 1000V SEMI-COND FUSE
FWK-10A20F	10A 750V TRACTION FUSE
FWK-15A20F	15A 750V TRACTION FUSE
FWK-20A20F	20A 750V TRACTION FUSE
FWK-25A20F	25A 750V TRACTION FUSE
FWK-30A20F	30A 750V TRACTION FUSE
FWK-35A25F	35A 750V TRACTION FUSE
FWK-40A25F	40A 750V TRACTION FUSE
FWK-50A25F	50A 750V TRACTION FUSE
FWK-5A20F	5A 750V TRACTION FUSE
FWK-60A25F	60A 750V TRACTION FUSE
FWK-8A20F	8A 750V TRACTION FUSE
FWL-20A20F	20A 1200V TRACTION FUSE
FWL-20A20FI	20A 1200V TRACTION FUSE WITH INDICATOR
FWL-25A20F	25A 1200V SEMI-COND FUSE
FWL-25A20FI	25A 1200V TRACTION FUSE WITH INDICATOR
FWL-30A20F	30A 1200V TRACTION FUSE

Part Number	Description
FWL-30A20FI	30A 1200V TRACTION FUSE WITH INDICATOR
FWP-100B	100A 700V AC SEMI-COND FUSE
FWP-100BI	700V 100A INDICATED FUSE
FWP-10AR14F	10A ROCKWELL FUSE
FWP-10B	10A 700V SEMI-COND FUSE
FWP-1100A	700V 1100A SEMI-COND FUSE
FWP-15B	15A 700V SEMI-COND FUSE
FWP-1A14F	1A 700V SEMI-COND FUSE
FWP-20B	20A 700V SEMI-COND FUSE
FWP-2-5A14F	2.5A SEMI-COND FUSE
FWP-25B	25A 700V SEMI-COND FUSE
FWP-2A14F	2A 700V SEMI-COND FUSE
FWP-30A14FS	30A 700V SEMI-COND FUSE
FWP-30B	30A 700V SEMI-COND FUSE
FWP-35B	35A 700V SEMI-COND FUSE
FWP-3A14F	3A 700V SEMI-COND FUSE
FWP-40B	40A 700V SEMI-COND FUSE
FWP-40BI	40A SEMI-COND/INDICATOR
FWP-4A14F	4A 700V SEMI-COND FUSE
FWP-50B	50A 700V SEMI-COND FUSE
FWP-50BI	50A 700V SEMI-COND/INDICATOR
FWP-5AR14F	5A ROCKWELL
FWP-5B	5A 700V SEMI-COND FUSE
FWP-60B	60A 700V SEMI-COND FUSE
FWP-60BI	60A 700V SEMI COND FUSE
FWP-70B	70A 700V SEMI-COND FUSE
FWP-70BI	70A 700V SEMI-COND/ INDICATOR
FWP-80B	80A 700V SEMI-COND FUSE
FWP-80BI	80A 700V SEMI-COND/INDICATOR
FWP-90B	90A 700V SEMI-COND FUSE
FWS-10A20F	10A 1400V SEMI-COND FUSE
FWS-10A20FI	10A 1400V TRACTION FUSE WITH INDICATOR
FWS-12A20F	12A 1400V TRACTION FUSE
FWS-12A20FI	12A 1400V TRACTION FUSE WITH INDICATOR
FWS-15A20F	15A 1400V TRACTION FUSE
FWS-15A20FI	15A 1400V TRACTION FUSE WITH INDICATOR
FWS-2A20F	2A 2000V TRACTION FUSE
FWS-2A20FI	2A 2100V TRACTION FUSE WITH INDICATOR
FWS-6A20F	6A 2000V AC TRACTION FUSE
FWS-6A20FI	6A 2100V TRACTION FUSE WITH INDICATOR
FWS-8A20F	8A 1400V TRACTION FUSE
FWS-8A20FI	8A 2100V TRACTION FUSE WITH INDICATOR

Part Number	Description
FWX-10A14FS	10A 250V SEMI-COND FUSE
FWX-1A14F	1A 250V SEMI-COND FUSE
FWX-2A14F	2A 250V SEMI-COND FUSE
FWX-3A14F	3A 250V SEMI-COND FUSE
FWX-4A14F	4A 250V SEMI-COND FUSE
FWX-50A14F	50A 250V SEMI-COND FUSE
XL50F150P	150A 500V SEMI-COND FUSE
XL70F30P	30A 700V SEMI-COND FUSE
FWX-10A14FS	10A 250V SEMI-COND FUSE
FWX-1A14F	1A 250V SEMI-COND FUSE