

## Automation & Control Solutions

Honeywell Sensing and Controls

1985 Douglas Drive N.

Golden Valley, MN 55422

17 February 2011

Dear Director of Quality,

Honeywell Sensing and Control (S&C) announced that it will move final assembly of thermal probe products from its St. Lucia manufacturing site to its manufacturing site in Nanjing, China. These transitions will begin in the second quarter of 2011 with anticipated completion by the end of third quarter of 2011. Those primary product lines affected are:

- 500 Series air/gas temperature probes
- 500 Series surface temperature probes
- 500 Series immersion temperature probes

Calling on past experience, Honeywell S&C has formed a dedicated team who will communicate their plans and help ensure a smooth transition. Honeywell S&C plans to meet our commitments without disruption and with our usual focus on quality, delivery, and service. This team is committed to the success of this project by embracing the following measures:

- Project management using a phased line-by-line approach with key milestones
- Having appropriate inventory of key assemblies to maintain supplies during the transition
- Thorough process audits to assure accuracy of documentation.
- Comprehensive risk mitigation plans
- Process and product re-qualification once production is established in the Nanjing site

If you have any questions or concerns, please do not hesitate to contact your Sager Electronics contact or your sales representative.

Sincerely,



Lee Burtelson

Product Director, Pressure and Thermal

Item Number (Stock No)	Item Status Desc	Price Bk Code (Y/N)	Item Desc (Cat Listing)	Class (2- letter)	Class (3-letter)	Product Line	Product Line Desc	Restricted Flag	Plant Loc Code	Plant Location Desc
001-022P2A-A00	ACTIVE		001-022P2A-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-022T1E-C00	ACTIVE		001-022T1E-C00	HW	HWB	95	THERMISTORS	0 SL	SL	St. Lucia
001-030P1Z-A09	ACTIVE		001-030P1Z-A09	HW	HWB	95	THERMISTORS	0 SL	SL	St. Lucia
001-030T1E-E01	ACTIVE		001-030T1E-E01	HW	HWB	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AA20-A00	ACTIVE		001-32AA20-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB32-A00	ACTIVE		001-32AB32-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB33-A00	ACTIVE		001-32AB33-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB34-A00	ACTIVE		001-32AB34-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB35-A00	ACTIVE		001-32AB35-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB38-A00	ACTIVE		001-32AB38-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB39-A00	ACTIVE		001-32AB39-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AB40-A00	ACTIVE		001-32AB40-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32AD11-A01	ACTIVE		001-32AD11-A01	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32BG02-A00	ACTIVE		001-32BG02-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32BX00-A00	ACTIVE		001-32BX00-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32BX01-A00	ACTIVE		001-32BX01-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-32BX04-A00	ACTIVE		001-32BX04-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-33AA43-A00	ACTIVE		001-33AA43-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-33BN01-A00	ACTIVE		001-33BN01-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-34AB03-A00	ACTIVE		001-34AB03-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-34AB08-A00	ACTIVE		001-34AB08-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-34AE06-A00	ACTIVE		001-34AE06-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-34AE13-A00	ACTIVE		001-34AE13-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-43AA05-A00	ACTIVE		001-43AA05-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-53DF03-A00	ACTIVE		001-53DF03-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59AD14-A00	ACTIVE		001-59AD14-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59AD18-A00	ACTIVE		001-59AD18-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59BC17-A00	ACTIVE		001-59BC17-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59BC18-A00	ACTIVE		001-59BC18-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59BC21-A00	ACTIVE		001-59BC21-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59DV35-A00	ACTIVE		001-59DV35-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59DV41-A00	ACTIVE		001-59DV41-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59EJ04-A00	ACTIVE		001-59EJ04-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59EL06-A00	ACTIVE		001-59EL06-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
001-59EL08-A00	ACTIVE		001-59EL08-A00	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
010-245PA0-A30	ACTIVE		010-245PA0-A30	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
010-295PA0-A30	ACTIVE		010-295PA0-A30	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
010-554NA0-A30	ACTIVE		010-554NA0-A30	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-104KA0-A40	ACTIVE		016-104KA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-106QA0-A40	ACTIVE		016-106QA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-152EA0-A40	ACTIVE		016-152EA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-153HA0-C40	ACTIVE		016-153HA0-C40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-174KA0-A40	ACTIVE		016-174KA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-202EA0-A40	ACTIVE		016-202EA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-204KA0-A41	ACTIVE		016-204KA0-A41	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia
016-404MA0-A40	ACTIVE		016-404MA0-A40	HW	HWF	95	THERMISTORS	0 SL	SL	St. Lucia

016-503JA0-A40	ACTIVE		016-503JA0-A40	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
016-515QA0-A40	ACTIVE		016-515QA0-A40	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
021-174KAL-PK1	ACTIVE		021-174KAL-PK1	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
035-103LXX-001	ACTIVE		035-103LXX-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-101FAF-001	ACTIVE		041-101FAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-102FAF-001	ACTIVE		041-102FAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-102FAG-001	ACTIVE		041-102FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-103LAF-001	ACTIVE		041-103LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-103LAG-001	ACTIVE		041-103LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-103QAG-001	ACTIVE		041-103QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-104QAG-001	ACTIVE		041-104QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-122FAG-001	ACTIVE		041-122FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-152FAG-001	ACTIVE		041-152FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-182LAD-001	ACTIVE		041-182LAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-202FAG-001	ACTIVE		041-202FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-253QAG-001	ACTIVE		041-253QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-272LUP-002	ACTIVE		041-272LUP-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-302LAE-001	ACTIVE		041-302LAE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-302LAF-001	ACTIVE		041-302LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-302LAG-001	ACTIVE		041-302LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-302LAU-001	ACTIVE		041-302LAU-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-302LWT-002	ACTIVE		041-302LWT-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-303QAG-001	ACTIVE		041-303QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-402LAG-001	ACTIVE		041-402LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-473QAK-001	ACTIVE		041-473QAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-501FAG-001	ACTIVE		041-501FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-501FBF-001	ACTIVE		041-501FBF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-502LAG-001	ACTIVE		041-502LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-502LGV-001	ACTIVE		041-502LGV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-503QAG-001	ACTIVE		041-503QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
041-802LAG-001	ACTIVE		041-802LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-050AAN-001	ACTIVE		044-050AAN-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-100AAK-001	ACTIVE		044-100AAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-101FAF-001	ACTIVE		044-101FAF-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
044-101FAG-001	ACTIVE		044-101FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-102LAC-001	ACTIVE		044-102LAC-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-102LAG-001	ACTIVE		044-102LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-103QAD-001	ACTIVE		044-103QAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-103QAF-001	ACTIVE		044-103QAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-103QAG-001	ACTIVE		044-103QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-103QAG-002	ACTIVE		044-103QAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-132LAF-001	ACTIVE		044-132LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-151FAG-001	ACTIVE		044-151FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-153QAG-001	ACTIVE		044-153QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-162LAE-001	ACTIVE		044-162LAE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-182LAF-001	ACTIVE		044-182LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-182LBG-001	ACTIVE		044-182LBG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-200AAG-001	ACTIVE		044-200AAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
044-200AAK-001	ACTIVE		044-200AAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

044-201FAG-001	ACTIVE		044-201FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-202FDV-001	ACTIVE		044-202FDV-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-202LAG-001	ACTIVE		044-202LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-203QAG-001	ACTIVE		044-203QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-221FBF-001	ACTIVE		044-221FBF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-300AAK-001	ACTIVE		044-300AAK-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-301FAD-001	ACTIVE		044-301FAD-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-301FAF-001	ACTIVE		044-301FAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-301FAG-001	ACTIVE		044-301FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-302LAF-001	ACTIVE		044-302LAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-302LAG-001	ACTIVE		044-302LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-303QAG-001	ACTIVE		044-303QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-312LAB-001	ACTIVE		044-312LAB-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-322LBF-001	ACTIVE		044-322LBF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-400AAK-001	ACTIVE		044-400AAK-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-401FAG-001	ACTIVE		044-401FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-402LAF-001	ACTIVE		044-402LAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-402LAG-001	ACTIVE		044-402LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-452LUF-001	ACTIVE		044-452LUF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-471FAG-001	ACTIVE		044-471FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-501FAF-001	ACTIVE		044-501FAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-501FAG-001	ACTIVE		044-501FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-502LAG-001	ACTIVE		044-502LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-502LAF-001	ACTIVE		044-502LAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-502LAH-001	ACTIVE		044-502LAH-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-502LET-001	ACTIVE		044-502LET-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-503QAG-001	ACTIVE		044-503QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-582LAF-001	ACTIVE		044-582LAF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-631LAG-001	ACTIVE		044-631LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-651FAG-001	ACTIVE		044-651FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
044-771LBF-001	ACTIVE		044-771LBF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-101FAG-001	ACTIVE		051-101FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-202LAG-001	ACTIVE		051-202LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-312LBF-001	ACTIVE		051-312LBF-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-500FAG-001	ACTIVE		051-500FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-500FAK-001	ACTIVE		051-500FAK-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-501LAG-001	ACTIVE		051-501LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-622QAG-001	ACTIVE		051-622QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
051-750FAG-001	ACTIVE		051-750FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-010AAN-001	ACTIVE		054-010AAN-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-100AAK-001	ACTIVE		054-100AAK-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-101DAG-001	ACTIVE		054-101DAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-101FAG-001	ACTIVE		054-101FAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-102LAG-001	ACTIVE		054-102LAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-153QAG-001	ACTIVE		054-153QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-180FAK-001	ACTIVE		054-180FAK-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-201DAG-001	ACTIVE		054-201DAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
054-202QAG-001	ACTIVE		054-202QAG-001	HW	HWF	95	THERMISTORS	0	SL	St. Lucia

054-241LCG-001	ACTIVE		054-241LCG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-260FAH-001	ACTIVE		054-260FAH-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-260FAK-001	ACTIVE		054-260FAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-461LBG-001	ACTIVE		054-461LBG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-500DAK-001	ACTIVE		054-500DAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-500FAK-001	ACTIVE		054-500FAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-501LAF-001	ACTIVE		054-501LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
054-640FAG-001	ACTIVE		054-640FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-101CDT-001	ACTIVE		091-101CDT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-101CDU-001	ACTIVE		091-101CDU-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-101CDV-001	ACTIVE		091-101CDV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-101CDW-001	ACTIVE		091-101CDW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-102DAT-001	ACTIVE		091-102DAT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-102DET-001	ACTIVE		091-102DET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-102DEV-001	ACTIVE		091-102DEV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-102DEW-001	ACTIVE		091-102DEW-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-102DXW-001	ACTIVE		091-102DXW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-102LET-001	ACTIVE		091-102LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103HET-001	ACTIVE		091-103HET-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103HTT-001	ACTIVE		091-103HTT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LAT-001	ACTIVE		091-103LAT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LBA-001	ACTIVE		091-103LBA-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LBD-001	ACTIVE		091-103LBD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LBR-001	ACTIVE		091-103LBR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LBR-002	ACTIVE		091-103LBR-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LBR-004	ACTIVE		091-103LBR-004	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LBW-001	ACTIVE		091-103LBW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LGB-001	ACTIVE		091-103LGB-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LCC-002	ACTIVE		091-103LCC-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LCS-002	ACTIVE		091-103LCS-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LCY-004	ACTIVE		091-103LCY-004	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LDD-001	ACTIVE		091-103LDD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LES-001	ACTIVE		091-103LES-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LES-002	ACTIVE		091-103LES-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LET-001	ACTIVE		091-103LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LET-002	ACTIVE		091-103LET-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LET-003	ACTIVE		091-103LET-003	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LET-005	ACTIVE		091-103LET-005	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LEV-001	ACTIVE		091-103LEV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LEW-001	ACTIVE		091-103LEW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LFT-001	ACTIVE		091-103LFT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LFT-002	ACTIVE		091-103LFT-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LFW-001	ACTIVE		091-103LFW-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LGB-001	ACTIVE		091-103LGB-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LGT-001	ACTIVE		091-103LGT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LHS-001	ACTIVE		091-103LHS-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LHT-001	ACTIVE		091-103LHT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LJS-001	ACTIVE		091-103LJS-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LJS-002	ACTIVE		091-103LJS-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

091-103LNR-001	ACTIVE		091-103LNR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LNR-002	ACTIVE		091-103LNR-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LPR-001	ACTIVE		091-103LPR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LQR-001	ACTIVE		091-103LQR-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LSR-001	ACTIVE		091-103LSR-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LST-003	ACTIVE		091-103LST-003	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LSV-001	ACTIVE		091-103LSV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LUP-001	ACTIVE		091-103LUP-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LUW-001	ACTIVE		091-103LUW-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LWS-001	ACTIVE		091-103LWS-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-103LZR-001	ACTIVE		091-103LZR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-103LZR-002	ACTIVE		091-103LZR-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QAG-002	ACTIVE		091-104QAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QAT-001	ACTIVE		091-104QAT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QBD-001	ACTIVE		091-104QBD-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QBR-001	ACTIVE		091-104QBR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QBV-001	ACTIVE		091-104QBV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QBW-001	ACTIVE		091-104QBW-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QCT-001	ACTIVE		091-104QCT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QET-001	ACTIVE		091-104QET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QEV-001	ACTIVE		091-104QEV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QEW-001	ACTIVE		091-104QEW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QFT-001	ACTIVE		091-104QFT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QHS-001	ACTIVE		091-104QHS-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QJT-001	ACTIVE		091-104QJT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QLU-001	ACTIVE		091-104QLU-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QLW-001	ACTIVE		091-104QLW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QSR-001	ACTIVE		091-104QSR-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QSS-001	ACTIVE		091-104QSS-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-104QYU-001	ACTIVE		091-104QYU-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-104QZI-001	ACTIVE		091-104QZI-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-153LHW-001	ACTIVE		091-153LHW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-153LUW-001	ACTIVE		091-153LUW-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-153LZV-001	ACTIVE		091-153LZV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-171CZT-001	ACTIVE		091-171CZT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-172FCV-001	ACTIVE		091-172FCV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-202FAD-001	ACTIVE		091-202FAD-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-202LCC-002	ACTIVE		091-202LCC-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-202LCT-002	ACTIVE		091-202LCT-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-202LDR-001	ACTIVE		091-202LDR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-202LET-001	ACTIVE		091-202LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-202LJP-001	ACTIVE		091-202LJP-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-203LET-001	ACTIVE		091-203LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-204QAG-001	ACTIVE		091-204QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-222LAT-001	ACTIVE		091-222LAT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-222LCT-001	ACTIVE		091-222LCT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-222LET-001	ACTIVE		091-222LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-222LET-002	ACTIVE		091-222LET-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-222LET-003	ACTIVE		091-222LET-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

091-222LET-005	ACTIVE		091-222LET-005	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-222LEV-001	ACTIVE		091-222LEV-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-222LEW-001	ACTIVE		091-222LEW-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-222LW-001	ACTIVE		091-222LW-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-222LJS-001	ACTIVE		091-222LJS-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-222LNS-001	ACTIVE		091-222LNS-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-222LZT-001	ACTIVE		091-222LZT-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-272LBC-001	ACTIVE		091-272LBC-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-272LBD-001	ACTIVE		091-272LBD-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-301CDT-001	ACTIVE		091-301CDT-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-301CDW-001	ACTIVE		091-301CDW-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-302LET-001	ACTIVE		091-302LET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-302LET-A03	ACTIVE		091-302LET-A03	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-302LEV-001	ACTIVE		091-302LEV-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-302LEW-001	ACTIVE		091-302LEW-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-302LGR-001	ACTIVE		091-302LGR-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-302LJS-001	ACTIVE		091-302LJS-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-302LWT-001	ACTIVE		091-302LWT-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-302LZS-001	ACTIVE		091-302LZS-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-302LZT-001	ACTIVE		091-302LZT-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-302LZV-001	ACTIVE		091-302LZV-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-303KCT-001	ACTIVE		091-303KCT-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-303KET-001	ACTIVE		091-303KET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KEV-001	ACTIVE		091-303KEV-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KEW-001	ACTIVE		091-303KEW-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-303KFT-001	ACTIVE		091-303KFT-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KSR-001	ACTIVE		091-303KSR-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KUC-001	ACTIVE		091-303KUC-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KWT-001	ACTIVE		091-303KWT-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KXT-002	ACTIVE		091-303KXT-002	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303KZT-002	ACTIVE		091-303KZT-002	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303QET-001	ACTIVE		091-303QET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-303QEV-001	ACTIVE		091-303QEV-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-303QEW-001	ACTIVE		091-303QEW-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-351CCC-001	ACTIVE		091-351CCC-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-402LET-001	ACTIVE		091-402LET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-403KFT-002	ACTIVE		091-403KFT-002	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-403QET-001	ACTIVE		091-403QET-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-501DET-001	ACTIVE		091-501DET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-501DEV-001	ACTIVE		091-501DEV-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-501DEW-001	ACTIVE		091-501DEW-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-502LAC-001	ACTIVE		091-502LAC-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-502LCT-001	ACTIVE		091-502LCT-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-502LES-001	ACTIVE		091-502LES-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-502LET-001	ACTIVE		091-502LET-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-502LEV-001	ACTIVE		091-502LEV-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-502LEW-001	ACTIVE		091-502LEW-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
091-502LFT-001	ACTIVE		091-502LFT-001	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
091-502LGS-001	ACTIVE		091-502LGS-001	HW	HWF	95	THERMISTORS		0	SL	St. Lucia

091-502LJS-001	ACTIVE		091-502LJS-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-502LQT-001	ACTIVE		091-502LQT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-502LXV-001	ACTIVE		091-502LXV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-502LZU-001	ACTIVE		091-502LZU-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QBR-001	ACTIVE		091-503QBR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-503QBT-001	ACTIVE		091-503QBT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QCT-001	ACTIVE		091-503QCT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QET-001	ACTIVE		091-503QET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-503QEV-001	ACTIVE		091-503QEV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QEW-001	ACTIVE		091-503QEW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QFT-001	ACTIVE		091-503QFT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QFV-001	ACTIVE		091-503QFV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-503QSR-001	ACTIVE		091-503QSR-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-503QST-001	ACTIVE		091-503QST-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-503QSV-001	ACTIVE		091-503QSV-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-503QUP-001	ACTIVE		091-503QUP-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-602LDT-001	ACTIVE		091-602LDT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-602LFT-001	ACTIVE		091-602LFT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-602LFT-002	ACTIVE		091-602LFT-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-602LGT-002	ACTIVE		091-602LGT-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-602LUT-001	ACTIVE		091-602LUT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-602LWT-001	ACTIVE		091-602LWT-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-602LXT-002	ACTIVE		091-602LXT-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-603QAF-001	ACTIVE		091-603QAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-652LET-001	ACTIVE		091-652LET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-701DET-001	ACTIVE		091-701DET-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-701FAC-001	ACTIVE		091-701FAC-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-801FAC-001	ACTIVE		091-801FAC-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
091-852LES-001	ACTIVE		091-852LES-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
091-893QCP-001	ACTIVE		091-893QCP-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
096-101AAF-002	ACTIVE		096-101AAF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101AAG-002	ACTIVE		096-101AAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101CAG-001	ACTIVE		096-101CAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101CAG-002	ACTIVE		096-101CAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101CAG-004	ACTIVE		096-101CAG-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101CAG-008	ACTIVE		096-101CAG-008	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-101CAH-001	ACTIVE		096-101CAH-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-102DAF-001	ACTIVE		096-102DAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-102DAG-001	ACTIVE		096-102DAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-102DAG-002	ACTIVE		096-102DAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103GAD-001	ACTIVE		096-103GAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAC-001	ACTIVE		096-103LAC-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAD-001	ACTIVE		096-103LAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAD-002	ACTIVE		096-103LAD-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAD-004	ACTIVE		096-103LAD-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAD-008	ACTIVE		096-103LAD-008	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAE-001	ACTIVE		096-103LAE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAF-001	ACTIVE		096-103LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAF-002	ACTIVE		096-103LAF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia



096-103LAF-003	ACTIVE		096-103LAF-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAF-004	ACTIVE		096-103LAF-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAF-006	ACTIVE		096-103LAF-006	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAG-001	ACTIVE		096-103LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAG-002	ACTIVE		096-103LAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAG-003	ACTIVE		096-103LAG-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LAJ-001	ACTIVE		096-103LAJ-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LBG-001	ACTIVE		096-103LBG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-103LBW-001	ACTIVE		096-103LBW-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QAD-001	ACTIVE		096-104QAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QAE-005	ACTIVE		096-104QAE-005	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QAF-001	ACTIVE		096-104QAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QAF-002	ACTIVE		096-104QAF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QAG-001	ACTIVE		096-104QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-104QBE-001	ACTIVE		096-104QBE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-123HBF-001	ACTIVE		096-123HBF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-123LAG-001	ACTIVE		096-123LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-133LAG-001	ACTIVE		096-133LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-150AAG-001	ACTIVE		096-150AAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-150AAK-001	ACTIVE		096-150AAK-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-153LAG-001	ACTIVE		096-153LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-154QAG-001	ACTIVE		096-154QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-201CAF-001	ACTIVE		096-201CAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-202FAD-001	ACTIVE		096-202FAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-202FAG-001	ACTIVE		096-202FAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-202LAG-001	ACTIVE		096-202LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-202LAG-002	ACTIVE		096-202LAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-203LAF-001	ACTIVE		096-203LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-203LAG-001	ACTIVE		096-203LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-203LAG-003	ACTIVE		096-203LAG-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-204QAG-001	ACTIVE		096-204QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-204QAG-002	ACTIVE		096-204QAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-301CAG-001	ACTIVE		096-301CAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-301CAG-002	ACTIVE		096-301CAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-301CAG-003	ACTIVE		096-301CAG-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-302LAC-001	ACTIVE		096-302LAC-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-302LAD-002	ACTIVE		096-302LAD-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-302LAF-001	ACTIVE		096-302LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-302LAG-001	ACTIVE		096-302LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-302LAG-004	ACTIVE		096-302LAG-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-303KAD-001	ACTIVE		096-303KAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-303KAF-001	ACTIVE		096-303KAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-303KAG-001	ACTIVE		096-303KAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-303KAG-002	ACTIVE		096-303KAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-303QAG-001	ACTIVE		096-303QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-313KAF-001	ACTIVE		096-313KAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-413KAE-001	ACTIVE		096-413KAE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-472LBE-001	ACTIVE		096-472LBE-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-473QAF-001	ACTIVE		096-473QAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

096-500AAJ-002	ACTIVE		096-500AAJ-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-501DAG-001	ACTIVE		096-501DAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-501DAG-002	ACTIVE		096-501DAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-502LAF-001	ACTIVE		096-502LAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-502LAG-001	ACTIVE		096-502LAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-503QAD-001	ACTIVE		096-503QAD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-503QAF-001	ACTIVE		096-503QAF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-503QAG-001	ACTIVE		096-503QAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-503QAG-002	ACTIVE		096-503QAG-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-503QBT-001	ACTIVE		096-503QBT-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-542RBD-001	ACTIVE		096-542RBD-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-650CAG-001	ACTIVE		096-650CAG-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
096-821FBV-001	ACTIVE		096-821FBV-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
111-202CAK-H01	ACTIVE		111-202CAK-H01	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
133-113ZXT-D50	ACTIVE		133-113ZXT-D50	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
133-292ZFT-D50	ACTIVE		133-292ZFT-D50	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
135-103FCF-JXX	ACTIVE		135-103FCF-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
135-103LGT-JXX	ACTIVE		135-103LGT-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
135-104LAD-JXX	ACTIVE		135-104LAD-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
135-202FAD-JXX	ACTIVE		135-202FAD-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
135-503LAD-JXX	ACTIVE		135-503LAD-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
135-503LBC-JXX	ACTIVE		135-503LBC-JXX	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
137-462ZWS-D01	ACTIVE		137-462ZWS-D01	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-A00	ACTIVE		140-102FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-A01	ACTIVE		140-102FAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-A01-P	ACTIVE		140-102FAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-A04	ACTIVE		140-102FAG-A04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-RB0	ACTIVE		140-102FAG-RB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-RB1	ACTIVE		140-102FAG-RB1	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-102FAG-RB1-P	ACTIVE		140-102FAG-RB1-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-A00	ACTIVE		140-103LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-A01	ACTIVE		140-103LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-A01-P	ACTIVE		140-103LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-RB0	ACTIVE		140-103LAG-RB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-RB1	ACTIVE		140-103LAG-RB1	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-103LAG-RB1-P	ACTIVE		140-103LAG-RB1-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A00	ACTIVE		140-104QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A01	ACTIVE		140-104QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A01-P	ACTIVE		140-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A01-P	ACTIVE		140-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A01-P	ACTIVE		140-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-104QAG-A01-P	ACTIVE		140-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-152FAG-A00	ACTIVE		140-152FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-152FAG-A01	ACTIVE		140-152FAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-152FAG-A01-P	ACTIVE		140-152FAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-202FAG-A00	ACTIVE		140-202FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-253QAG-A00	ACTIVE		140-253QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-253QAG-A01	ACTIVE		140-253QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-302LAF-A00	ACTIVE		140-302LAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-302LAG-A00	ACTIVE		140-302LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-302LAG-RB0	ACTIVE		140-302LAG-RB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
140-302LAG-RB1	ACTIVE		140-302LAG-RB1	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

140-302LAG-RB1-P	ACTIVE		140-302LAG-RB1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-A00	ACTIVE		140-501FAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-A01	ACTIVE		140-501FAG-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-A01-P	ACTIVE		140-501FAG-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-RB0	ACTIVE		140-501FAG-RB0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-RB1	ACTIVE		140-501FAG-RB1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-RB1-P	ACTIVE		140-501FAG-RB1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-RB2	ACTIVE		140-501FAG-RB2	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-501FAG-RB2-P	ACTIVE		140-501FAG-RB2-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-A00	ACTIVE		140-502LAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-A01	ACTIVE		140-502LAG-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-A01-P	ACTIVE		140-502LAG-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-RB0	ACTIVE		140-502LAG-RB0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-RB1	ACTIVE		140-502LAG-RB1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-502LAG-RB1-P	ACTIVE		140-502LAG-RB1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-503QAG-A00	ACTIVE		140-503QAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-503QAG-A01	ACTIVE		140-503QAG-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-802LAG-A00	ACTIVE		140-802LAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-802LAG-AB0	ACTIVE		140-802LAG-AB0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-802LAG-RB0	ACTIVE		140-802LAG-RB0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-802LAG-RB2	ACTIVE		140-802LAG-RB2	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
140-802LAG-RB2-P	ACTIVE		140-802LAG-RB2-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-102FAF-A00	ACTIVE		142-102FAF-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-102FAF-A03	ACTIVE		142-102FAF-A03	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-102FAG-RB1	ACTIVE		142-102FAG-RB1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-102FAG-RB1-P	ACTIVE		142-102FAG-RB1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-103LAG-RB1	ACTIVE		142-103LAG-RB1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-103LAG-RB1-P	ACTIVE		142-103LAG-RB1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-202FAG-A00	ACTIVE		142-202FAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-302LAG-A00	ACTIVE		142-302LAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-302LAG-RB2	ACTIVE		142-302LAG-RB2	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-302LAG-RB2-P	ACTIVE		142-302LAG-RB2-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-503QAG-RB0	ACTIVE		142-503QAG-RB0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
142-503QAG-RB1-SLU	ACTIVE		142-503QAG-RB1-SLU	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-100AAK-A00	ACTIVE		143-100AAK-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAF-RC0	ACTIVE		143-101FAF-RC0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAF-RC2	ACTIVE		143-101FAF-RC2	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAF-RC2-P	ACTIVE		143-101FAF-RC2-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-A00	ACTIVE		143-101FAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-A01	ACTIVE		143-101FAG-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-A01-P	ACTIVE		143-101FAG-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-RC0	ACTIVE		143-101FAG-RC0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-RC1	ACTIVE		143-101FAG-RC1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-101FAG-RC1-P	ACTIVE		143-101FAG-RC1-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-102LAG-A00	ACTIVE		143-102LAG-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-102LAG-A01	ACTIVE		143-102LAG-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-102LAG-A01-P	ACTIVE		143-102LAG-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-102LAG-RC0	ACTIVE		143-102LAG-RC0	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
143-102LAG-RC1	ACTIVE		143-102LAG-RC1	HW	HWB	95	THERMISTORS	0	SL	St. Lucia

143-102LAG-RC1-P	ACTIVE		143-102LAG-RC1-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-103QAG-A00	ACTIVE		143-103QAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-103QAG-RC0	ACTIVE		143-103QAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-153QAG-A00	ACTIVE		143-153QAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-153QAG-A01	ACTIVE		143-153QAG-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-182LAF-K01	ACTIVE		143-182LAF-K01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-A00	ACTIVE		143-201FAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-A01	ACTIVE		143-201FAG-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-A03	ACTIVE		143-201FAG-A03	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-A03-P	ACTIVE		143-201FAG-A03-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-B00	ACTIVE		143-201FAG-B00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-RC0	ACTIVE		143-201FAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-RC1	ACTIVE		143-201FAG-RC1	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-201FAG-RC1-P	ACTIVE		143-201FAG-RC1-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-A00	ACTIVE		143-202LAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-A01	ACTIVE		143-202LAG-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-A01-P	ACTIVE		143-202LAG-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-K00	ACTIVE		143-202LAG-K00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-K01	ACTIVE		143-202LAG-K01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-202LAG-K01-P	ACTIVE		143-202LAG-K01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-203QAG-A00	ACTIVE		143-203QAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-300AAK-RC0	ACTIVE		143-300AAK-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-300AAK-RC1-SLU	ACTIVE		143-300AAK-RC1-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-301FAG-A00	ACTIVE		143-301FAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-301FAG-RC0	ACTIVE		143-301FAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-301FAG-RC1	ACTIVE		143-301FAG-RC1	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-301FAG-RC1-P	ACTIVE		143-301FAG-RC1-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAF-A00	ACTIVE		143-302LAF-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAG-A00	ACTIVE		143-302LAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAG-A01	ACTIVE		143-302LAG-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAG-RC0	ACTIVE		143-302LAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAG-RC1	ACTIVE		143-302LAG-RC1	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-302LAG-RC1-P	ACTIVE		143-302LAG-RC1-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-303QAG-A00	ACTIVE		143-303QAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-303QAG-RC0	ACTIVE		143-303QAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-303QAG-RC1	ACTIVE		143-303QAG-RC1	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-303QAG-RC1-P	ACTIVE		143-303QAG-RC1-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-312LAB-RC2	ACTIVE		143-312LAB-RC2	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-400AAK-A00	ACTIVE		143-400AAK-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-400AAK-A01	ACTIVE		143-400AAK-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-401FAG-A00	ACTIVE		143-401FAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-402LAF-A00	ACTIVE		143-402LAF-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-402LAG-RC0	ACTIVE		143-402LAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-501FAG-A00	ACTIVE		143-501FAG-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-501FAG-RC0	ACTIVE		143-501FAG-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-502LAC-RC0	ACTIVE		143-502LAC-RC0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-502LAF-A00	ACTIVE		143-502LAF-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-502LAF-A02	ACTIVE		143-502LAF-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
143-502LAF-A02-P	ACTIVE		143-502LAF-A02-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia

143-502LAG-A00	ACTIVE		143-502LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-502LAG-A01	ACTIVE		143-502LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-502LAG-A01-P	ACTIVE		143-502LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-502LAG-RC0	ACTIVE		143-502LAG-RC0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-502LAG-RC1	ACTIVE		143-502LAG-RC1	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-502LAG-RC1-P	ACTIVE		143-502LAG-RC1-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
143-503QAG-RC0	ACTIVE		143-503QAG-RC0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-101FAG-001	ACTIVE		144-101FAG-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-101FAG-001-P	ACTIVE		144-101FAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-102LAG-001	ACTIVE		144-102LAG-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-102LAG-001-P	ACTIVE		144-102LAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-103QAG-002	ACTIVE		144-103QAG-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
144-103QAG-002-P	ACTIVE		144-103QAG-002-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
145-202FDV-A00	ACTIVE		145-202FDV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
145-502LAH-A00	ACTIVE		145-502LAH-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
145-502LET-A00	ACTIVE		145-502LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
145-502LET-A01	ACTIVE		145-502LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
145-502LET-A01-P	ACTIVE		145-502LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
148-203QNT-A00	ACTIVE		148-203QNT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
150-101FAG-A00	ACTIVE		150-101FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
150-202LAG-A00	ACTIVE		150-202LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
150-202LAG-A01	ACTIVE		150-202LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
152-312BF-A00	ACTIVE		152-312BF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
152-501LAG-A00	ACTIVE		152-501LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
152-501LAG-A01	ACTIVE		152-501LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
152-501LAG-A01-P	ACTIVE		152-501LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
153-101DAG-B01-P	ACTIVE		153-101DAG-B01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
153-260FAK-B01-P	ACTIVE		153-260FAK-B01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
155-010AAN-N01-P	ACTIVE		155-010AAN-N01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
173-103LAD-301	ACTIVE		173-103LAD-301	HW	HWC	95	THERMISTORS		0 SL	St. Lucia
189-202LDR-A00	ACTIVE		189-202LDR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
189-202LDR-A01	ACTIVE		189-202LDR-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
189-202LDR-A01-P	ACTIVE		189-202LDR-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
189-602LDR-A00	ACTIVE		189-602LDR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
189-602LDR-A01	ACTIVE		189-602LDR-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
189-602LDR-A01-P	ACTIVE		189-602LDR-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-104QET-A00	ACTIVE		190-104QET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-104QET-A01	ACTIVE		190-104QET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-104QET-A01-P	ACTIVE		190-104QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-104QWT-A00	ACTIVE		190-104QWT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-222LET-A00	ACTIVE		190-222LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
190-502LET-F00	ACTIVE		190-502LET-F00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
191-103LZS-002	ACTIVE		191-103LZS-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
191-202LZS-002	ACTIVE		191-202LZS-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
191-303QET-A01-P	ACTIVE		191-303QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-101CDT-AB0	ACTIVE		192-101CDT-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-101CDV-A00-SLU	ACTIVE		192-101CDV-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-101CDW-A00	ACTIVE		192-101CDW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-101CDW-A01	ACTIVE		192-101CDW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

192-101CDW-A01-P	ACTIVE		192-101CDW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DET-A00	ACTIVE		192-102DET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DET-A01	ACTIVE		192-102DET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DET-A01-P	ACTIVE		192-102DET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DET-AS0	ACTIVE		192-102DET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEV-A00	ACTIVE		192-102DEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEV-A01	ACTIVE		192-102DEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEV-A01-P	ACTIVE		192-102DEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEW-A00	ACTIVE		192-102DEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEW-A01	ACTIVE		192-102DEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102DEW-A01-P	ACTIVE		192-102DEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-102LET-A00	ACTIVE		192-102LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBA-D00	ACTIVE		192-103LBA-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBA-D01	ACTIVE		192-103LBA-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBA-D01-P	ACTIVE		192-103LBA-D01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBR-A00	ACTIVE		192-103LBR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBR-A03-P	ACTIVE		192-103LBR-A03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBS-G00	ACTIVE		192-103LBS-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LBW-A00	ACTIVE		192-103LBW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LCS-A00	ACTIVE		192-103LCS-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LES-A00-SLU	ACTIVE		192-103LES-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LES-A01	ACTIVE		192-103LES-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LES-A01-P	ACTIVE		192-103LES-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A00	ACTIVE		192-103LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A01	ACTIVE		192-103LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A01-P	ACTIVE		192-103LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A06	ACTIVE		192-103LET-A06	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A12	ACTIVE		192-103LET-A12	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-A12-P	ACTIVE		192-103LET-A12-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-AB0	ACTIVE		192-103LET-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-AS0	ACTIVE		192-103LET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-D00	ACTIVE		192-103LET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LET-F00	ACTIVE		192-103LET-F00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-A00	ACTIVE		192-103LEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-A01	ACTIVE		192-103LEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-A01-P	ACTIVE		192-103LEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-AS0	ACTIVE		192-103LEV-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-C02	ACTIVE		192-103LEV-C02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEV-C02-P	ACTIVE		192-103LEV-C02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEW-A00	ACTIVE		192-103LEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEW-A01	ACTIVE		192-103LEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LEW-A01-P	ACTIVE		192-103LEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LFT-A00	ACTIVE		192-103LFT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LFT-D00-SLU	ACTIVE		192-103LFT-D00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LFW-A00	ACTIVE		192-103LFW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LGT-A00	ACTIVE		192-103LGT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LHS-A00	ACTIVE		192-103LHS-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LHS-D00	ACTIVE		192-103LHS-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

192-103LPR-A00	ACTIVE		192-103LPR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LPR-A01	ACTIVE		192-103LPR-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LRV-A00	ACTIVE		192-103LRV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-103LSR-A00	ACTIVE		192-103LSR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QCT-A00-SLU	ACTIVE		192-104QCT-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-A00	ACTIVE		192-104QET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-A01	ACTIVE		192-104QET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-A01-P	ACTIVE		192-104QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-AS0	ACTIVE		192-104QET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-C00	ACTIVE		192-104QET-C00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-CS0	ACTIVE		192-104QET-CS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QET-D00	ACTIVE		192-104QET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QEV-A00	ACTIVE		192-104QEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QEV-A00	ACTIVE		192-104QEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QEW-A00	ACTIVE		192-104QEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QEW-A01	ACTIVE		192-104QEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QEW-A01-P	ACTIVE		192-104QEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QFT-A00	ACTIVE		192-104QFT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QLW-A00	ACTIVE		192-104QLW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QYU-E00	ACTIVE		192-104QYU-E00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QYU-E01	ACTIVE		192-104QYU-E01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-104QYU-E01-P	ACTIVE		192-104QYU-E01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-171CZT-G00	ACTIVE		192-171CZT-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-172FCV-A00	ACTIVE		192-172FCV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-172FCV-A01	ACTIVE		192-172FCV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-172FCV-A01-P	ACTIVE		192-172FCV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-202LET-A00	ACTIVE		192-202LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-203LET-A00	ACTIVE		192-203LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LCT-A00	ACTIVE		192-222LCT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-A00-SLU	ACTIVE		192-222LET-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-A01	ACTIVE		192-222LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-A01-P	ACTIVE		192-222LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-A03-P	ACTIVE		192-222LET-A03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-D00	ACTIVE		192-222LET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-D01	ACTIVE		192-222LET-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LET-DA0	ACTIVE		192-222LET-DA0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LEV-A00	ACTIVE		192-222LEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LEV-A01	ACTIVE		192-222LEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LEV-A01-P	ACTIVE		192-222LEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LEW-A00	ACTIVE		192-222LEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LFT-A00	ACTIVE		192-222LFT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LJS-A00	ACTIVE		192-222LJS-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-222LZS-A00	ACTIVE		192-222LZS-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDT-A00	ACTIVE		192-301CDT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDT-A01	ACTIVE		192-301CDT-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDT-A01-P	ACTIVE		192-301CDT-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDT-A05	ACTIVE		192-301CDT-A05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDT-AB0	ACTIVE		192-301CDT-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDW-A00	ACTIVE		192-301CDW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-301CDW-A01	ACTIVE		192-301CDW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

192-301CDW-A01-P	ACTIVE		192-301CDW-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-A00	ACTIVE		192-302LET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-A01	ACTIVE		192-302LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-A01-P	ACTIVE		192-302LET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-AB0	ACTIVE		192-302LET-AB0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-D00	ACTIVE		192-302LET-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LET-P00	ACTIVE		192-302LET-P00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEU-A00	ACTIVE		192-302LEU-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEV-A00	ACTIVE		192-302LEV-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEV-A01	ACTIVE		192-302LEV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEW-A00	ACTIVE		192-302LEW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEW-A01	ACTIVE		192-302LEW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LEW-A01-P	ACTIVE		192-302LEW-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LWT-A00	ACTIVE		192-302LWT-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZS-A00	ACTIVE		192-302LZS-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZS-D00	ACTIVE		192-302LZS-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZS-D01	ACTIVE		192-302LZS-D01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZV-A00	ACTIVE		192-302LZV-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZV-A01	ACTIVE		192-302LZV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-302LZV-A01-P	ACTIVE		192-302LZV-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KCT-A00	ACTIVE		192-303KCT-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-A00	ACTIVE		192-303KET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-A01	ACTIVE		192-303KET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-A01-P	ACTIVE		192-303KET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-A02	ACTIVE		192-303KET-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-A02-P	ACTIVE		192-303KET-A02-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-AB0	ACTIVE		192-303KET-AB0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-AS0	ACTIVE		192-303KET-AS0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KET-D00	ACTIVE		192-303KET-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEV-A00	ACTIVE		192-303KEV-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEV-D00	ACTIVE		192-303KEV-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEV-D01	ACTIVE		192-303KEV-D01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEV-D01-P	ACTIVE		192-303KEV-D01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEW-A00	ACTIVE		192-303KEW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEW-A01	ACTIVE		192-303KEW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KEW-A01-P	ACTIVE		192-303KEW-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KSR-A01	ACTIVE		192-303KSR-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303KSR-A01-P	ACTIVE		192-303KSR-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-A00	ACTIVE		192-303QET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-A01	ACTIVE		192-303QET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-A01-P	ACTIVE		192-303QET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-D00	ACTIVE		192-303QET-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-D01	ACTIVE		192-303QET-D01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QET-D01-P	ACTIVE		192-303QET-D01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QEW-A00	ACTIVE		192-303QEW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-303QEW-A01	ACTIVE		192-303QEW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-351CCC-G00	ACTIVE		192-351CCC-G00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
192-402LET-D00	ACTIVE		192-402LET-D00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia



192-402LET-D01	ACTIVE		192-402LET-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-403QET-A00	ACTIVE		192-403QET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-403QET-A01	ACTIVE		192-403QET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-403QET-A01-P	ACTIVE		192-403QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DET-A00	ACTIVE		192-501DET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DET-A01	ACTIVE		192-501DET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DET-A01-P	ACTIVE		192-501DET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DET-AB0	ACTIVE		192-501DET-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-A00	ACTIVE		192-501DEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-A01	ACTIVE		192-501DEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-A01-P	ACTIVE		192-501DEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-A02	ACTIVE		192-501DEV-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-A02-P	ACTIVE		192-501DEV-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-501DEV-AB0-SLU	ACTIVE		192-501DEV-AB0-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LCT-A00-SLU	ACTIVE		192-502LCT-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LCT-AB0-SLU	ACTIVE		192-502LCT-AB0-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LET-A00	ACTIVE		192-502LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LET-A01	ACTIVE		192-502LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LET-A01-P	ACTIVE		192-502LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LET-AS0	ACTIVE		192-502LET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LET-D00	ACTIVE		192-502LET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LEV-A00	ACTIVE		192-502LEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LEV-A01	ACTIVE		192-502LEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LEV-A01-P	ACTIVE		192-502LEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LEW-A00	ACTIVE		192-502LEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LFT-A00	ACTIVE		192-502LFT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LFT-A01	ACTIVE		192-502LFT-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LFT-A01-P	ACTIVE		192-502LFT-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LFT-A03	ACTIVE		192-502LFT-A03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LFT-AB0	ACTIVE		192-502LFT-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-502LGS-CS0	ACTIVE		192-502LGS-CS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QCT-A00	ACTIVE		192-503QCT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QET-A00-SLU	ACTIVE		192-503QET-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QET-A01	ACTIVE		192-503QET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QET-A01-P	ACTIVE		192-503QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QET-AS0	ACTIVE		192-503QET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QET-G00	ACTIVE		192-503QET-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QEW-A00	ACTIVE		192-503QEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QEW-A01	ACTIVE		192-503QEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QEW-A01-P	ACTIVE		192-503QEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QEW-AB0	ACTIVE		192-503QEW-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-503QUP-A00	ACTIVE		192-503QUP-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
192-852LES-G00	ACTIVE		192-852LES-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-102DET-AS0	ACTIVE		194-102DET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LBD-A00	ACTIVE		194-103LBD-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-A00	ACTIVE		194-103LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-A00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-A01	ACTIVE		194-103LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-A01-P	ACTIVE		194-103LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

194-103LET-AS0	ACTIVE		194-103LET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-AS1	ACTIVE		194-103LET-AS1	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-D00	ACTIVE		194-103LET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-G00	ACTIVE		194-103LET-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-G02	ACTIVE		194-103LET-G02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-GAO	ACTIVE		194-103LET-GAO	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-GB0	ACTIVE		194-103LET-GB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-GC0	ACTIVE		194-103LET-GC0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-P00	ACTIVE		194-103LET-P00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-P01	ACTIVE		194-103LET-P01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LET-PA0	ACTIVE		194-103LET-PA0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LEV-A00	ACTIVE		194-103LEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LEV-AS0	ACTIVE		194-103LEV-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LEW-F00	ACTIVE		194-103LEW-F00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LHT-A00	ACTIVE		194-103LHT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LHT-A01	ACTIVE		194-103LHT-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LHT-A01-P	ACTIVE		194-103LHT-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-103LHT-AB0	ACTIVE		194-103LHT-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBR-G00	ACTIVE		194-104QBR-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBR-G01	ACTIVE		194-104QBR-G01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBR-G01-P	ACTIVE		194-104QBR-G01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-A00	ACTIVE		194-104QBV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-AB0	ACTIVE		194-104QBV-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-AC0	ACTIVE		194-104QBV-AC0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-B00	ACTIVE		194-104QBV-B00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-D00	ACTIVE		194-104QBV-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-D02	ACTIVE		194-104QBV-D02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBV-DB0	ACTIVE		194-104QBV-DB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-A00	ACTIVE		194-104QBW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-A04	ACTIVE		194-104QBW-A04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-A04-P	ACTIVE		194-104QBW-A04-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-A05	ACTIVE		194-104QBW-A05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-A05-P	ACTIVE		194-104QBW-A05-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-AA0	ACTIVE		194-104QBW-AA0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QBW-AB0	ACTIVE		194-104QBW-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-A00	ACTIVE		194-104QET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-A01	ACTIVE		194-104QET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-A01-P	ACTIVE		194-104QET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-AS0	ACTIVE		194-104QET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-D00	ACTIVE		194-104QET-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QET-E00	ACTIVE		194-104QET-E00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QSS-G00	ACTIVE		194-104QSS-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-104QZT-A00	ACTIVE		194-104QZT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-A00	ACTIVE		194-222LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-A03	ACTIVE		194-222LET-A03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-AB0	ACTIVE		194-222LET-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-D02	ACTIVE		194-222LET-D02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-D02-P	ACTIVE		194-222LET-D02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-D03	ACTIVE		194-222LET-D03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

194-222LET-DB0	ACTIVE		194-222LET-DB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LET-DC0	ACTIVE		194-222LET-DC0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LNS-C00	ACTIVE		194-222LNS-C00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LNS-C01	ACTIVE		194-222LNS-C01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-222LNS-C01-P	ACTIVE		194-222LNS-C01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-272LBC-B00	ACTIVE		194-272LBC-B00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LET-A00	ACTIVE		194-302LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LET-AS0	ACTIVE		194-302LET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LET-P00	ACTIVE		194-302LET-P00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LEV-AS0	ACTIVE		194-302LEV-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LEW-A00	ACTIVE		194-302LEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LEW-A02	ACTIVE		194-302LEW-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-302LEW-A02-P	ACTIVE		194-302LEW-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KET-A00	ACTIVE		194-303KET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KET-A03	ACTIVE		194-303KET-A03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KET-A03-P	ACTIVE		194-303KET-A03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KET-AS0	ACTIVE		194-303KET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-A00	ACTIVE		194-303KEV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-A01	ACTIVE		194-303KEV-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-A01-P	ACTIVE		194-303KEV-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-G00	ACTIVE		194-303KEV-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-G03	ACTIVE		194-303KEV-G03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEV-G03-P	ACTIVE		194-303KEV-G03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEW-A00	ACTIVE		194-303KEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEW-A01	ACTIVE		194-303KEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KEW-A01-P	ACTIVE		194-303KEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KUC-A00	ACTIVE		194-303KUC-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-303KUC-A01	ACTIVE		194-303KUC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-501DET-A00	ACTIVE		194-501DET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-501DEW-A00	ACTIVE		194-501DEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-501DEW-A01	ACTIVE		194-501DEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-501DEW-A01-P	ACTIVE		194-501DEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LET-A00	ACTIVE		194-502LET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LET-AS0	ACTIVE		194-502LET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LET-G00	ACTIVE		194-502LET-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LET-G01	ACTIVE		194-502LET-G01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LET-G01-P	ACTIVE		194-502LET-G01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LEV-AS0	ACTIVE		194-502LEV-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LEW-A00	ACTIVE		194-502LEW-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LEW-A01	ACTIVE		194-502LEW-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-502LEW-A01-P	ACTIVE		194-502LEW-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-A00	ACTIVE		194-503QBR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-A04	ACTIVE		194-503QBR-A04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-A04-P	ACTIVE		194-503QBR-A04-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-A05	ACTIVE		194-503QBR-A05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-A05-P	ACTIVE		194-503QBR-A05-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QBR-AB0	ACTIVE		194-503QBR-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QET-A00	ACTIVE		194-503QET-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QET-A02	ACTIVE		194-503QET-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

194-503QET-AB0	ACTIVE		194-503QET-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QET-AS0	ACTIVE		194-503QET-AS0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QET-H01	ACTIVE		194-503QET-H01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QSR-A00	ACTIVE		194-503QSR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QSR-A02	ACTIVE		194-503QSR-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QSR-A04	ACTIVE		194-503QSR-A04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QST-A00	ACTIVE		194-503QST-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
194-503QSV-A00	ACTIVE		194-503QSV-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-101CAG-A00	ACTIVE		195-101CAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-101CAG-A01	ACTIVE		195-101CAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-101CAG-A01-P	ACTIVE		195-101CAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-103LAG-A00	ACTIVE		195-103LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-103LAG-AB0	ACTIVE		195-103LAG-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-104QAG-A00-SLU	ACTIVE		195-104QAG-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-104QAG-A01	ACTIVE		195-104QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-104QAG-A01-P	ACTIVE		195-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-150AAK-A00	ACTIVE		195-150AAK-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-153LAG-A00	ACTIVE		195-153LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-202FAG-A00	ACTIVE		195-202FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-202LAG-A00	ACTIVE		195-202LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-203LAG-A01	ACTIVE		195-203LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-302LAG-A00	ACTIVE		195-302LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-303KAG-A00	ACTIVE		195-303KAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-501DAG-A00	ACTIVE		195-501DAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
195-501DAG-A01	ACTIVE		195-501DAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-101CAG-001-P	ACTIVE		196-101CAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-102DAG-001-P	ACTIVE		196-102DAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-103LAD-002-P	ACTIVE		196-103LAD-002-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-104QAG-001-P	ACTIVE		196-104QAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-302LAD-002-P	ACTIVE		196-302LAD-002-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-501DAG-001-P	ACTIVE		196-501DAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-502LAG-001-P	ACTIVE		196-502LAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
196-503QAG-001-P	ACTIVE		196-503QAG-001-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-101CAG-A00	ACTIVE		197-101CAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-101CAG-A01	ACTIVE		197-101CAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-101CAG-A01-P	ACTIVE		197-101CAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-101CAH-A00	ACTIVE		197-101CAH-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-102DAG-A00	ACTIVE		197-102DAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-102DAG-A01	ACTIVE		197-102DAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-102DAG-A01-P	ACTIVE		197-102DAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAC-A00	ACTIVE		197-103LAC-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAC-A01	ACTIVE		197-103LAC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAF-A00	ACTIVE		197-103LAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAG-A00	ACTIVE		197-103LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAG-A01	ACTIVE		197-103LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-103LAG-A01-P	ACTIVE		197-103LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-104QAF-A00	ACTIVE		197-104QAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-104QAG-A00	ACTIVE		197-104QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-104QAG-A01	ACTIVE		197-104QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

197-104QAG-A01-P	ACTIVE		197-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202FAD-A00	ACTIVE		197-202FAD-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202FAG-A00	ACTIVE		197-202FAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202FAG-A01	ACTIVE		197-202FAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202FAG-A01-P	ACTIVE		197-202FAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202LAG-A00	ACTIVE		197-202LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-202LAG-A01	ACTIVE		197-202LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-203LAG-A00	ACTIVE		197-203LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-203LAG-A01	ACTIVE		197-203LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-203LAG-A01-P	ACTIVE		197-203LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-204QAG-A00	ACTIVE		197-204QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-204QAG-A01	ACTIVE		197-204QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-204QAG-A01-P	ACTIVE		197-204QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-301CAG-A00	ACTIVE		197-301CAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-301CAG-A01	ACTIVE		197-301CAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-302LAG-A00	ACTIVE		197-302LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-302LAG-A01	ACTIVE		197-302LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-302LAG-A01-P	ACTIVE		197-302LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-303KAG-A00	ACTIVE		197-303KAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-501DAG-A00	ACTIVE		197-501DAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-502LAF-A00	ACTIVE		197-502LAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-502LAG-A00	ACTIVE		197-502LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-502LAG-A01	ACTIVE		197-502LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-502LAG-A01-P	ACTIVE		197-502LAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-503QAG-A00	ACTIVE		197-503QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-503QAG-A01	ACTIVE		197-503QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-503QAG-A01-P	ACTIVE		197-503QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-801FAC-A00	ACTIVE		197-801FAC-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-801FAC-A01	ACTIVE		197-801FAC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
197-801FAC-A01-P	ACTIVE		197-801FAC-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
198-103LAG-D01	ACTIVE		198-103LAG-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
198-303KAC-A01	ACTIVE		198-303KAC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-101CAG-A01	ACTIVE		199-101CAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-101CAG-A01-P	ACTIVE		199-101CAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-101CAG-AB0	ACTIVE		199-101CAG-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103GAD-F00	ACTIVE		199-103GAD-F00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103GAD-F01	ACTIVE		199-103GAD-F01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103GAD-F01-P	ACTIVE		199-103GAD-F01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAC-A00	ACTIVE		199-103LAC-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAC-A02	ACTIVE		199-103LAC-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAC-H00	ACTIVE		199-103LAC-H00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAC-H01	ACTIVE		199-103LAC-H01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAC-H01-P	ACTIVE		199-103LAC-H01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAD-A00	ACTIVE		199-103LAD-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAD-A02	ACTIVE		199-103LAD-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAD-AB0	ACTIVE		199-103LAD-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAE-A00	ACTIVE		199-103LAE-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAF-A00	ACTIVE		199-103LAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

199-103LAF-C00	ACTIVE		199-103LAF-C00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAG-A00	ACTIVE		199-103LAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAG-C00	ACTIVE		199-103LAG-C00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAG-D00	ACTIVE		199-103LAG-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAG-D01	ACTIVE		199-103LAG-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-103LAG-D01-P	ACTIVE		199-103LAG-D01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAD-A00	ACTIVE		199-104QAD-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAD-A01	ACTIVE		199-104QAD-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAD-A01-P	ACTIVE		199-104QAD-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAF-AB2	ACTIVE		199-104QAF-AB2	HW	HWB	95	THERMISTORS		1 SL	St. Lucia
199-104QAF-AB4	ACTIVE		199-104QAF-AB4	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAF-D00	ACTIVE		199-104QAF-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAG-A00	ACTIVE		199-104QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAG-A01	ACTIVE		199-104QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-104QAG-A01-P	ACTIVE		199-104QAG-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-202FAD-A00	ACTIVE		199-202FAD-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-202FAD-A02	ACTIVE		199-202FAD-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-202FAD-A02-P	ACTIVE		199-202FAD-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-202FAD-AD0	ACTIVE		199-202FAD-AD0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-203LAF-D00	ACTIVE		199-203LAF-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-302LAF-A00	ACTIVE		199-302LAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-303KAF-A00	ACTIVE		199-303KAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-303KAF-A02	ACTIVE		199-303KAF-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-303KAF-A02-P	ACTIVE		199-303KAF-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-313KAF-A00	ACTIVE		199-313KAF-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-313KAF-A03	ACTIVE		199-313KAF-A03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-313KAF-A03-P	ACTIVE		199-313KAF-A03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-413KAE-D00	ACTIVE		199-413KAE-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-503QAG-A00	ACTIVE		199-503QAG-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-503QBT-E00	ACTIVE		199-503QBT-E00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
199-503QBT-EB0	ACTIVE		199-503QBT-EB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
220R-05	ACTIVE		220R-05	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
23314201-SLU	ACTIVE		23314201-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
23419201	ACTIVE		23419201	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
23421001	ACTIVE		23421001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
23421101	ACTIVE		23421101	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50002469-001	ACTIVE		50002469-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50002474-001	ACTIVE		50002474-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50003386-001	ACTIVE		50003386-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50003388-001	ACTIVE		50003388-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50003390-001	ACTIVE		50003390-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50004077-001	ACTIVE		50004077-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50005109-001-SLU	ACTIVE		50005109-001-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50006927-001	ACTIVE		50006927-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50006985-001	ACTIVE		50006985-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50007076-001	ACTIVE		50007076-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50007405-001	ACTIVE		50007405-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50007406-001	ACTIVE		50007406-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50007407-001	ACTIVE		50007407-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

50007768-001	ACTIVE		50007768-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50008144-001	ACTIVE		50008144-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50008941-001	ACTIVE		50008941-001	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
50009723-001	ACTIVE		50009723-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50009906-001	ACTIVE		50009906-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010041-001	ACTIVE		50010041-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010042-001	ACTIVE		50010042-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010345-001-SLU	ACTIVE		50010345-001-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010349-001-X	ACTIVE		50010349-001-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010368-001	ACTIVE		50010368-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010371-001	ACTIVE		50010371-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50010372	ACTIVE		50010372	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
50013363-001	ACTIVE		50013363-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50013363-002	ACTIVE		50013363-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50013365-001	ACTIVE		50013365-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50016727-001	ACTIVE		50016727-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50016747-001	ACTIVE		50016747-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50018038-001	ACTIVE		50018038-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50018043-001	ACTIVE		50018043-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50018044-001	ACTIVE		50018044-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50018112-001	ACTIVE		50018112-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019053-001	ACTIVE		50019053-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019197	ACTIVE		50019197	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019759-001	ACTIVE		50019759-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019759-002	ACTIVE		50019759-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019805-001	ACTIVE		50019805-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019806-001	ACTIVE		50019806-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50019807-001	ACTIVE		50019807-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50020931	ACTIVE		50020931	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50023799-001	ACTIVE		50023799-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50023800-001	ACTIVE		50023800-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50023802-001	ACTIVE		50023802-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50023803-001	ACTIVE		50023803-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50023804-001	ACTIVE		50023804-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50024758-001	ACTIVE		50024758-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50024759-001	ACTIVE		50024759-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025381	ACTIVE		50025381	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025459-001	ACTIVE		50025459-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025930	ACTIVE		50025930	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025930-001	ACTIVE		50025930-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025932	ACTIVE		50025932	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025932-001	ACTIVE		50025932-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025933-001	ACTIVE		50025933-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025934	ACTIVE		50025934	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025934-001	ACTIVE		50025934-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025935	ACTIVE		50025935	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025935-001	ACTIVE		50025935-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025936	ACTIVE		50025936	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025936-001	ACTIVE		50025936-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

50025937	ACTIVE		50025937	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50025937-001	ACTIVE		50025937-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50028296-001	ACTIVE		50028296-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50029827-001	ACTIVE		50029827-001	NG	NGA	25	SEALED OI		0 SL	St. Lucia
50029828-001	ACTIVE		50029828-001	NG	NGA	25	SEALED OI		0 SL	St. Lucia
50031008-001	ACTIVE		50031008-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50032127-001	ACTIVE		50032127-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50032129-001	ACTIVE		50032129-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
500-32AA31-112	ACTIVE		500-32AA31-112	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
500-32AA31-112-SLU	ACTIVE		GE 41A296328BM12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50034500-001	ACTIVE		50034500-001	HW	HWP	99	FLEX HEATERS		0 SL	St. Lucia
50034513-001	ACTIVE		50034513-001	HW	HWP	99	FLEX HEATERS		0 SL	St. Lucia
50034514-001	ACTIVE		50034514-001	HW	HWP	99	FLEX HEATERS		0 SL	St. Lucia
50034560-001-X	ACTIVE		50034560-001-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50034560-001X	ACTIVE		50034560-001X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50034561-001X	ACTIVE		50034561-001X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50034627-001X	ACTIVE		50034627-001X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50035059-001	ACTIVE		50035059-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50036491-001	ACTIVE		50036491-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50044747-001	ACTIVE		50044747-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
50049820	ACTIVE		50049820	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50049838	ACTIVE		50049838	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50050198	ACTIVE		50050198	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
500-52AA02-101	ACTIVE		500-52AA02-101	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
500-52AA04-101	ACTIVE		500-52AA04-101	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
500-52AA05-101	ACTIVE		500-52AA05-101	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50056677-001	ACTIVE		50056677-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50056678-001	ACTIVE		50056678-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50059056-001	ACTIVE		50059056-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
500-59FP05-101	ACTIVE		500-59FP05-101	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
50060289-X	ACTIVE		50060289-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
511-49BJ01-102	ACTIVE		511-49BJ01-102	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
512-33AB02-104	ACTIVE		512-33AB02-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
512-41AB04-103	ACTIVE		512-41AB04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
517-59CL01-202	ACTIVE		517-59CL01-202	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
518-41AU01-202	ACTIVE		518-41AU01-202	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
519-39AW03-295	ACTIVE		519-39AW03-295	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
519-39AW06-295	ACTIVE		519-39AW06-295	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
519-39AW08-245	ACTIVE		519-39AW08-245	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
519-39AW09-245	ACTIVE		519-39AW09-245	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
519-39AW10-295	ACTIVE		519-39AW10-295	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
519-39CH01-295	ACTIVE		519-39CH01-295	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
519-39CH02-295	ACTIVE		519-39CH02-295	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AD01-454	ACTIVE		520-41AD01-454	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AD06-454	ACTIVE		520-41AD06-454	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AD08-153	ACTIVE		520-41AD08-153	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AD09-454	ACTIVE		520-41AD09-454	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AH02-503	ACTIVE		520-41AH02-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
520-41AH05-105	ACTIVE		520-41AH05-105	HW	HWF	95	THERMISTORS		0 SL	St. Lucia



520-42AA02-104	ACTIVE		520-42AA02-104	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
520-49AB02-303	ACTIVE		520-49AB02-303	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
521-43AA05-202	ACTIVE		521-43AA05-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
521-43AA06-202	ACTIVE		521-43AA06-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
521-43BC01-202	ACTIVE		521-43BC01-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
521-59BP01-103	ACTIVE		521-59BP01-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
526-33AB20-153	ACTIVE		526-33AB20-153	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
526-33AB45-202	ACTIVE		526-33AB45-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
526-33AB47-202	ACTIVE		526-33AB47-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
526-59AD17-202	ACTIVE		526-59AD17-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
526-59AR04-104	ACTIVE		526-59AR04-104	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
528-59AR12-104	ACTIVE		528-59AR12-104	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
530-39CN02-153	ACTIVE		530-39CN02-153	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AA20-104	ACTIVE		535-32AA20-104	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32AA23-103	ACTIVE		535-32AA23-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AA30-503	ACTIVE		535-32AA30-503	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32AA33-103	ACTIVE		535-32AA33-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32AA35-103	ACTIVE		535-32AA35-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32AA36-103	ACTIVE		535-32AA36-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32AB32-202	ACTIVE		535-32AB32-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB33-202	ACTIVE		535-32AB33-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB34-202	ACTIVE		535-32AB34-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB35-202	ACTIVE		535-32AB35-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB36-202	ACTIVE		535-32AB36-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB37-202	ACTIVE		535-32AB37-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB38-202	ACTIVE		535-32AB38-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB39-202	ACTIVE		535-32AB39-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AB40-202	ACTIVE		535-32AB40-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32AZ01-505	ACTIVE		535-32AZ01-505	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BG02-103	ACTIVE		535-32BG02-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BG04-103	ACTIVE		535-32BG04-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BX00-103	ACTIVE		535-32BX00-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BX00-M	ACTIVE		535-32BX00-M	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32BX01-103	ACTIVE		535-32BX01-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BX01-M	ACTIVE		535-32BX01-M	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32BX02-103	ACTIVE		535-32BX02-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32BX02-M	ACTIVE		535-32BX02-M	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32BX03-103	ACTIVE		535-32BX03-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BX04-103	ACTIVE		535-32BX04-103	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-32BX04-M	ACTIVE		535-32BX04-M	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-32BX20-KIT	ACTIVE		535-32BX20-KIT	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-33AA41-202	ACTIVE		535-33AA41-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-33AA42-202	ACTIVE		535-33AA42-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-33AA44-202	ACTIVE		535-33AA44-202	HW	HWF	95	THERMISTORS	1	SL	St. Lucia
535-33AA45-202	ACTIVE		535-33AA45-202	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-33AF01-823	ACTIVE		535-33AF01-823	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-34AB03-103	ACTIVE		535-34AB03-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-34AB04-103	ACTIVE		535-34AB04-103	HW	HWF	95	THERMISTORS	0	SL	St. Lucia
535-34AB08-203	ACTIVE		535-34AB08-203	HW	HWF	95	THERMISTORS	0	SL	St. Lucia

535-34AE05-104	ACTIVE		535-34AE05-104	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-34AE07-103	ACTIVE		535-34AE07-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-34AE08-303	ACTIVE		535-34AE08-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-34AE09-222	ACTIVE		535-34AE09-222	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-34AE12-104	ACTIVE		535-34AE12-104	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-34AE13-103	ACTIVE		535-34AE13-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-39BU02-105	ACTIVE		535-39BU02-105	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-41AA12-103	ACTIVE		535-41AA12-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-42AR08-503	ACTIVE		535-42AR08-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-42AR10-403	ACTIVE		535-42AR10-403	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-42AR16-253	ACTIVE		535-42AR16-253	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-42BA02-303	ACTIVE		535-42BA02-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53AB03-503	ACTIVE		535-53AB03-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53AB04-503	ACTIVE		535-53AB04-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DA02-303	ACTIVE		535-53DA02-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DF01-104	ACTIVE		535-53DF01-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DF03-104	ACTIVE		535-53DF03-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DG06-103	ACTIVE		535-53DG06-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DG09-103	ACTIVE		535-53DG09-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-53DH01-103	ACTIVE		535-53DH01-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-59AD14-104	ACTIVE		535-59AD14-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59AD18-104	ACTIVE		535-59AD18-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59AD19-104	ACTIVE		535-59AD19-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59BF05-503	ACTIVE		535-59BF05-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59BF05-M	ACTIVE		535-59BF05-M	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59DV26-303	ACTIVE		535-59DV26-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59DV28-103	ACTIVE		535-59DV28-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59DV35-222	ACTIVE		535-59DV35-222	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-59DV37-303	ACTIVE		535-59DV37-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59DV41-303	ACTIVE		535-59DV41-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59EC01-303	ACTIVE		535-59EC01-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59ED04-103	ACTIVE		535-59ED04-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-59ED05-103	ACTIVE		535-59ED05-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
535-59EE01-103	ACTIVE		535-59EE01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
535-59FQ01-102	ACTIVE		535-59FQ01-102	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
539-43AE02-103	ACTIVE		539-43AE02-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
540-49AG01-302	ACTIVE		540-49AG01-302	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-31AB10-103	ACTIVE		590-31AB10-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-31AC02-202	ACTIVE		590-31AC02-202	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AA25-103	ACTIVE		590-32AA25-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AB29-403	ACTIVE		590-32AB29-403	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AB30-403	ACTIVE		590-32AB30-403	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AB31-103	ACTIVE		590-32AB31-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AC35-103	ACTIVE		THERMISTOR PROBE ASSEMBLY	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AC36-103	ACTIVE		THERMISTOR PROBE ASSEMBLY	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AD01-103	ACTIVE		590-32AD01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AD05-103	ACTIVE		590-32AD05-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AD11-303	ACTIVE		590-32AD11-303	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-32AD14-502	ACTIVE		590-32AD14-502	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

590-32AD16-103	ACTIVE		590-32AD16-103	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-32BP01-203	ACTIVE		590-32BP01-203	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA25-503	ACTIVE		590-33AA25-503	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA26-104	ACTIVE		590-33AA26-104	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA33-503	ACTIVE		590-33AA33-503	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA34-503	ACTIVE		590-33AA34-503	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA38-103	ACTIVE		590-33AA38-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33AA43-103	ACTIVE		590-33AA43-103	HW	HWG	95	THERMISTORS		0	SL	St. Lucia
590-33AB06-503	ACTIVE		590-33AB06-503	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33BN01-103	ACTIVE		590-33BN01-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33BP02-103	ACTIVE		590-33BP02-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33BQ01-103	ACTIVE		590-33BQ01-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33BQ02-103	ACTIVE		590-33BQ02-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-33BQ03-103	ACTIVE		590-33BQ03-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA13-103	ACTIVE		590-39AA13-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA17-103	ACTIVE		590-39AA17-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA18-222	ACTIVE		590-39AA18-222	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA20-103	ACTIVE		590-39AA20-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA26-222	ACTIVE		590-39AA26-222	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA33-103	ACTIVE		590-39AA33-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39AA35-103-SLU	ACTIVE		590-39AA35-103-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39BV02-222	ACTIVE		590-39BV02-222	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39CG01-103	ACTIVE		590-39CG01-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39CG02-103	ACTIVE		590-39CG02-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39CG03-103	ACTIVE		590-39CG03-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39CM11-103	ACTIVE		590-39CM11-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-39CQ01-602	ACTIVE		590-39CQ01-602	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-42AM01-502	ACTIVE		590-42AM01-502	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-51AF05-103	ACTIVE		590-51AF05-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-51AF09-103	ACTIVE		590-51AF09-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AA09-103	ACTIVE		590-53AA09-103	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AD06-104	ACTIVE		590-53AD06-104	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AD08-222	ACTIVE		590-53AD08-222	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AD10-103	ACTIVE		590-53AD10-103	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AD30-501	ACTIVE		590-53AD30-501	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AD33-104	ACTIVE		590-53AD33-104	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AD33-104-SLU	ACTIVE		THERMISTOR PROBE ASSEMBLY	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AM03-403	ACTIVE		590-53AM03-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM05-403	ACTIVE		590-53AM05-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM06-403	ACTIVE		590-53AM06-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM07-102	ACTIVE		590-53AM07-102	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53AM08-403	ACTIVE		590-53AM08-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM09-403	ACTIVE		590-53AM09-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM10-403	ACTIVE		590-53AM10-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AM11-403	ACTIVE		590-53AM11-403	HW	HWF	95	THERMISTORS		1	SL	St. Lucia
590-53AZ06-302	ACTIVE		590-53AZ06-302	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53BE04-222	ACTIVE		590-53BE04-222	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53BJ01-502	ACTIVE		590-53BJ01-502	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
590-53CU01-103	ACTIVE		590-53CU01-103	HW	HWF	95	THERMISTORS		1	SL	St. Lucia

590-53CU02-103	ACTIVE		590-53CU02-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-53CU04-103	ACTIVE		590-53CU04-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-53CU05-153	ACTIVE		590-53CU05-153	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-53CW01-103	ACTIVE		590-53CW01-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-53DF02-104	ACTIVE		590-53DF02-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AD02-104	ACTIVE		590-59AD02-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AD07-302	ACTIVE		590-59AD07-302	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AD13-302	ACTIVE		590-59AD13-302	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AR18-103	ACTIVE		590-59AR18-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AR19-103	ACTIVE		590-59AR19-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59AR20-103	ACTIVE		590-59AR20-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59BC12-103	ACTIVE		590-59BC12-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC15-103	ACTIVE		590-59BC15-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC16-103	ACTIVE		590-59BC16-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC16-KIT	ACTIVE		590-59BC16-KIT	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC17-103	ACTIVE		590-59BC17-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC18-103	ACTIVE		590-59BC18-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59BC20-103	ACTIVE		590-59BC20-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59BC21-103	ACTIVE		590-59BC21-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59BC22-103	ACTIVE		590-59BC22-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59CG05-103	ACTIVE		590-59CG05-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59CG06-103	ACTIVE		590-59CG06-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59CG08-103	ACTIVE		590-59CG08-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59CN01-103	ACTIVE		590-59CN01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59CN02-103	ACTIVE		590-59CN02-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59DQ03-302	ACTIVE		590-59DQ03-302	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EJ00-103	ACTIVE		590-59EJ00-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EJ01-103	ACTIVE		590-59EJ01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EJ01-KIT	ACTIVE		590-59EJ01-KIT	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EJ01-M	ACTIVE		590-59EJ01-M	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EJ04-103	ACTIVE		590-59EJ04-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EJ04-M	ACTIVE		590-59EJ04-M	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EL03-103	ACTIVE		590-59EL03-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EL06-103	ACTIVE		590-59EL06-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EL07-103	ACTIVE		590-59EL07-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
590-59EL08-103	ACTIVE		590-59EL08-103	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EL20-KIT	ACTIVE		590-59EL20-KIT	HW	HWF	95	THERMISTORS		1 SL	St. Lucia
590-59EU01-502	ACTIVE		590-59EU01-502	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39AK14-103	ACTIVE		592-39AK14-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39CD01-103	ACTIVE		592-39CD01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39CD02-103	ACTIVE		592-39CD02-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39CD03-103	ACTIVE		592-39CD03-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39CD04-103	ACTIVE		592-39CD04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-39CM15-103	ACTIVE		592-39CM15-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-49AD01-102	ACTIVE		592-49AD01-102	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
592-59LS01-103	ACTIVE		592-59LS01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
594-59AR15-103	ACTIVE		594-59AR15-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
595-32AB13-104	ACTIVE		595-32AB13-104	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
595-32AE04-103	ACTIVE		595-32AE04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

595-32AE04-103-SLU	ACTIVE		THERMISTOR PROBE ASSEMBLY	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
595-32AE05-103	ACTIVE		595-32AE05-103	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
595-32AE06-103	ACTIVE		595-32AE06-103	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
597-53DD01-104	ACTIVE		597-53DD01-104	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
599-32BM01-103	ACTIVE		599-32BM01-103	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
622148-SLU	ACTIVE		622148-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
701-101BAB-B00	ACTIVE		701-101BAB-B00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018E1S-A00	ACTIVE		900-018E1S-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018L1W-A00	ACTIVE		900-018L1W-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018L1W-A09	ACTIVE		900-018L1W-A09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018P1V-A00	ACTIVE		900-018P1V-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018P1V-A09	ACTIVE		900-018P1V-A09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018P1W-N00	ACTIVE		900-018P1W-N00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018P1W-N02	ACTIVE		900-018P1W-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018T1E-A00	ACTIVE		900-018T1E-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018T1E-N02	ACTIVE		900-018T1E-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018T1E-N09	ACTIVE		900-018T1E-N09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-018T1E-N12	ACTIVE		900-018T1E-N12	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020E1B-A00	ACTIVE		900-020E1B-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1Q-N00-SLU	ACTIVE		900-020P1Q-N00-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1Q-N02	ACTIVE		900-020P1Q-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1V-A39	ACTIVE		900-020P1V-A39	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-A00	ACTIVE		900-020P1W-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-A02-SLU	ACTIVE		900-020P1W-A02-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-A04	ACTIVE		900-020P1W-A04	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-A09	ACTIVE		900-020P1W-A09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-A99	ACTIVE		900-020P1W-A99	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-B00-SLU	ACTIVE		900-020P1W-B00-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-N00-SLU	ACTIVE		900-020P1W-N00-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-N02-SLU	ACTIVE		900-020P1W-N02-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P1W-N92-SLU	ACTIVE		900-020P1W-N92-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P2A-A08	ACTIVE		900-020P2A-A08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020P2A-P08	ACTIVE		900-020P2A-P08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020T1E-A00	ACTIVE		900-020T1E-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020T1E-A14	ACTIVE		900-020T1E-A14	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020T1E-N09	ACTIVE		900-020T1E-N09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-020T1E-N10	ACTIVE		900-020T1E-N10	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022F2A-N00	ACTIVE		900-022F2A-N00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022G1V-A99	ACTIVE		900-022G1V-A99	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P1A-N00	ACTIVE		900-022P1A-N00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P1V-B00	ACTIVE		900-022P1V-B00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P1W-A00	ACTIVE		900-022P1W-A00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P1W-N01	ACTIVE		900-022P1W-N01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P1W-N06	ACTIVE		900-022P1W-N06	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P2A-A08	ACTIVE		900-022P2A-A08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P2A-N01	ACTIVE		900-022P2A-N01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P2U-A08	ACTIVE		900-022P2U-A08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P2V-N08	ACTIVE		900-022P2V-N08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
900-022P2Z-N00	ACTIVE		900-022P2Z-N00	HW	HWF	95	THERMISTORS	0 SL	St. Lucia

900-022P2Z-P08	ACTIVE		900-022P2Z-P08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022P2Z-Q03	ACTIVE		900-022P2Z-Q03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022P2Z-Q05	ACTIVE		900-022P2Z-Q05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022P7A-U00	ACTIVE		900-022P7A-U00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022P7Z-N03	ACTIVE		900-022P7Z-N03	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
900-022P7Z-P05	ACTIVE		900-022P7Z-P05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022Q1Z-A09	ACTIVE		900-022Q1Z-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022S0A-A00	ACTIVE		900-022S0A-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022S0A-A01	ACTIVE		900-022S0A-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022S0A-C01	ACTIVE		900-022S0A-C01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-C00	ACTIVE		900-022T1E-C00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-N03	ACTIVE		900-022T1E-N03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-N22	ACTIVE		900-022T1E-N22	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-P00	ACTIVE		900-022T1E-P00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-P01	ACTIVE		900-022T1E-P01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-P02-SLU	ACTIVE		900-022T1E-P02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T1E-P06	ACTIVE		900-022T1E-P06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T2E-A00	ACTIVE		900-022T2E-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022T2E-U99	ACTIVE		900-022T2E-U99	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022U1A-ACP	ACTIVE		900-022U1A-ACP	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-022U1A-ANU	ACTIVE		900-022U1A-ANU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022U1A-BCT	ACTIVE		900-022U1A-BCT	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022Y1E-P01	ACTIVE		900-022Y1E-P01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-022Y1E-P02	ACTIVE		900-022Y1E-P02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024G1A-A99	ACTIVE		900-024G1A-A99	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024G1V-A99	ACTIVE		900-024G1V-A99	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024G1V-C99	ACTIVE		900-024G1V-C99	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1Q-N02	ACTIVE		900-024P1Q-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1Q-N09	ACTIVE		900-024P1Q-N09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1Q-N10	ACTIVE		900-024P1Q-N10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1Q-N13	ACTIVE		900-024P1Q-N13	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1W-N04	ACTIVE		900-024P1W-N04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P1Z-A00	ACTIVE		900-024P1Z-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P2Q-A00	ACTIVE		900-024P2Q-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P2V-A08	ACTIVE		900-024P2V-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P2V-B08-SLU	ACTIVE		900-024P2V-B08-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-024P2Z-A08	ACTIVE		900-024P2Z-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024P7A-U08	ACTIVE		900-024P7A-U08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1A-A00	ACTIVE		900-024T1A-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-A00-SLU	ACTIVE		900-024T1E-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-A09	ACTIVE		900-024T1E-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-N03	ACTIVE		900-024T1E-N03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-N05	ACTIVE		900-024T1E-N05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-N22	ACTIVE		900-024T1E-N22	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1E-P02-SLU	ACTIVE		900-024T1E-P02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1F-A00	ACTIVE		900-024T1F-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1Q-B00	ACTIVE		900-024T1Q-B00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1T-A00	ACTIVE		900-024T1T-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1T-N10	ACTIVE		900-024T1T-N10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

900-024T1V-N02	ACTIVE		900-024T1V-N02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-024T1V-N09	ACTIVE		900-024T1V-N09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1V-N10	ACTIVE		900-024T1V-N10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1V-P05	ACTIVE		900-024T1V-P05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T1V-P10	ACTIVE		900-024T1V-P10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T2A-A04	ACTIVE		900-024T2A-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024T2A-C00	ACTIVE		900-024T2A-C00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-024U1A-ACP	ACTIVE		900-024U1A-ACP	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-024U1A-ANU-SLU	ACTIVE		900-024U1A-ANU-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-026P1U-A09	ACTIVE		900-026P1U-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1A-A00-SLU	ACTIVE		900-026T1A-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1E-A00-SLU	ACTIVE		900-026T1E-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1E-B00	ACTIVE		900-026T1E-B00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1E-N09	ACTIVE		900-026T1E-N09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1T-N10	ACTIVE		900-026T1T-N10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1V-A09	ACTIVE		900-026T1V-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1W-N02	ACTIVE		900-026T1W-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T1W-N07	ACTIVE		900-026T1W-N07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T7E-U00	ACTIVE		900-026T7E-U00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-026T7E-U09	ACTIVE		900-026T7E-U09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028P1V-B00	ACTIVE		900-028P1V-B00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028P2A-P08-SLU	ACTIVE		900-028P2A-P08-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1A-A00-SLU	ACTIVE		900-028T1A-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1E-A00-SLU	ACTIVE		900-028T1E-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1E-A02-SLU	ACTIVE		900-028T1E-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1E-A09-SLU	ACTIVE		900-028T1E-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1T-N00-SLU	ACTIVE		900-028T1T-N00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T1V-N10	ACTIVE		900-028T1V-N10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028T7E-U09	ACTIVE		900-028T7E-U09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-028U1A-ACP-SLU	ACTIVE		900-028U1A-ACP-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030K1A-A00	ACTIVE		900-030K1A-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030K1A-A02	ACTIVE		900-030K1A-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030K1A-A06	ACTIVE		900-030K1A-A06	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030P1Z-A09-SLU	ACTIVE		900-030P1Z-A09-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030P2A-Q09-SLU	ACTIVE		900-030P2A-Q09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-A02-SLU	ACTIVE		900-030T1A-A02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-A09-SLU	ACTIVE		900-030T1A-A09-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-B09	ACTIVE		900-030T1A-B09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-C02	ACTIVE		900-030T1A-C02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-D02	ACTIVE		900-030T1A-D02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1A-E09	ACTIVE		900-030T1A-E09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1E-A00-SLU	ACTIVE		900-030T1E-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-030T1E-A09	ACTIVE		900-030T1E-A09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1E-E01	ACTIVE		900-030T1E-E01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-030T1T-A00-SLU	ACTIVE		900-030T1T-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-030T1T-P10	ACTIVE		900-030T1T-P10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-030U1A-ACP-SLU	ACTIVE		900-030U1A-ACP-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-032T1A-A00	ACTIVE		900-032T1A-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-032T1Q-A00	ACTIVE		900-032T1Q-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

900-032U1A-ACP-SLU	ACTIVE		900-032U1A-ACP-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-032U1A-BBP-SLU	ACTIVE		900-032U1A-BBP-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-032U1Q-ANU	ACTIVE		900-032U1Q-ANU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-036P7A-V09	ACTIVE		900-036P7A-V09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-038V7A-U99	ACTIVE		900-038V7A-U99	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-200NA5-A01-SLU	ACTIVE		900-200NA5-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-203PL1-A05	ACTIVE		900-203PL1-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-203PL1-A06	ACTIVE		900-203PL1-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-303MU1-A09	ACTIVE		900-303MU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-303PA1-A00	ACTIVE		900-303PA1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-304MU1-A09	ACTIVE		900-304MU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-304YT1-A09	ACTIVE		900-304YT1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-305MA1-A09-SLU	ACTIVE		900-305MA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-306MA1-A09-X	ACTIVE		900-306MA1-A09-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-306PA1-A00	ACTIVE		900-306PA1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-306TA1-B09	ACTIVE		900-306TA1-B09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-307GC3-N07	ACTIVE		900-307GC3-N07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-307YA1-A09-SLU	ACTIVE		900-307YA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-308GA1-A09	ACTIVE		900-308GA1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-308MA1-A09-SLU	ACTIVE		900-308MA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-308MA1-A19	ACTIVE		900-308MA1-A19	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-308TA1-A00	ACTIVE		900-308TA1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-309GC6-A09	ACTIVE		900-309GC6-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-309MA1-A09-SLU	ACTIVE		900-309MA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-309PA1-A00	ACTIVE		900-309PA1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-309TD1-A09	ACTIVE		900-309TD1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-309YH1-A09	ACTIVE		900-309YH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-310MA1-A09-SLU	ACTIVE		900-310MA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-310TA1-A09	ACTIVE		900-310TA1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-310YA1-B09-SLU	ACTIVE		900-310YA1-B09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-311KH1-A09-SLU	ACTIVE		900-311KH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-311LF9-N09	ACTIVE		900-311LF9-N09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-311LH5-A09-SLU	ACTIVE		900-311LH5-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-311LH6-A00-SLU	ACTIVE		900-311LH6-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-311YH1-A09-SLU	ACTIVE		900-311YH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-311YH1-A09-SLU	ACTIVE		900-311YH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-312MA1-A09	ACTIVE		900-312MA1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-312TU1-A09-SLU	ACTIVE		900-312TU1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-312YH1-A09	ACTIVE		900-312YH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-313MA1-A09-SLU	ACTIVE		900-313MA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-313MA1-A19-SLU	ACTIVE		900-313MA1-A19-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-313TA1-A09-SLU	ACTIVE		900-313TA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-313TH1-A09	ACTIVE		900-313TH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-313YA1-A09-SLU	ACTIVE		900-313YA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-314YA1-A09	ACTIVE		900-314YA1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-315GC1-T09	ACTIVE		900-315GC1-T09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-315YH1-A09-SLU	ACTIVE		900-315YH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-316GC1-A09	ACTIVE		900-316GC1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-317KH1-A09-SLU	ACTIVE		900-317KH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia



900-317LH1-A09	ACTIVE		900-317LH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-317LH1-B00	ACTIVE		900-317LH1-B00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-318FH1-A19	ACTIVE		900-318FH1-A19	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-318YH1-A09-SLU	ACTIVE		900-318YH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-322MA1-A01	ACTIVE		900-322MA1-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-322SB1-A09	ACTIVE		900-322SB1-A09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-322TU1-A09	ACTIVE		900-322TU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-323TA6-A09	ACTIVE		900-323TA6-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-324MA1-A01	ACTIVE		900-324MA1-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-324MA1-A11	ACTIVE		900-324MA1-A11	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-324TA1-A09-SLU	ACTIVE		900-324TA1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-324TU1-A09	ACTIVE		900-324TU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-326MN1-A11	ACTIVE		900-326MN1-A11	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-326TU1-A09-SLU	ACTIVE		900-326TU1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-326TU5-A09	ACTIVE		900-326TU5-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-326ZU1-A09	ACTIVE		900-326ZU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-328MA1-A01-SLU	ACTIVE		900-328MA1-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-328ZU1-A09	ACTIVE		900-328ZU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-330TU1-A09	ACTIVE		900-330TU1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-330TU1-A19-SLU	ACTIVE		900-330TU1-A19-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361KH1-A09	ACTIVE		900-361KH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361LH1-A00-SLU	ACTIVE		900-361LH1-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361LH1-A07	ACTIVE		900-361LH1-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361LH1-A09	ACTIVE		900-361LH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361LT1-A00	ACTIVE		900-361LT1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-361YH1-A09-SLU	ACTIVE		900-361YH1-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363KH1-A09	ACTIVE		900-363KH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363LF9-N04	ACTIVE		900-363LF9-N04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-363LF9-N09-SLU	ACTIVE		900-363LF9-N09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363LH1-A00	ACTIVE		900-363LH1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363LH1-A10	ACTIVE		900-363LH1-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363LH1-D00	ACTIVE		900-363LH1-D00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363LH6-A00	ACTIVE		900-363LH6-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-363PH1-A00	ACTIVE		900-363PH1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-365LJ1-A00	ACTIVE		900-365LJ1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-381KH1-A09	ACTIVE		900-381KH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-381LH1-A00	ACTIVE		900-381LH1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-381TH1-A09	ACTIVE		900-381TH1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-381TH3-A09	ACTIVE		900-381TH3-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382DQ9-A00	ACTIVE		900-382DQ9-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-382LD1-A00-SLU	ACTIVE		900-382LD1-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382LF9-N04	ACTIVE		900-382LF9-N04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382LF9-N09-SLU	ACTIVE		900-382LF9-N09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382LH1-A00-SLU	ACTIVE		900-382LH1-A00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382LH1-A09	ACTIVE		900-382LH1-A09	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-382PA1-A00	ACTIVE		900-382PA1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-382J1-A09	ACTIVE		900-382J1-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-383LD1-A00	ACTIVE		900-383LD1-A00	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-383LD1-A10	ACTIVE		900-383LD1-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

900-383LF9-N09-SLU	ACTIVE		900-383LF9-N09-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-383LH1-A02	ACTIVE		900-383LH1-A02	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-383LH1-A04	ACTIVE		900-383LH1-A04	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-384LD3-A00-SLU	ACTIVE		900-384LD3-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-384LH6-A00	ACTIVE		900-384LH6-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-420AZ1-A01	ACTIVE		900-420AZ1-A01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
900-420BZ1-A01	ACTIVE		900-420BZ1-A01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-420DZ1-A01-SLU	ACTIVE		900-420DZ1-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-420SB1-A01	ACTIVE		900-420SB1-A01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-501L09-A10-SLU	ACTIVE		900-501L09-A10-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-501L09-A11-SLU	ACTIVE		900-501L09-A11-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-511E11-A00-SLU	ACTIVE		900-511E11-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-511E17-A00-SLU	ACTIVE		900-511E17-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-511E20-N01-SLU	ACTIVE		900-511E20-N01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-511E30-A00-SLU	ACTIVE		900-511E30-A00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-511M03-N01-SLU	ACTIVE		900-511M03-N01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-511M03-N07-SLU	ACTIVE		900-511M03-N07-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-512M05-A08-SLU	ACTIVE		900-512M05-A08-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-518E02-A09-SLU	ACTIVE		900-518E02-A09-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-518E28-A00-SLU	ACTIVE		900-518E28-A00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-518H02-A10-SLU	ACTIVE		900-518H02-A10-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519E01-A00-SLU	ACTIVE		900-519E01-A00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519E01-B00-SLU	ACTIVE		900-519E01-B00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519E03-A00-SLU	ACTIVE		900-519E03-A00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519E03-B00-SLU	ACTIVE		900-519E03-B00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519E05-A00-SLU	ACTIVE		900-519E05-A00-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-519F04-A08	ACTIVE		900-519F04-A08	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-521H07-A00-SLU	ACTIVE		900-521H07-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-521K01-A08-SLU	ACTIVE		900-521K01-A08-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-521K02-A10-SLU	ACTIVE		900-521K02-A10-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-521L06-A04-SLU	ACTIVE		900-521L06-A04-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-522E24-A09-SLU	ACTIVE		900-522E24-A09-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-528E29-A01-SLU	ACTIVE		900-528E29-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-528G15-A06-SLU	ACTIVE		900-528G15-A06-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-528L01-A01-SLU	ACTIVE		900-528L01-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-529F09-A08-SLU	ACTIVE		900-529F09-A08-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-539G02-A02-SLU	ACTIVE		900-539G02-A02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-571S01-A09-SLU	ACTIVE		900-571S01-A09-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-581E87-A10-SLU	ACTIVE		900-581E87-A10-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-581E87-B10-SLU	ACTIVE		900-581E87-B10-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-581F10-A09-SLU	ACTIVE		900-581F10-A09-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-591E83-A00-SLU	ACTIVE		900-591E83-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-591E85-A00-SLU	ACTIVE		900-591E85-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-591E85-B00-SLU	ACTIVE		900-591E85-B00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-591E88-A10-SLU	ACTIVE		900-591E88-A10-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
900-591L07-A01-SLU	ACTIVE		900-591L07-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-592M05-A08	ACTIVE		900-592M05-A08	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-598E89-A10-SLU	ACTIVE		900-598E89-A10-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
900-598G90-A10-SLU	ACTIVE		900-598G90-A10-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia

900-598H80-A10-SLU	ACTIVE		900-598H80-A10-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-599E80-A01-SLU	ACTIVE		900-599E80-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-599E80-B01-SLU	ACTIVE		900-599E80-B01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-599E81-A01-SLU	ACTIVE		900-599E81-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
90061301	ACTIVE		90061301	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-621G00-A01-SLU	ACTIVE		900-621G00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629A00-A02	ACTIVE		900-629A00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629A00-A03	ACTIVE		900-629A00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629F01-A01	ACTIVE		900-629F01-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629F09-A02-JZI	ACTIVE		900-629F09-A02-JZI	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629F12-A01-JZI	ACTIVE		900-629F12-A01-JZI	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-629W08-A01-JZI	ACTIVE		900-629W08-A01-JZI	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-640A12-A01	ACTIVE		900-640A12-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-642A01-A01	ACTIVE		900-642A01-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900676-14	ACTIVE		900676-14	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-721H01-F01-SLU	ACTIVE		900-721H01-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-721N01-F02-SLU	ACTIVE		900-721N01-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-730G15-A01-SLU	ACTIVE		900-730G15-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-730W01-F01-SLU	ACTIVE		900-730W01-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-730Z01-A01-SLU	ACTIVE		900-730Z01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-730Z01-A02-SLU	ACTIVE		900-730Z01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-731A02-F01-SLU	ACTIVE		900-731A02-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S01-A01-SLU	ACTIVE		900-740S01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-740S02-A01-SLU	ACTIVE		900-740S02-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S03-A01-SLU	ACTIVE		900-740S03-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S08-A01-SLU	ACTIVE		900-740S08-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-740S09-A01-SLU	ACTIVE		900-740S09-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-740S12-A01-SLU	ACTIVE		900-740S12-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S13-A01-SLU	ACTIVE		900-740S13-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S14-A01-SLU	ACTIVE		900-740S14-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S15-A01-SLU	ACTIVE		900-740S15-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-740S16-A01-SLU	ACTIVE		900-740S16-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S17-A01	ACTIVE		900-740S17-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S20-A01-SLU	ACTIVE		900-740S20-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-740S26-A01-SLU	ACTIVE		900-740S26-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-740S27-A01-SLU	ACTIVE		900-740S27-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-741F01-A01-SLU	ACTIVE		900-741F01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-741F02-A01-SLU	ACTIVE		900-741F02-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-741F02-A02-SLU	ACTIVE		900-741F02-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-741F03-A01-SLU	ACTIVE		900-741F03-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-741F03-A02-SLU	ACTIVE		900-741F03-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-741F03-A03-SLU	ACTIVE		900-741F03-A03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-741F04-A01-SLU	ACTIVE		900-741F04-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-741F06-A01-SLU	ACTIVE		900-741F06-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-743S01-A01-SLU	ACTIVE		900-743S01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-743S01-A02-SLU	ACTIVE		900-743S01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-743S02-A01	ACTIVE		900-743S02-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-743S03-A01-SLU	ACTIVE		900-743S03-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-750C00-A03-SLU	ACTIVE		900-750C00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

900-750S01-A01F-SLU	ACTIVE		900-750S01-A01F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-750S01-A01-SLU	ACTIVE		900-750S01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-751A01-F04-SLU	ACTIVE		900-751A01-F04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-751T01-A02-SLU	ACTIVE		900-751T01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-756S01-A02-SLU	ACTIVE		900-756S01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N00-SLU	ACTIVE		900-760J02-N00-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N02-SLU	ACTIVE		900-760J02-N02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N03-SLU	ACTIVE		900-760J02-N03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N04-SLU	ACTIVE		900-760J02-N04-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N05-SLU	ACTIVE		900-760J02-N05-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N06-SLU	ACTIVE		900-760J02-N06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N07-SLU	ACTIVE		900-760J02-N07-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N08-SLU	ACTIVE		900-760J02-N08-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-760J02-N09-SLU	ACTIVE		900-760J02-N09-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-760T01-A01-SLU	ACTIVE		900-760T01-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-761E01-A01-SLU	ACTIVE		900-761E01-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-764P01-A01-SLU	ACTIVE		900-764P01-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-765P01-A03-SLU	ACTIVE		900-765P01-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-765S01-NOX	ACTIVE		900-765S01-NOX	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-771L01-A02-SLU	ACTIVE		900-771L01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-771L01-F01-SLU	ACTIVE		900-771L01-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-771L04-F02-SLU	ACTIVE		900-771L04-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-771Q01-A02-SLU	ACTIVE		900-771Q01-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-812C00-A01-SLU	ACTIVE		900-812C00-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
90081301	ACTIVE		90081301	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
90081302	ACTIVE		90081302	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-813C00-F10-SLU	ACTIVE		900-813C00-F10-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-816C00-F10F-SLU	ACTIVE		900-816C00-F10F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-816V00-A05-SLU	ACTIVE		900-816V00-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-821K00-A10	ACTIVE		900-821K00-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-822F00-A10	ACTIVE		900-822F00-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-822K00-A10	ACTIVE		900-822K00-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-822T00-A10	ACTIVE		900-822T00-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-822U00-A09-SLU	ACTIVE		900-822U00-A09-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-822U00-F09-SLU	ACTIVE		900-822U00-F09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-823K00-A02-SLU	ACTIVE		900-823K00-A02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
900-823U00-F09	ACTIVE		900-823U00-F09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-834P00-A09	ACTIVE		900-834P00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
900-845E00-A01-SLU	ACTIVE		900-845E00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-100Z00-A01-SLU	ACTIVE		901-100Z00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-111S00-A03	ACTIVE		901-111S00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-113S00-A01	ACTIVE		901-113S00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-142B00-A01	ACTIVE		901-142B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-142B00-A02	ACTIVE		901-142B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-200P00-A01	ACTIVE		901-200P00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-200U00-A01	ACTIVE		901-200U00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-212S00-A04	ACTIVE		901-212S00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-230U00-A07	ACTIVE		901-230U00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

901-230U00-A09	ACTIVE		901-230U00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-230U00-A12	ACTIVE		901-230U00-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-230U00-A13	ACTIVE		901-230U00-A13	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-230U00-A14	ACTIVE		901-230U00-A14	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-230U00-A18	ACTIVE		901-230U00-A18	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-250P00-A01-SLU	ACTIVE		901-250P00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-250P00-A02-SLU	ACTIVE		901-250P00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-260Z00-A01	ACTIVE		901-260Z00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-451PA0-N04	ACTIVE		901-451PA0-N04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-503R30-A01	ACTIVE		901-503R30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-503R30-A02-SLU	ACTIVE		901-503R30-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-507L00-A02-SLU	ACTIVE		901-507L00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-507L20-A01-SLU	ACTIVE		901-507L20-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-507R00-A01-SLU	ACTIVE		901-507R00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-507T30-A01	ACTIVE		901-507T30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-507T30-A02	ACTIVE		901-507T30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A01	ACTIVE		901-509R30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A02	ACTIVE		901-509R30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A03	ACTIVE		901-509R30-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A03	ACTIVE		901-509R30-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A04	ACTIVE		901-509R30-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-509R30-A05	ACTIVE		901-509R30-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-512C20-A03	ACTIVE		901-512C20-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-513R20-A01	ACTIVE		901-513R20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-517A00-A01	ACTIVE		901-517A00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-517D20-A03	ACTIVE		901-517D20-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-517D20-A04	ACTIVE		901-517D20-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-517D20-A05	ACTIVE		901-517D20-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-520D30-A01	ACTIVE		901-520D30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-527C20-A01	ACTIVE		901-527C20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-532R20-A01	ACTIVE		901-532R20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-533L30-A01-SLU	ACTIVE		901-533L30-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-533L30-A02	ACTIVE		901-533L30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-537F30-A01	ACTIVE		901-537F30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-537L30-A07	ACTIVE		901-537L30-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-537L30-A08	ACTIVE		901-537L30-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-537L30-N02	ACTIVE		901-537L30-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-538A20-A14-SLU	ACTIVE		901-538A20-A14-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L00-A04	ACTIVE		901-547L00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L00-A06	ACTIVE		901-547L00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L00-A08	ACTIVE		901-547L00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L00-N01	ACTIVE		901-547L00-N01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L20-A02	ACTIVE		901-547L20-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A01	ACTIVE		901-547L30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A04	ACTIVE		901-547L30-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A05	ACTIVE		901-547L30-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A06-SLU	ACTIVE		901-547L30-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A08	ACTIVE		901-547L30-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A09	ACTIVE		901-547L30-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-547L30-A10	ACTIVE		901-547L30-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

901-547Z00-A05	ACTIVE		901-547Z00-A05	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-550R20-A02	ACTIVE		901-550R20-A02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-550R20-A04-SLU	ACTIVE		901-550R20-A04-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552F00-A01	ACTIVE		901-552F00-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552F20-A05	ACTIVE		901-552F20-A05	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552F30-A05	ACTIVE		901-552F30-A05	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L20-A01	ACTIVE		901-552L20-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L20-A02	ACTIVE		901-552L20-A02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A03	ACTIVE		901-552L30-A03	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A04	ACTIVE		901-552L30-A04	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A05	ACTIVE		901-552L30-A05	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A06	ACTIVE		901-552L30-A06	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A07	ACTIVE		901-552L30-A07	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A08	ACTIVE		901-552L30-A08	HW	HWB	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A09	ACTIVE		901-552L30-A09	HW	HWB	95	THERMISTORS	0 SL	St. Lucia
901-552L30-A10	ACTIVE		901-552L30-A10	HW	HWB	95	THERMISTORS	0 SL	St. Lucia
901-552L30-N01	ACTIVE		901-552L30-N01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552L30-N02	ACTIVE		901-552L30-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552R00-A01	ACTIVE		901-552R00-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552R20-A03	ACTIVE		901-552R20-A03	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552R20-A04	ACTIVE		901-552R20-A04	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552R20-P02	ACTIVE		901-552R20-P02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552R30-A02	ACTIVE		901-552R30-A02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-552Z30-A01-SLU	ACTIVE		901-552Z30-A01-SLU	HW	HWB	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A04	ACTIVE		901-553F40-A04	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A07-X	ACTIVE		901-553F40-A07-X	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A08	ACTIVE		901-553F40-A08	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A09	ACTIVE		901-553F40-A09	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A10	ACTIVE		901-553F40-A10	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A11	ACTIVE		901-553F40-A11	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A12	ACTIVE		901-553F40-A12	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A14	ACTIVE		901-553F40-A14	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A16	ACTIVE		901-553F40-A16	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A17	ACTIVE		901-553F40-A17	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A18-SLU	ACTIVE		901-553F40-A18-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A19	ACTIVE		901-553F40-A19	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A20	ACTIVE		901-553F40-A20	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A21	ACTIVE		901-553F40-A21	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A22	ACTIVE		901-553F40-A22	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-A23	ACTIVE		901-553F40-A23	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-N01-SLU	ACTIVE		901-553F40-N01-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-N02	ACTIVE		901-553F40-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F40-N03	ACTIVE		901-553F40-N03	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553F50-A01	ACTIVE		901-553F50-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553L30-A01	ACTIVE		901-553L30-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553L30-A02	ACTIVE		901-553L30-A02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553L30-A03-SLU	ACTIVE		901-553L30-A03-SLU	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553L30-N02	ACTIVE		901-553L30-N02	HW	HWF	95	THERMISTORS	0 SL	St. Lucia
901-553M00-A01	ACTIVE		901-553M00-A01	HW	HWF	95	THERMISTORS	0 SL	St. Lucia

901-554L20-A01	ACTIVE		901-554L20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-554L20-A02	ACTIVE		901-554L20-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-554L20-A05	ACTIVE		901-554L20-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L00-A01	ACTIVE		901-556L00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L20-A04	ACTIVE		901-556L20-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A01	ACTIVE		901-556L30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A02	ACTIVE		901-556L30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A04	ACTIVE		901-556L30-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A05	ACTIVE		901-556L30-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A06	ACTIVE		901-556L30-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A07	ACTIVE		901-556L30-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A08	ACTIVE		901-556L30-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556L30-A09-SLU	ACTIVE		901-556L30-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556R20-A01	ACTIVE		901-556R20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556R20-A01	ACTIVE		901-556R20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556U20-A01	ACTIVE		901-556U20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-556Z30-A01	ACTIVE		901-556Z30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-560C20-A01	ACTIVE		901-560C20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-560L20-A02	ACTIVE		901-560L20-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-560L30-A01	ACTIVE		901-560L30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567K00-A01	ACTIVE		901-567K00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L20-A01	ACTIVE		901-567L20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L20-A03	ACTIVE		901-567L20-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A01	ACTIVE		901-567L30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A02	ACTIVE		901-567L30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A03	ACTIVE		901-567L30-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A04	ACTIVE		901-567L30-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A05	ACTIVE		901-567L30-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A06-SLU	ACTIVE		901-567L30-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A08	ACTIVE		901-567L30-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A09	ACTIVE		901-567L30-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A10	ACTIVE		901-567L30-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A12	ACTIVE		901-567L30-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A13	ACTIVE		901-567L30-A13	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A14	ACTIVE		901-567L30-A14	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567L30-A15-SLU	ACTIVE		901-567L30-A15-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567P30-A02	ACTIVE		901-567P30-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567P30-A03	ACTIVE		901-567P30-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567U30-A01	ACTIVE		901-567U30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-567Z20-A02	ACTIVE		901-567Z20-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-572L20-N01	ACTIVE		901-572L20-N01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-572R30-A01	ACTIVE		901-572R30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-576L20-N02	ACTIVE		901-576L20-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-591Z00-A01	ACTIVE		901-591Z00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-597L00-A01	ACTIVE		901-597L00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-597T00-A02	ACTIVE		901-597T00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-597Z00-A01-SLU	ACTIVE		901-597Z00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-600Z00-A01	ACTIVE		901-600Z00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-600Z00-A12	ACTIVE		901-600Z00-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-600Z00-A13-SLU	ACTIVE		901-600Z00-A13-SLU	EK	EKZ	10	ATOM & PROX		0 SL	St. Lucia









901-615F50-N17	ACTIVE		901-615F50-N17	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-615F50-N18	ACTIVE		901-615F50-N18	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-615F50-N19	ACTIVE		901-615F50-N19	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
901-630Z00-F01-SLU	ACTIVE		901-630Z00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-650Z00-A02	ACTIVE		901-650Z00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-680Z00-A04	ACTIVE		901-680Z00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-901V00-A03-SLU	ACTIVE		901-901V00-A03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911A00-F02F-SLU	ACTIVE		901-911A00-F02F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911A00-F02-SLU	ACTIVE		901-911A00-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911A00-F11-SLU	ACTIVE		901-911A00-F11-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911A00-F12-SLU	ACTIVE		901-911A00-F12-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911D00-F05-SLU	ACTIVE		901-911D00-F05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911D00-F07-SLU	ACTIVE		901-911D00-F07-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911D00-F08-SLU	ACTIVE		901-911D00-F08-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911E00-F02-SLU	ACTIVE		901-911E00-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911E00-F03-SLU	ACTIVE		901-911E00-F03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911L00-F03-SLU	ACTIVE		901-911L00-F03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911L00-F05-SLU	ACTIVE		901-911L00-F05-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911N00-A01-SLU	ACTIVE		901-911N00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-A02-SLU	ACTIVE		901-911N00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F01-SLU	ACTIVE		901-911N00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F07-SLU	ACTIVE		901-911N00-F07-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F13F-SLU	ACTIVE		901-911N00-F13F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F13-SLU	ACTIVE		901-911N00-F13-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F15-SLU	ACTIVE		901-911N00-F15-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911N00-F16-SLU	ACTIVE		901-911N00-F16-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911P00-A01-SLU	ACTIVE		901-911P00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911Q00-T01 - SLU	ACTIVE		901-911Q00-T01 - SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911R00-F02-SLU	ACTIVE		901-911R00-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911R00-T10-SLU	ACTIVE		901-911R00-T10-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911W00-F01F-SLU	ACTIVE		901-911W00-F01F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911W00-F01-SLU	ACTIVE		901-911W00-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911W00-F04-SLU	ACTIVE		901-911W00-F04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911W03-F03-SLU	ACTIVE		901-911W03-F03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-911X00-F01-SLU	ACTIVE		901-911X00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911Z00-A08-SLU	ACTIVE		901-911Z00-A08-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-911Z00-A11-SLU	ACTIVE		901-911Z00-A11-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-913S00-F01-SLU	ACTIVE		901-913S00-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-913S00-F02-SLU	ACTIVE		901-913S00-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-913S00-F03-SLU	ACTIVE		901-913S00-F03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-915K01-F01-SLU	ACTIVE		901-915K01-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-915K01-F02-SLU	ACTIVE		901-915K01-F02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-919H00-A01-SLU	ACTIVE		901-919H00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-919H00-A02-SLU	ACTIVE		901-919H00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-919H00-F06-SLU	ACTIVE		901-919H00-F06-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-919H00-F08F-SLU	ACTIVE		901-919H00-F08F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
901-919H00-F08-SLU	ACTIVE		901-919H00-F08-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-919H00-F10-SLU	ACTIVE		901-919H00-F10-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
901-919H00-F12-SLU	ACTIVE		901-919H00-F12-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

901-919J00-A03-SLU	ACTIVE		901-919J00-A03-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919K00-A01-SLU	ACTIVE		901-919K00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919L00-F10-SLU	ACTIVE		901-919L00-F10-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919L00-F14-SLU	ACTIVE		901-919L00-F14-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919L01-F01-SLU	ACTIVE		901-919L01-F01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919L01-F04-SLU	ACTIVE		901-919L01-F04-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919R00-A01-SLU	ACTIVE		901-919R00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919R00-A02-SLU	ACTIVE		901-919R00-A02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919R00-A03-SLU	ACTIVE		901-919R00-A03-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919R00-A04-SLU	ACTIVE		901-919R00-A04-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919R00-A05-SLU	ACTIVE		901-919R00-A05-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919R00-F01-SLU	ACTIVE		901-919R00-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919S00-A04-SLU	ACTIVE		901-919S00-A04-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919S00-A05-SLU	ACTIVE		901-919S00-A05-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919T00-A02-SLU	ACTIVE		901-919T00-A02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919T00-F02-SLU	ACTIVE		901-919T00-F02-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919V00-A01-SLU	ACTIVE		901-919V00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-A02-SLU	ACTIVE		901-919Z00-A02-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-A03-SLU	ACTIVE		901-919Z00-A03-SLU	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-N01-SLU	ACTIVE		901-919Z00-N01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-N02-SLU	ACTIVE		901-919Z00-N02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-N03-SLU	ACTIVE		901-919Z00-N03-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-919Z00-N04-SLU	ACTIVE		901-919Z00-N04-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-921C00-F01-SLU	ACTIVE		901-921C00-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-921C00-F02-SLU	ACTIVE		901-921C00-F02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-929J00-F02	ACTIVE		901-929J00-F02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-931Z00-A01-SLU	ACTIVE		901-931Z00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G00-A01-SLU	ACTIVE		901-939G00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G00-F01-SLU	ACTIVE		901-939G00-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G00-F14-SLU	ACTIVE		901-939G00-F14-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-939G02-F01-SLU	ACTIVE		901-939G02-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G02-F02-SLU	ACTIVE		901-939G02-F02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G04-F01-SLU	ACTIVE		901-939G04-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G04-F02-SLU	ACTIVE		901-939G04-F02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G04-F03-SLU	ACTIVE		901-939G04-F03-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G05-F01-SLU	ACTIVE		901-939G05-F01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939G05-F02-SLU	ACTIVE		901-939G05-F02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939Z00-A02-SLU	ACTIVE		901-939Z00-A02-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939Z00-A05-SLU	ACTIVE		901-939Z00-A05-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-939Z00-A08-SLU	ACTIVE		901-939Z00-A08-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-949Z01-F01-SLU	ACTIVE		901-949Z01-F01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-949Z01-F04-SLU	ACTIVE		901-949Z01-F04-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-961M00-A01-SLU	ACTIVE		901-961M00-A01-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F27-SLU	ACTIVE		901-961M00-F27-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F31	ACTIVE		901-961M00-F31	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F38	ACTIVE		901-961M00-F38	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F43-SLU	ACTIVE		901-961M00-F43-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F48	ACTIVE		901-961M00-F48	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
901-961M00-F50-SLU	ACTIVE		901-961M00-F50-SLU	HW	HWF	95	THERMISTORS		0	SL	St. Lucia



902-110P00-N33	ACTIVE		902-110P00-N33	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111G00-A02-SLU	ACTIVE		902-111G00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111G00-A04-SLU	ACTIVE		902-111G00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111G00-A05-SLU	ACTIVE		902-111G00-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111G00-A06-SLU	ACTIVE		902-111G00-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111G00-A08-SLU	ACTIVE		902-111G00-A08-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111N00-A01-SLU	ACTIVE		902-111N00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111N00-A02-SLU	ACTIVE		902-111N00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111N00-A03-SLU	ACTIVE		902-111N00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-111N00-A04-SLU	ACTIVE		902-111N00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112G00-A06-SLU	ACTIVE		902-112G00-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112G00-A07-SLU	ACTIVE		902-112G00-A07-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112G00-A11-SLU	ACTIVE		902-112G00-A11-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112G00-S05-SLU	ACTIVE		902-112G00-S05-SLU	HW	HWA	95	THERMISTORS		0 SL	St. Lucia
902-112P00-A11	ACTIVE		902-112P00-A11	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112P00-Q01	ACTIVE		902-112P00-Q01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112P00-Q02	ACTIVE		902-112P00-Q02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112P00-Q03	ACTIVE		902-112P00-Q03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112P00-Q04	ACTIVE		902-112P00-Q04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-112S00-A07	ACTIVE		902-112S00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-113P00-A03-SLU	ACTIVE		902-113P00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-113P00-A04	ACTIVE		902-113P00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-113P00-A05-SLU	ACTIVE		902-113P00-A05-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-114P00-A06	ACTIVE		902-114P00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-114P00-A08	ACTIVE		902-114P00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-114P00-A09-SLU	ACTIVE		902-114P00-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-114S00-A04	ACTIVE		902-114S00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-115P00-A06	ACTIVE		902-115P00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-115P00-A07	ACTIVE		902-115P00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-116P00-A02-SLU	ACTIVE		902-116P00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-122S00-A05	ACTIVE		902-122S00-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-122S00-A12	ACTIVE		902-122S00-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-122S00-A16-SLU	ACTIVE		902-122S00-A16-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-122S00-A17	ACTIVE		902-122S00-A17	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-122S00-A30	ACTIVE		902-122S00-A30	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A06	ACTIVE		902-123S00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A09	ACTIVE		902-123S00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A11-SLU	ACTIVE		902-123S00-A11-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A16	ACTIVE		902-123S00-A16	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A28	ACTIVE		902-123S00-A28	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A29	ACTIVE		902-123S00-A29	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-A31	ACTIVE		902-123S00-A31	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-N02	ACTIVE		902-123S00-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-N02-X	ACTIVE		902-123S00-N02-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-N06	ACTIVE		902-123S00-N06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-N26	ACTIVE		902-123S00-N26	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-123S00-N26-X	ACTIVE		902-123S00-N26-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-124P00-A06	ACTIVE		902-124P00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-124S00-A04-SLU	ACTIVE		902-124S00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

902-124S00-A05	ACTIVE		902-124S00-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-124S00-A06	ACTIVE		902-124S00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-124S00-A07	ACTIVE		902-124S00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-125C00-A01	ACTIVE		902-125C00-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-125S00-A01	ACTIVE		902-125S00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-125S00-A02	ACTIVE		902-125S00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-125S00-A03-SLU	ACTIVE		902-125S00-A03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-133P00-A05	ACTIVE		902-133P00-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-133P00-A06	ACTIVE		902-133P00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-133S00-A08	ACTIVE		902-133S00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-142S00-N16	ACTIVE		902-142S00-N16	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-142S00-P01	ACTIVE		902-142S00-P01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-A09	ACTIVE		902-144S00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-A10-SLU	ACTIVE		902-144S00-A10-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-N01-X	ACTIVE		902-144S00-N01-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-N02	ACTIVE		902-144S00-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-N03	ACTIVE		902-144S00-N03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-144S00-N04-SLU	ACTIVE		902-144S00-N04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-145S00-A02-SLU	ACTIVE		902-145S00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-192P00-A18	ACTIVE		902-192P00-A18	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-213S00-A01-SLU	ACTIVE		902-213S00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-213S00-A16	ACTIVE		902-213S00-A16	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-242P00-A04	ACTIVE		902-242P00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-254B00-A02	ACTIVE		902-254B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-271A00-A06	ACTIVE		902-271A00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-272B00-A01	ACTIVE		902-272B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-273B00-A01	ACTIVE		902-273B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-280D00-A02-SLU	ACTIVE		902-280D00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-280D00-A05-SLU	ACTIVE		902-280D00-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-280D00-A08-SLU	ACTIVE		902-280D00-A08-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-280D00-A10-SLU	ACTIVE		902-280D00-A10-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-280N00-A02-SLU	ACTIVE		902-280N00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-285S00-A01	ACTIVE		902-285S00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-312A00-A01	ACTIVE		902-312A00-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-313A00-A01-SLU	ACTIVE		902-313A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314A00-A07	ACTIVE		902-314A00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314A00-A08	ACTIVE		902-314A00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314B00-A02	ACTIVE		902-314B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314B00-A06	ACTIVE		902-314B00-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314B00-A07	ACTIVE		902-314B00-A07	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314B00-A08	ACTIVE		902-314B00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-314B00-A10	ACTIVE		902-314B00-A10	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-315B00-A03	ACTIVE		902-315B00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-316B00-A08	ACTIVE		902-316B00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-316B00-A09	ACTIVE		902-316B00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-316B00-A10	ACTIVE		902-316B00-A10	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-316D00-A01	ACTIVE		902-316D00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-324B00-A02	ACTIVE		902-324B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-325S00-A01-X	ACTIVE		902-325S00-A01-X	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

902-326B00-A02	ACTIVE		902-326B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-336B00-A01	ACTIVE		902-336B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-336S00-A01	ACTIVE		902-336S00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-430B00-A01	ACTIVE		902-430B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-431A00-A01	ACTIVE		902-431A00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-431A00-A04	ACTIVE		902-431A00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-502S00-A02	ACTIVE		902-502S00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-502S00-A03	ACTIVE		902-502S00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-502S00-A04	ACTIVE		902-502S00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-503A00-A02	ACTIVE		902-503A00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-518D30-A01	ACTIVE		902-518D30-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-519D90-A01-HON	ACTIVE		902-519D90-A01-HON	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-519U30-A01	ACTIVE		902-519U30-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-524B60-N01	ACTIVE		902-524B60-N01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-526E00-A01	ACTIVE		902-526E00-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-526E00-A02	ACTIVE		902-526E00-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-535B30-A01-SLU	ACTIVE		902-535B30-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-540U80-A01	ACTIVE		902-540U80-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-540U80-A03	ACTIVE		902-540U80-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-540U80-A04	ACTIVE		902-540U80-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-541Q00-A01	ACTIVE		902-541Q00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-549U90-A05	ACTIVE		902-549U90-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-549U90-A06-SLU	ACTIVE		902-549U90-A06-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-562S00-A01-SLU	ACTIVE		902-562S00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-562S00-A02	ACTIVE		902-562S00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-564S90-A01	ACTIVE		902-564S90-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-581M00-A02-SLU	ACTIVE		902-581M00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-586S90-A01-SLU	ACTIVE		902-586S90-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-604P01-A05	ACTIVE		902-604P01-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-604P01-A06	ACTIVE		902-604P01-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-604P29-A01-SLU	ACTIVE		902-604P29-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-604P66-A01	ACTIVE		902-604P66-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-611D41-A02	ACTIVE		902-611D41-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-612D40-A01	ACTIVE		902-612D40-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-612D40-A02	ACTIVE		902-612D40-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-613D40-A01-SLU	ACTIVE		902-613D40-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-613D40-A02	ACTIVE		902-613D40-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-613D40-A04	ACTIVE		902-613D40-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-613D41-A01-SLU	ACTIVE		902-613D41-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-613P01-A02	ACTIVE		902-613P01-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-623T41-A01	ACTIVE		902-623T41-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-625P01-A02	ACTIVE		902-625P01-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-625P01-A03	ACTIVE		902-625P01-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-625P29-A01-SLU	ACTIVE		902-625P29-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-634P23-A01	ACTIVE		902-634P23-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-636P01-A02	ACTIVE		902-636P01-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-664P29-A05	ACTIVE		902-664P29-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-665P29-A01	ACTIVE		902-665P29-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-666P66-N01	ACTIVE		902-666P66-N01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia



902-666P66-N02	ACTIVE		902-666P66-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-666P66-N03	ACTIVE		902-666P66-N03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-667P20-A01	ACTIVE		902-667P20-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-667P20-A02	ACTIVE		902-667P20-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-667P30-A01-SLU	ACTIVE		902-667P30-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-673P29-A01-SLU	ACTIVE		902-673P29-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-679P60-A02-SLU	ACTIVE		902-679P60-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-679S33-A04-SLU	ACTIVE		902-679S33-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-679S33-A05-SLU	ACTIVE		902-679S33-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-685P28-A01	ACTIVE		902-685P28-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-688P40-A01-SLU	ACTIVE		902-688P40-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-688P40-A02	ACTIVE		902-688P40-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-698P21-A01	ACTIVE		902-698P21-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-698P21-A04	ACTIVE		902-698P21-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711B90-N04	ACTIVE		902-711B90-N04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711B90-N05	ACTIVE		902-711B90-N05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711B90-N06	ACTIVE		902-711B90-N06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S10-P01	ACTIVE		902-711S10-P01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S20-N03	ACTIVE		902-711S20-N03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S20-Q13	ACTIVE		902-711S20-Q13	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A06	ACTIVE		902-711S30-A06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A12	ACTIVE		902-711S30-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A14	ACTIVE		902-711S30-A14	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A19	ACTIVE		902-711S30-A19	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A20	ACTIVE		902-711S30-A20	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A21	ACTIVE		902-711S30-A21	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A23	ACTIVE		902-711S30-A23	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A24	ACTIVE		902-711S30-A24	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A25	ACTIVE		902-711S30-A25	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-A26-SLU	ACTIVE		902-711S30-A26-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-B01-SLU	ACTIVE		902-711S30-B01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q01	ACTIVE		902-711S30-Q01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q03	ACTIVE		902-711S30-Q03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q06	ACTIVE		902-711S30-Q06	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q08	ACTIVE		902-711S30-Q08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q16	ACTIVE		902-711S30-Q16	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-Q27	ACTIVE		902-711S30-Q27	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-711S30-V01	ACTIVE		902-711S30-V01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-712S10-A01	ACTIVE		902-712S10-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-712S10-A04	ACTIVE		902-712S10-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-712S10-A05	ACTIVE		902-712S10-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-724P90-A00-SLU	ACTIVE		902-724P90-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-7T0736-A02-SLU	ACTIVE		902-7T0736-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-7T0736-A05-SLU	ACTIVE		902-7T0736-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-7T0815-A01-SLU	ACTIVE		902-7T0815-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-7T0815-A02-SLU	ACTIVE		902-7T0815-A02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-7T0815-A03-SLU	ACTIVE		902-7T0815-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-7T0815-A04-SLU	ACTIVE		902-7T0815-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-7T0815-A05-SLU	ACTIVE		902-7T0815-A05-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia



902-881U00-A12	ACTIVE		902-881U00-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-881U00-N01-SLU	ACTIVE		902-881U00-N01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-881U00-N03-SLU	ACTIVE		902-881U00-N03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-881U00-N04-SLU	ACTIVE		902-881U00-N04-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-881U00-N05	ACTIVE		902-881U00-N05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-881U00-N06	ACTIVE		902-881U00-N06	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-881U01-N01-SLU	ACTIVE		902-881U01-N01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882E00-A01	ACTIVE		902-882E00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-A05	ACTIVE		902-882G00-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-N01	ACTIVE		902-882G00-N01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-N02	ACTIVE		902-882G00-N02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-N02-SLU	ACTIVE		902-882G00-N02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-P04	ACTIVE		902-882G00-P04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882G00-P05	ACTIVE		902-882G00-P05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882K00-A01	ACTIVE		902-882K00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882K00-A03	ACTIVE		902-882K00-A03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882K00-A04	ACTIVE		902-882K00-A04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A01	ACTIVE		902-882P00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A02	ACTIVE		902-882P00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A09	ACTIVE		902-882P00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A12	ACTIVE		902-882P00-A12	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A15	ACTIVE		902-882P00-A15	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A16	ACTIVE		902-882P00-A16	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A17	ACTIVE		902-882P00-A17	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A18	ACTIVE		902-882P00-A18	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-A20	ACTIVE		902-882P00-A20	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-Q05	ACTIVE		902-882P00-Q05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-Q07	ACTIVE		902-882P00-Q07	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882P00-Q10	ACTIVE		902-882P00-Q10	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882P00-Q14	ACTIVE		902-882P00-Q14	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882P00-Q15-SLU	ACTIVE		902-882P00-Q15-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A04	ACTIVE		902-882T00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A05	ACTIVE		902-882T00-A05	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A14	ACTIVE		902-882T00-A14	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A15	ACTIVE		902-882T00-A15	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A17	ACTIVE		902-882T00-A17	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A18	ACTIVE		902-882T00-A18	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A19	ACTIVE		902-882T00-A19	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A20	ACTIVE		902-882T00-A20	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A21	ACTIVE		902-882T00-A21	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A26	ACTIVE		902-882T00-A26	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A27	ACTIVE		902-882T00-A27	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A28	ACTIVE		902-882T00-A28	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A30	ACTIVE		902-882T00-A30	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A31	ACTIVE		902-882T00-A31	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A32-SLU	ACTIVE		902-882T00-A32-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A34	ACTIVE		902-882T00-A34	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A36	ACTIVE		902-882T00-A36	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A37	ACTIVE		902-882T00-A37	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

902-882T00-A39	ACTIVE		902-882T00-A39	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A40	ACTIVE		902-882T00-A40	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A41-SLU	ACTIVE		902-882T00-A41-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A42	ACTIVE		902-882T00-A42	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A43	ACTIVE		902-882T00-A43	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A44	ACTIVE		902-882T00-A44	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A45	ACTIVE		902-882T00-A45	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A46	ACTIVE		902-882T00-A46	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A47	ACTIVE		902-882T00-A47	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A48	ACTIVE		902-882T00-A48	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A49	ACTIVE		902-882T00-A49	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A50	ACTIVE		902-882T00-A50	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A51	ACTIVE		902-882T00-A51	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A52	ACTIVE		902-882T00-A52	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A53	ACTIVE		902-882T00-A53	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A54	ACTIVE		902-882T00-A54	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A55	ACTIVE		902-882T00-A55	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A56	ACTIVE		902-882T00-A56	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A57	ACTIVE		902-882T00-A57	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A58	ACTIVE		902-882T00-A58	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A59	ACTIVE		902-882T00-A59	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-A60	ACTIVE		902-882T00-A60	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S01	ACTIVE		902-882T00-S01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S02	ACTIVE		902-882T00-S02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S03	ACTIVE		902-882T00-S03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S04	ACTIVE		902-882T00-S04	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S05	ACTIVE		902-882T00-S05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S06	ACTIVE		902-882T00-S06	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S07	ACTIVE		902-882T00-S07	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-S08	ACTIVE		902-882T00-S08	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-T01	ACTIVE		902-882T00-T01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-T02	ACTIVE		902-882T00-T02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-T03	ACTIVE		902-882T00-T03	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-882T00-X01	ACTIVE		902-882T00-X01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-X02	ACTIVE		902-882T00-X02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-X03	ACTIVE		902-882T00-X03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-882T00-X04	ACTIVE		902-882T00-X04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-885R00-A03	ACTIVE		902-885R00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-886R00-A02	ACTIVE		902-886R00-A02	HW	HWK	99	FLEX HEATERS		0 SL	St. Lucia
902-887E00-A01	ACTIVE		902-887E00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-887E00-A02	ACTIVE		902-887E00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-887E00-A03	ACTIVE		902-887E00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-887E00-A04	ACTIVE		902-887E00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
902-887E00-A05	ACTIVE		902-887E00-A05	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-887E00-A06	ACTIVE		902-887E00-A06	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-89AAAAA-A01-SLU	ACTIVE		902-89AAAAA-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
902-89BABA-A01-SLU	ACTIVE		902-89BABA-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
903-100H00-A01	ACTIVE		903-100H00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-110B00-A01	ACTIVE		903-110B00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

903-110B00-A02	ACTIVE		903-110B00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-110T00-A01	ACTIVE		903-110T00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-110T00-A02	ACTIVE		903-110T00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-140U00-A02	ACTIVE		903-140U00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-170H00-A01	ACTIVE		903-170H00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-202H00-A01	ACTIVE		903-202H00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-202H00-A04	ACTIVE		903-202H00-A04	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-202Z00-A02	ACTIVE		903-202Z00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-204G00-A01	ACTIVE		903-204G00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-204G00-A02	ACTIVE		903-204G00-A02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-204H00-A03	ACTIVE		903-204H00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-370H00-A13-SLU	ACTIVE		903-370H00-A13-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-370H00-A25	ACTIVE		903-370H00-A25	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-400H00-A01	ACTIVE		903-400H00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
903-400H00-A15	ACTIVE		903-400H00-A15	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BU00-KIT-SLU	ACTIVE		906-32BU00-KIT-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-32BX00-103	ACTIVE		906-32BX00-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX01-103	ACTIVE		906-32BX01-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX02-103	ACTIVE		906-32BX02-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX03-103	ACTIVE		906-32BX03-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX04-103	ACTIVE		906-32BX04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX05-472	ACTIVE		906-32BX05-472	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX06-103	ACTIVE		906-32BX06-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-32BX07-203	ACTIVE		906-32BX07-203	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AF02-503	ACTIVE		906-59AF02-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AF05-503	ACTIVE		906-59AF05-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AF06-503	ACTIVE		906-59AF06-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AG02-503	ACTIVE		906-59AG02-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AG11-503	ACTIVE		906-59AG11-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59AP01-503	ACTIVE		906-59AP01-503	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59AW04-103	ACTIVE		906-59AW04-103	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59BF03-503	ACTIVE		906-59BF03-503	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59BF05-503	ACTIVE		906-59BF05-503	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59DH01-103	ACTIVE		906-59DH01-103	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59ED04-103	ACTIVE		906-59ED04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59ED05-103	ACTIVE		906-59ED05-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59EJ00-103	ACTIVE		906-59EJ00-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
906-59EJ02-103	ACTIVE		906-59EJ02-103	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59EJ03-103	ACTIVE		906-59EJ03-103	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
906-59EJ04-103	ACTIVE		906-59EJ04-103	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-104A00-N04-SLU	ACTIVE		907-104A00-N04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-111A00-A02-SLU	ACTIVE		907-111A00-A02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-112A00-A04-SLU	ACTIVE		907-112A00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-112A00-A16-SLU	ACTIVE		907-112A00-A16-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-112C00-A02-SLU	ACTIVE		907-112C00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-122A00-A01-SLU	ACTIVE		907-122A00-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-122A00-A09	ACTIVE		907-122A00-A09	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132A00-A03	ACTIVE		907-132A00-A03	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132A00-A14-SLU	ACTIVE		907-132A00-A14-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

907-132A00-A16-SLU	ACTIVE		907-132A00-A16-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132A00-A17-SLU	ACTIVE		907-132A00-A17-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132A00-A18-SLU	ACTIVE		907-132A00-A18-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132C00-B01-SLU	ACTIVE		907-132C00-B01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-132C00-C02-SLU	ACTIVE		907-132C00-C02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-133A00-A03-SLU	ACTIVE		907-133A00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-133A00-A04-SLU	ACTIVE		907-133A00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-134A00-F01-SLU	ACTIVE		907-134A00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-134A00-N01-SLU	ACTIVE		907-134A00-N01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-134A00-N03-SLU	ACTIVE		907-134A00-N03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A04-SLU	ACTIVE		907-141A00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A14-SLU	ACTIVE		907-141A00-A14-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A18	ACTIVE		907-141A00-A18	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A21-SLU	ACTIVE		907-141A00-A21-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A25-SLU	ACTIVE		907-141A00-A25-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A26-SLU	ACTIVE		907-141A00-A26-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A27-SLU	ACTIVE		907-141A00-A27-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A28	ACTIVE		907-141A00-A28	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A29	ACTIVE		907-141A00-A29	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A30	ACTIVE		907-141A00-A30	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A31-SLU	ACTIVE		907-141A00-A31-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-A32-SLU	ACTIVE		907-141A00-A32-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-F04F-SLU	ACTIVE		907-141A00-F04F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-F04-SLU	ACTIVE		907-141A00-F04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-141A00-S02	ACTIVE		907-141A00-S02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-142A00-A04-SLU	ACTIVE		907-142A00-A04-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-142A00-A29-SLU	ACTIVE		907-142A00-A29-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-142A00-A35-SLU	ACTIVE		907-142A00-A35-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-142A00-A37-SLU	ACTIVE		907-142A00-A37-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-142A00-N02-SLU	ACTIVE		907-142A00-N02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-144A00-Q03-SLU	ACTIVE		907-144A00-Q03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-144A00-Q04F-SLU	ACTIVE		907-144A00-Q04F-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-152A00-A01-SLU	ACTIVE		907-152A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-152A00-N01-SLU	ACTIVE		907-152A00-N01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-152A00-N02-SLU	ACTIVE		907-152A00-N02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-154A00-A02-SLU	ACTIVE		907-154A00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-154A00-N01-SLU	ACTIVE		907-154A00-N01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-154A00-N02-SLU	ACTIVE		907-154A00-N02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-154A00-N03-SLU	ACTIVE		907-154A00-N03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-161A00-A03-SLU	ACTIVE		907-161A00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-162A00-A01-SLU	ACTIVE		907-162A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-163A00-F01-SLU	ACTIVE		907-163A00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-163A00-F02-SLU	ACTIVE		907-163A00-F02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-172A00-A03-SLU	ACTIVE		907-172A00-A03-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-172A00-A06-SLU	ACTIVE		907-172A00-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-173A00-A01-SLU	ACTIVE		907-173A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-173A00-A02-SLU	ACTIVE		907-173A00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-182A00-A15-SLU	ACTIVE		907-182A00-A15-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-183A00-A01-SLU	ACTIVE		907-183A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

907-183A00-A02-SLU	ACTIVE		907-183A00-A02-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-183A00-A06-SLU	ACTIVE		907-183A00-A06-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-183A00-A08	ACTIVE		907-183A00-A08	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-183A00-A09-SLU	ACTIVE		907-183A00-A09-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-192A00-A04-SLU	ACTIVE		907-192A00-A04-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-192A00-A05-SLU	ACTIVE		907-192A00-A05-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-192A00-A06-SLU	ACTIVE		907-192A00-A06-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-192C00-A01	ACTIVE		907-192C00-A01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-193A00-A07-SLU	ACTIVE		907-193A00-A07-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-302A00-A01-SLU	ACTIVE		907-302A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-322A00-A01-SLU	ACTIVE		907-322A00-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-352A00-A01-SLU	ACTIVE		907-352A00-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-372A00-F01-SLU	ACTIVE		907-372A00-F01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
907-383A00-F01-SLU	ACTIVE		907-383A00-F01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
907-392A00-A01-SLU	ACTIVE		907-392A00-A01-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
908-5EPMIX-A02	ACTIVE		908-5EPMIX-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
908-5EPMIX-A60-SLU	ACTIVE		908-5EPMIX-A60-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
908-629011-801-SLU	ACTIVE		908-629011-801-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
908-629032-301-JZI	ACTIVE		908-629032-301-JZI	HW	HWP	99	FLEX HEATERS		0 SL	St. Lucia
908-882P00-Q15-SLU	ACTIVE		908-882P00-Q15-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
908-985004-800-JZI	ACTIVE		908-985004-800-JZI	HW	HWP	99	FLEX HEATERS		0 SL	St. Lucia
908-985005-400-SLU	ACTIVE		908-985005-400-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-103LFV-001-SLU	ACTIVE		909-103LFV-001-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-103LNR-A00	ACTIVE		909-103LNR-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-302LAU-001	ACTIVE		909-302LAU-001	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-312LAB-002	ACTIVE		909-312LAB-002	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-39AA07-103	ACTIVE		909-39AA07-103	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-403KFT-002-SLU	ACTIVE		909-403KFT-002-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
909-59EJ01-001-WRI	ACTIVE		909-59EJ01-001-WRI	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
911-102CAJ-H01	ACTIVE		911-102CAJ-H01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-104KBD-B01	ACTIVE		912-104KBD-B01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-104KBD-B01-P	ACTIVE		912-104KBD-B01-P	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-153HAH-B01	ACTIVE		912-153HAH-B01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-204KNJ-B01	ACTIVE		912-204KNJ-B01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-204KNJ-B01-P	ACTIVE		912-204KNJ-B01-P	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-503JAJ-B01	ACTIVE		912-503JAJ-B01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
912-503JAJ-B01-P	ACTIVE		912-503JAJ-B01-P	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
916-104KA0-A40	ACTIVE		916-104KA0-A40	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
916-105PA0-A40	ACTIVE		916-105PA0-A40	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
916-303JAO-A40	ACTIVE		916-303JAO-A40	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
917-202CBF-P01	ACTIVE		917-202CBF-P01	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
917-202CBF-P01-P	ACTIVE		917-202CBF-P01-P	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
918-202CAG-P02	ACTIVE		918-202CAG-P02	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
918-202CAG-P02-P	ACTIVE		918-202CAG-P02-P	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
919-204KBH-N02	ACTIVE		919-204KBH-N02	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
919-245PCF-N01	ACTIVE		919-245PCF-N01	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
919-245PCF-N01-P	ACTIVE		919-245PCF-N01-P	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
919-245PCF-NA0	ACTIVE		919-245PCF-NA0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
919-295PCF-N01	ACTIVE		919-295PCF-N01	HW	HWD	95	THERMISTORS		0 SL	St. Lucia

919-295PCF-N02	ACTIVE		919-295PCF-N02	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
919-295PCF-N02-P	ACTIVE		919-295PCF-N02-P	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
919-295PCF-NA0	ACTIVE		919-295PCF-NA0	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
919-295PCG-N01	ACTIVE		919-295PCG-N01	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
919-295PCG-N03	ACTIVE		919-295PCG-N03	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
919-295PCG-N04	ACTIVE		919-295PCG-N04	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
919-554NBj-N01	ACTIVE		919-554NBj-N01	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
920-104KAH-Q02-P	ACTIVE		920-104KAH-Q02-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-105PAJ-Q01	ACTIVE		920-105PAJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-105PAJ-Q01-P	ACTIVE		920-105PAJ-Q01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-105PAJ-Q01-SLU	ACTIVE		920-105PAJ-Q01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-105PAJ-Q01-SLU-P	ACTIVE		920-105PAJ-Q01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-105PAJ-Q0A	ACTIVE		920-105PAJ-Q0A	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-152EBF-Q01	ACTIVE		920-152EBF-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-153FBJ-Q01	ACTIVE		920-153FBJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-153FBJ-Q01-P	ACTIVE		920-153FBJ-Q01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-303JAJ-Q00	ACTIVE		920-303JAJ-Q00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-303JAJ-Q01	ACTIVE		920-303JAJ-Q01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-303JAJ-Q01-P	ACTIVE		920-303JAJ-Q01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
920-303JAJ-Q01-WRI	ACTIVE		920-303JAJ-Q01-WRI	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
920-454MBF-Q01	ACTIVE		920-454MBF-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-454MBF-Q01-P	ACTIVE		920-454MBF-Q01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-454MBJ-Q01	ACTIVE		920-454MBJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-503JBF-Q01	ACTIVE		920-503JBF-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-503JBF-Q01-P	ACTIVE		920-503JBF-Q01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-503JBF-Q01-SLU	ACTIVE		920-503JBF-Q01-SLU	HW	HWD	95	THERMISTORS		0	SL	St. Lucia
920-515QBF-Q01	ACTIVE		920-515QBF-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
920-515QBJ-Q01	ACTIVE		920-515QBJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-103FAJ-Q01	ACTIVE		921-103FAJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-104KAH-Q02	ACTIVE		921-104KAH-Q02	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-106QAJ-Q01	ACTIVE		921-106QAJ-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-202EAJ-R02	ACTIVE		921-202EAJ-R02	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-202EAJ-R02-P	ACTIVE		921-202EAJ-R02-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-324MBD-Q01	ACTIVE		921-324MBD-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
921-324MBD-Q01-P	ACTIVE		921-324MBD-Q01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-104XRW-B01	ACTIVE		926-104XRW-B01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-104XRW-B02	ACTIVE		926-104XRW-B02	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-104XRW-B02-P	ACTIVE		926-104XRW-B02-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-153YKD-B01	ACTIVE		926-153YKD-B01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-153YKD-B01-P	ACTIVE		926-153YKD-B01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-153YLS-B01	ACTIVE		926-153YLS-B01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-153YLS-B01-P	ACTIVE		926-153YLS-B01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-202VMV-B01	ACTIVE		926-202VMV-B01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-202VMV-B01-P	ACTIVE		926-202VMV-B01-P	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
926-402VJC-B01	ACTIVE		926-402VJC-B01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
928-104XPD-P01	ACTIVE		928-104XPD-P01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
928-105NTB-Q01	ACTIVE		928-105NTB-Q01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
929-294KBD-P01	ACTIVE		929-294KBD-P01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia
930-204KBG-N01	ACTIVE		930-204KBG-N01	HW	HWF	95	THERMISTORS		0	SL	St. Lucia





935-104LCP-J01	ACTIVE		935-104LCP-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104LCP-J01-P	ACTIVE		935-104LCP-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104LCP-J01-SLU	ACTIVE		935-104LCP-J01-SLU	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104LFW-J02	ACTIVE		935-104LFW-J02	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104LFW-J02-P	ACTIVE		935-104LFW-J02-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104LFW-JXX	ACTIVE		935-104LFW-JXX	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBE-J01	ACTIVE		935-104QBE-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBE-J01-P	ACTIVE		935-104QBE-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBE-J02-C	ACTIVE		935-104QBE-J02-C	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBE-J02-P	ACTIVE		935-104QBE-J02-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBF-J01-P	ACTIVE		935-104QBF-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBP-J01	ACTIVE		935-104QBP-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBP-J01-C	ACTIVE		935-104QBP-J01-C	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBP-J01-P	ACTIVE		935-104QBP-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBW-J01	ACTIVE		935-104QBW-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBW-J01-P	ACTIVE		935-104QBW-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-104QBW-JXX	ACTIVE		935-104QBW-JXX	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-105QAF-J01	ACTIVE		935-105QAF-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-105QVE-J01	ACTIVE		935-105QVE-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-105QVE-J01-P	ACTIVE		935-105QVE-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAC-J01	ACTIVE		935-202FAC-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAD-J01	ACTIVE		935-202FAD-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAD-J01-P	ACTIVE		935-202FAD-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAD-J01-SLU	ACTIVE		935-202FAD-J01-SLU	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAD-J02-P	ACTIVE		935-202FAD-J02-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAD-JXX	ACTIVE		935-202FAD-JXX	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FAF-J01	ACTIVE		935-202FAF-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FUG-J01	ACTIVE		935-202FUG-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-202FUG-J01-P	ACTIVE		935-202FUG-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-203LXW-J01	ACTIVE		935-203LXW-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-222LAD-J01	ACTIVE		935-222LAD-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-222LAD-J01-P	ACTIVE		935-222LAD-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-222LAD-JXX	ACTIVE		935-222LAD-JXX	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-253LAC-J01	ACTIVE		935-253LAC-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-253LAC-J01-P	ACTIVE		935-253LAC-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303KEW-J01	ACTIVE		935-303KEW-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303KEW-J01-P	ACTIVE		935-303KEW-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LAC-J01	ACTIVE		935-303LAC-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LAC-J01-P	ACTIVE		935-303LAC-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LAC-JXX	ACTIVE		935-303LAC-JXX	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LAD-J01	ACTIVE		935-303LAD-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LAD-J01-P	ACTIVE		935-303LAD-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J01	ACTIVE		935-303LBD-J01	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J01-P	ACTIVE		935-303LBD-J01-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J01-SLU	ACTIVE		935-303LBD-J01-SLU	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J02	ACTIVE		935-303LBD-J02	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J02-P	ACTIVE		935-303LBD-J02-P	HW	HWA	95	THERMISTORS		0	SL	St. Lucia
935-303LBD-J02-SLU	ACTIVE		935-303LBD-J02-SLU	HW	HWA	95	THERMISTORS		0	SL	St. Lucia

935-303LBD-JXX	ACTIVE		935-303LBD-JXX	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-313LCC-J01	ACTIVE		935-313LCC-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-313LCC-JXX	ACTIVE		935-313LCC-JXX	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-403LAF-J01	ACTIVE		935-403LAF-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-403LAF-J01-P	ACTIVE		935-403LAF-J01-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-403LAF-JXX	ACTIVE		935-403LAF-JXX	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-502FAF-J01	ACTIVE		935-502FAF-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LAD-J01	ACTIVE		935-503LAD-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LAF-J01	ACTIVE		935-503LAF-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LAF-J01-P	ACTIVE		935-503LAF-J01-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LAG-J01	ACTIVE		935-503LAG-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LAG-J01-P	ACTIVE		935-503LAG-J01-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LBD-J01	ACTIVE		935-503LBD-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LBD-J03	ACTIVE		935-503LBD-J03	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LBD-J03-P	ACTIVE		935-503LBD-J03-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LBF-J02	ACTIVE		935-503LBF-J02	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LBF-J02-P	ACTIVE		935-503LBF-J02-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-503LCF-J01	ACTIVE		935-503LCF-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-505WCG-J01	ACTIVE		935-505WCG-J01	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-505WCG-J01-P	ACTIVE		935-505WCG-J01-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-823LBY-J02	ACTIVE		935-823LBY-J02	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-823LBY-J02-P	ACTIVE		935-823LBY-J02-P	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-823LBY-JXX	ACTIVE		935-823LBY-JXX	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
935-893LHV-JXX	ACTIVE		935-893LHV-JXX	HW	HWA	95	THERMISTORS	0	SL	St. Lucia
937-123ZUC-D01	ACTIVE		937-123ZUC-D01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
937-722ZUC-D01	ACTIVE		937-722ZUC-D01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
940-302LAU-RB1-SLU	ACTIVE		940-302LAU-RB1-SLU	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
940-302LUP-A01	ACTIVE		940-302LUP-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
943-771LBF-A01	ACTIVE		943-771LBF-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
949-132LUP-A00	ACTIVE		949-132LUP-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
949-132LUP-A01	ACTIVE		949-132LUP-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
94SLU00001	ACTIVE		94SLU00001	HU	HUK	85	COMMERCIAL THERMAL	0	SL	St. Lucia
990-102DET-A01	ACTIVE		990-102DET-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LBR-A00-SLU	ACTIVE		990-103LBR-A00-SLU	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LBR-A02	ACTIVE		990-103LBR-A02	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LBR-A02-P	ACTIVE		990-103LBR-A02-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LCC-E02-SLU	ACTIVE		990-103LCC-E02-SLU	HW	HWE	95	THERMISTORS	0	SL	St. Lucia
990-103LDD-A01	ACTIVE		990-103LDD-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LET-A00-SLU	ACTIVE		990-103LET-A00-SLU	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LET-A01	ACTIVE		990-103LET-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LET-A01-P	ACTIVE		990-103LET-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LEV-A00	ACTIVE		990-103LEV-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LEV-A01	ACTIVE		990-103LEV-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LEV-A01-P	ACTIVE		990-103LEV-A01-P	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LEW-A00	ACTIVE		990-103LEW-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LEW-A01	ACTIVE		990-103LEW-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LFT-A00	ACTIVE		990-103LFT-A00	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LFT-A01	ACTIVE		990-103LFT-A01	HW	HWB	95	THERMISTORS	0	SL	St. Lucia
990-103LFT-A02	ACTIVE		990-103LFT-A02	HW	HWB	95	THERMISTORS	0	SL	St. Lucia

990-103LFT-A02-P	ACTIVE		990-103LFT-A02-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LNR-A00	ACTIVE		990-103LNR-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LNR-A01	ACTIVE		990-103LNR-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LST-A00	ACTIVE		990-103LST-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LST-A01	ACTIVE		990-103LST-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LST-A01-P	ACTIVE		990-103LST-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LUP-A00	ACTIVE		990-103LUP-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LUP-A05	ACTIVE		990-103LUP-A05	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LZR-A00	ACTIVE		990-103LZR-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LZR-A01	ACTIVE		990-103LZR-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-103LZR-A01-P	ACTIVE		990-103LZR-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QBW-A00	ACTIVE		990-104QBW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QBW-A01	ACTIVE		990-104QBW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QET-A00-SLU	ACTIVE		990-104QET-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QET-A01	ACTIVE		990-104QET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QET-A01-P	ACTIVE		990-104QET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QET-A02	ACTIVE		990-104QET-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-104QEV-A01	ACTIVE		990-104QEV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-202LCC-D02-SLU	ACTIVE		990-202LCC-D02-SLU	HW	HWE	95	THERMISTORS		0	SL	St. Lucia
990-222LET-A00-SLU	ACTIVE		990-222LET-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-222LET-A01	ACTIVE		990-222LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-222LEW-A01	ACTIVE		990-222LEW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KFT-E00-SLU	ACTIVE		990-303KFT-E00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KFT-E01	ACTIVE		990-303KFT-E01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KFT-E01-P	ACTIVE		990-303KFT-E01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KFT-E02-SLU	ACTIVE		990-303KFT-E02-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KWT-E00	ACTIVE		990-303KWT-E00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KWT-E01	ACTIVE		990-303KWT-E01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KWT-E01-P	ACTIVE		990-303KWT-E01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E00	ACTIVE		990-303KXT-E00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E01	ACTIVE		990-303KXT-E01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E01-P	ACTIVE		990-303KXT-E01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E02	ACTIVE		990-303KXT-E02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303KXT-E02-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303QET-A00	ACTIVE		990-303QET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-303QET-A01	ACTIVE		990-303QET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-501DET-A01	ACTIVE		990-501DET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-501DET-A01-P	ACTIVE		990-501DET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LET-A00	ACTIVE		990-502LET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LET-A01	ACTIVE		990-502LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LET-A01-P	ACTIVE		990-502LET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LET-A01-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LFT-A03	ACTIVE		990-502LFT-A03	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LJS-A01	ACTIVE		990-502LJS-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-502LZT-A01	ACTIVE		990-502LZT-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-503QET-A00	ACTIVE		990-503QET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-503QET-A01-P	ACTIVE		990-503QET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
990-503QET-A01-SLU	ACTIVE		990-503QET-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia

990-503QFT-A01-SLU-P	ACTIVE		990-503QFT-A01-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-503QFT-A00	ACTIVE		990-503QFT-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-503QFT-A01	ACTIVE		990-503QFT-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LFT-D00	ACTIVE		990-602LFT-D00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LFT-D01-SLU	ACTIVE		990-602LFT-D01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LFT-D02	ACTIVE		990-602LFT-D02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LWT-D00-SLU	ACTIVE		990-602LWT-D00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LWT-D01	ACTIVE		990-602LWT-D01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LWT-D01-P	ACTIVE		990-602LWT-D01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LXT-D01-SLU	ACTIVE		990-602LXT-D01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LXT-D02	ACTIVE		990-602LXT-D02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LXT-D02-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-602LXT-DAO-SLU	ACTIVE		990-602LXT-DAO-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
990-652LET-E01-SLU	ACTIVE		990-652LET-E01-SLU	HW	HWE	95	THERMISTORS		0 SL	St. Lucia
990-701DET-D01-SLU	ACTIVE		990-701DET-D01-SLU	HW	HWE	95	THERMISTORS		0 SL	St. Lucia
992-102DET-A00-SLU	ACTIVE		992-102DET-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-102DET-A02-SLU	ACTIVE		992-102DET-A02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-102DET-A02-SLU-P	ACTIVE		992-102DET-A02-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-102DEV-A01-SLU	ACTIVE		992-102DEV-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-102DEV-A01-SLU-P	ACTIVE		992-102DEV-A01-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103HTT-A00-SLU	ACTIVE		992-103HTT-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103HTT-A01	ACTIVE		992-103HTT-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-A00-SLU	ACTIVE		992-103LBR-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-A02	ACTIVE		992-103LBR-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-A03-P	ACTIVE		992-103LBR-A03-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-A03-SLU	ACTIVE		992-103LBR-A03-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-A03-SLU-P	ACTIVE		992-103LBR-A03-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-AB0-SLU	ACTIVE		992-103LBR-AB0-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-AB0	ACTIVE		992-103LBR-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LBR-AB0-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCC-A01-SLU	ACTIVE		992-103LCC-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCC-A01	ACTIVE		992-103LCC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCC-A01-SLU	ACTIVE		992-103LCC-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCY-G00	ACTIVE		992-103LCY-G00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCY-G01	ACTIVE		992-103LCY-G01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCY-G01-P	ACTIVE		992-103LCY-G01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCY-G02	ACTIVE		992-103LCY-G02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LCY-G02-P	ACTIVE		992-103LCY-G02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-A00	ACTIVE		992-103LES-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-A01	ACTIVE		992-103LES-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-A01-P	ACTIVE		992-103LES-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-A02	ACTIVE		992-103LES-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-A02-P	ACTIVE		992-103LES-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LES-AB0	ACTIVE		992-103LES-AB0	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LET-A01	ACTIVE		992-103LET-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LET-A01-P	ACTIVE		992-103LET-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LET-A01-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LET-A02	ACTIVE		992-103LET-A02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
992-103LET-A02-P	ACTIVE		992-103LET-A02-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

992-103LEV-A02	ACTIVE		992-103LEV-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LEW-A00	ACTIVE		992-103LEW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LEW-A02	ACTIVE		992-103LEW-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LEW-A03	ACTIVE		992-103LEW-A03	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LFV-A01	ACTIVE		992-103LFV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LGB-A00	ACTIVE		992-103LGB-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LGB-A01	ACTIVE		992-103LGB-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LGB-A01-P	ACTIVE		992-103LGB-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LJS-A00	ACTIVE		992-103LJS-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LJS-A00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LJS-A01	ACTIVE		992-103LJS-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LJS-A01-P	ACTIVE		992-103LJS-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LJS-A01-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LNR-A01	ACTIVE		992-103LNR-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LNR-A01-P	ACTIVE		992-103LNR-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LST-A00	ACTIVE		992-103LST-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LST-A02	ACTIVE		992-103LST-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LUW-A00	ACTIVE		992-103LUW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LUW-A01-P	ACTIVE		992-103LUW-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LUW-A01-SLU	ACTIVE		992-103LUW-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-103LUW-A01-SLU-P	ACTIVE		992-103LUW-A01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-104QEV-A01-P	ACTIVE		992-104QEV-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-104QEV-A01-SLU	ACTIVE		992-104QEV-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-104QEV-A01-SLU-P	ACTIVE		992-104QEV-A01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-104QEV-A02	ACTIVE		992-104QEV-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-153LUW-A00	ACTIVE		992-153LUW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-153LUW-A01	ACTIVE		992-153LUW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-153LUW-A01-P	ACTIVE		992-153LUW-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-153LUW-A01-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-202LJP-A02	ACTIVE		992-202LJP-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-203LET-A00	ACTIVE		992-203LET-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-203LET-A00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-203LET-A01	ACTIVE		992-203LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-203LET-A01-P	ACTIVE		992-203LET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-203LET-A01-SLU	ACTIVE		CHIP THERMISTOR -K-	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LEW-A01	ACTIVE		992-222LEW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LW-A00	ACTIVE		992-222LW-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LW-A00-SLU	ACTIVE		IN PROCESS THERMISTOR CHIP	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LW-A01	ACTIVE		992-222LW-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LW-A01-SLU	ACTIVE		992-222LW-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LW-A01-SLU-P	ACTIVE		992-222LW-A01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LZT-A00	ACTIVE		992-222LZT-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-222LZT-A01	ACTIVE		992-222LZT-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A00-SLU	ACTIVE		992-302LET-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A01-SLU	ACTIVE		992-302LET-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A03	ACTIVE		992-302LET-A03	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A03-P	ACTIVE		992-302LET-A03-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A03-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A04	ACTIVE		992-302LET-A04	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LET-A04-P	ACTIVE		992-302LET-A04-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia

992-302LEV-A00-SLU	ACTIVE		992-302LEV-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-302LEV-A01-SLU	ACTIVE		992-302LEV-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-303KET-A00-SLU	ACTIVE		992-303KET-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-303KET-A02	ACTIVE		992-303KET-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-303KSR-A01-P	ACTIVE		992-303KSR-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-303KSR-A01-SLU	ACTIVE		992-303KSR-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-303KSR-A01-SLU-P	ACTIVE		992-303KSR-A01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-403KFT-A02	ACTIVE		992-403KFT-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-403KFT-A02-P	ACTIVE		992-403KFT-A02-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LAC-A00	ACTIVE		992-502LAC-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LAC-A01	ACTIVE		992-502LAC-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LES-A00	ACTIVE		992-502LES-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LES-A00-SLU	ACTIVE		992-502LES-A00-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LES-A01	ACTIVE		992-502LES-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LES-A01-P	ACTIVE		992-502LES-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LES-A01-SLU	ACTIVE		992-502LES-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LET-A01	ACTIVE		992-502LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LET-A04	ACTIVE		992-502LET-A04	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LET-A04-P	ACTIVE		992-502LET-A04-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LEV-A00	ACTIVE		992-502LEV-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LEV-A01	ACTIVE		992-502LEV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-502LEV-A01-P	ACTIVE		992-502LEV-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-503QET-A01	ACTIVE		992-503QET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-503QFV-A00	ACTIVE		992-503QFV-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-503QFV-A01	ACTIVE		992-503QFV-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-503QFV-A01-P	ACTIVE		992-503QFV-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-893QCP-A00	ACTIVE		992-893QCP-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
992-893QCP-A01	ACTIVE		992-893QCP-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LET-A01	ACTIVE		994-103LET-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LET-A01-P	ACTIVE		994-103LET-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LET-A01-SLU	ACTIVE		CHIP THERMISTOR	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LET-P01	ACTIVE		994-103LET-P01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LET-P01-P	ACTIVE		994-103LET-P01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LEW-E01	ACTIVE		994-103LEW-E01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LRS-A00	ACTIVE		994-103LRS-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LRS-A01-SLU	ACTIVE		994-103LRS-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
994-103LRS-A02-SLU	ACTIVE		994-103LRS-A02-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAC-A01	ACTIVE		995-103LAC-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAC-A01-P	ACTIVE		995-103LAC-A01-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAF-A00	ACTIVE		995-103LAF-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAF-A01	ACTIVE		995-103LAF-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAF-A01	ACTIVE		995-103LAF-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-103LAF-A02	ACTIVE		995-103LAF-A02	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-104QAG-A01-SLU	ACTIVE		995-104QAG-A01-SLU	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-104QAG-A01-SLU-P	ACTIVE		995-104QAG-A01-SLU-P	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-503QAD-A00	ACTIVE		995-503QAD-A00	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
995-503QAD-A01	ACTIVE		995-503QAD-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
997-103LAC-A01	ACTIVE		997-103LAC-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
997-103LAE-A01	ACTIVE		997-103LAE-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia
997-103LAG-A01	ACTIVE		997-103LAG-A01	HW	HWB	95	THERMISTORS		0	SL	St. Lucia

997-103LBD-B02	ACTIVE		997-103LBD-B02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QAF-A01	ACTIVE		997-104QAF-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBD-B00	ACTIVE		997-104QBD-B00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBD-B02-SLU	ACTIVE		997-104QBD-B02-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBE-A00	ACTIVE		997-104QBE-A00	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBE-A01-P	ACTIVE		997-104QBE-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBE-A01-SLU	ACTIVE		997-104QBE-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-104QBE-A01-SLU-P	ACTIVE		997-104QBE-A01-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-133LAG-A00-SLU	ACTIVE		997-133LAG-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-133LAG-A01	ACTIVE		997-133LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-203LAG-A01	ACTIVE		997-203LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-203LAG-A01	ACTIVE		997-203LAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-222LAD-A01-P	ACTIVE		997-222LAD-A01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
997-302LAC-A01	ACTIVE		997-302LAC-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
998-603QAF-B01	ACTIVE		998-603QAF-B01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-103LAF-B01-P	ACTIVE		999-103LAF-B01-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-103LAF-B01-SLU	ACTIVE		999-103LAF-B01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-103LAF-B01-SLU-P	ACTIVE		999-103LAF-B01-SLU-P	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-103LAJ-A00-SLU	ACTIVE		999-103LAJ-A00-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-103LAJ-A01-SLU	ACTIVE		999-103LAJ-A01-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-104QAG-A01	ACTIVE		999-104QAG-A01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-473QAF-B01	ACTIVE		999-473QAF-B01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-542RBD-B01	ACTIVE		999-542RBD-B01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
999-562FBF-B01	ACTIVE		999-562FBF-B01	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
DA80096-SLU	ACTIVE		DA80096-SLU	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7765	ACTIVE		ESX7765	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7781	ACTIVE		ESX7781	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7783	ACTIVE		ESX7783	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7792	ACTIVE		ESX7792	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7795	ACTIVE		ESX7795	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7807	ACTIVE		ESX7807	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7808	ACTIVE		ESX7808	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7820	ACTIVE		ESX7820	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7832	ACTIVE		ESX7832	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7836	ACTIVE		ESX7836	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7837	ACTIVE		ESX7837	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7838	ACTIVE		ESX7838	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7839	ACTIVE		ESX7839	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7854	ACTIVE		ESX7854	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7855	ACTIVE		ESX7855	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7856	ACTIVE		ESX7856	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7857	ACTIVE		ESX7857	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7858	ACTIVE		ESX7858	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7859	ACTIVE		ESX7859	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7863	ACTIVE		ESX7863	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7864	ACTIVE		ESX7864	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7865	ACTIVE		ESX7865	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7867	ACTIVE		ESX7867	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7872	ACTIVE		ESX7872	HW	HWB	95	THERMISTORS		0 SL	St. Lucia



ESX7873	ACTIVE		ESX7873	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7875	ACTIVE		ESX7875	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7895	ACTIVE		ESX7895	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7896	ACTIVE		ESX7896	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7899	ACTIVE		ESX7899	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7900	ACTIVE		ESX7900	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7901	ACTIVE		ESX7901	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7902	ACTIVE		ESX7902	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7906	ACTIVE		ESX7906	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7911	ACTIVE		ESX7911	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7915	ACTIVE		ESX7915	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7917	ACTIVE		ESX7917	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7923	ACTIVE		ESX7923	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7931	ACTIVE		ESX7931	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7932	ACTIVE		ESX7932	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7941	ACTIVE		ESX7941	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7944	ACTIVE		ESX7944	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7946	ACTIVE		ESX7946	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7948	ACTIVE		ESX7948	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7950	ACTIVE		ESX7950	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7955	ACTIVE		ESX7955	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7966	ACTIVE		ESX7966	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7966A	ACTIVE		ESX7966A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX7986	ACTIVE		ESX7986	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8005	ACTIVE		ESX8005	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8006	ACTIVE		ESX8006	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8015	ACTIVE		ESX8015	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8017	ACTIVE		ESX8017	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8020	ACTIVE		ESX8020	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8021	ACTIVE		ESX8021	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8025	ACTIVE		ESX8025	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8026	ACTIVE		ESX8026	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8032	ACTIVE		ESX8032	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8033	ACTIVE		ESX8033	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8039	ACTIVE		ESX8039	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8040	ACTIVE		ESX8040	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8051	ACTIVE		ESX8051	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8052	ACTIVE		ESX8052	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8053	ACTIVE		ESX8053	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8059	ACTIVE		ESX8059	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8060	ACTIVE		ESX8060	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8063	ACTIVE		ESX8063	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8063A	ACTIVE		ESX8063A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8064	ACTIVE		ESX8064	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8065	ACTIVE		ESX8065	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8066	ACTIVE		ESX8066	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8070	ACTIVE		ESX8070	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8074	ACTIVE		ESX8074	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8075	ACTIVE		ESX8075	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

ESX8081	ACTIVE		ESX8081	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8082	ACTIVE		ESX8082	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8083	ACTIVE		ESX8083	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8094	ACTIVE		ESX8094	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8098	ACTIVE		ESX8098	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8119	ACTIVE		ESX8119	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8121	ACTIVE		ESX8121	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8128	ACTIVE		ESX8128	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8130	ACTIVE		ESX8130	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8130A	ACTIVE		ESX8130A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8137	ACTIVE		ESX8137	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8143	ACTIVE		ESX8143	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8146	ACTIVE		ESX8146	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8147	ACTIVE		ESX8147	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8156	ACTIVE		ESX8156	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8162	ACTIVE		ESX8162	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8163	ACTIVE		ESX8163	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8169	ACTIVE		ESX8169	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8179	ACTIVE		ESX8179	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8180	ACTIVE		ESX8180	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8184	ACTIVE		ESX8184	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8189	ACTIVE		ESX8189	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8197	ACTIVE		ESX8197	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8197A	ACTIVE		ESX8197A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8199	ACTIVE		ESX8199	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8199A	ACTIVE		ESX8199A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8200	ACTIVE		ESX8200	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8201	ACTIVE		ESX8201	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8201A	ACTIVE		ESX8201A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8202	ACTIVE		ESX8202	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8202A	ACTIVE		ESX8202A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8203	ACTIVE		ESX8203	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8203A	ACTIVE		ESX8203A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8205	ACTIVE		ESX8205	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8210	ACTIVE		ESX8210	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8218	ACTIVE		ESX8218	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8220	ACTIVE		ESX8220	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8221	ACTIVE		ESX8221	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8225	ACTIVE		ESX8225	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8227	ACTIVE		ESX8227	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8242	ACTIVE		ESX8242	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8250	ACTIVE		ESX8250	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8260	ACTIVE		ESX8260	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8261	ACTIVE		ESX8261	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8269	ACTIVE		ESX8269	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8275	ACTIVE		ESX8275	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8278	ACTIVE		ESX8278	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8290	ACTIVE		ESX8290	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8312	ACTIVE		ESX8312	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

ESX8322	ACTIVE		ESX8322	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8324	ACTIVE		ESX8324	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8329	ACTIVE		ESX8329	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8339	ACTIVE		ESX8339	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8355	ACTIVE		ESX8355	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8358	ACTIVE		ESX8358	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8397	ACTIVE		ESX8397	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8397A	ACTIVE		ESX8397A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8398	ACTIVE		ESX8398	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8408	ACTIVE		ESX8408	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8409	ACTIVE		ESX8409	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8423	ACTIVE		ESX8423	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8431	ACTIVE		ESX8431	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8440	ACTIVE		ESX8440	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8455	ACTIVE		ESX8455	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8463	ACTIVE		ESX8463	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8463A	ACTIVE		ESX8463A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8463S	ACTIVE		ESX8463S	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8466	ACTIVE		ESX8466	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8467	ACTIVE		ESX8467	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8488	ACTIVE		ESX8488	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8491	ACTIVE		ESX8491	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8497	ACTIVE		ESX8497	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8512	ACTIVE		ESX8512	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8520	ACTIVE		ESX8520	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8522	ACTIVE		ESX8522	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8534	ACTIVE		ESX8534	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8542	ACTIVE		ESX8542	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8546	ACTIVE		ESX8546	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8548	ACTIVE		ESX8548	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8550	ACTIVE		ESX8550	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8558	ACTIVE		ESX8558	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8558A	ACTIVE		ESX8558A	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8561	ACTIVE		ESX8561	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8566	ACTIVE		ESX8566	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8570	ACTIVE		ESX8570	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8571	ACTIVE		ESX8571	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8611	ACTIVE		ESX8611	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8613	ACTIVE		ESX8613	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8617	ACTIVE		ESX8617	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8624	ACTIVE		ESX8624	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8629	ACTIVE		ESX8629	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8630	ACTIVE		ESX8630	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8631	ACTIVE		ESX8631	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8632	ACTIVE		ESX8632	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8633	ACTIVE		ESX8633	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8634	ACTIVE		ESX8634	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8640	ACTIVE		ESX8640	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8644	ACTIVE		ESX8644	HW	HWB	95	THERMISTORS		0 SL	St. Lucia

ESX8645	ACTIVE		ESX8645	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8653	ACTIVE		ESX8653	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8654	ACTIVE		ESX8654	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8655	ACTIVE		ESX8655	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8668	ACTIVE		ESX8668	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8669	ACTIVE		ESX8669	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8675	ACTIVE		ESX8675	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8678	ACTIVE		ESX8678	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8681	ACTIVE		ESX8681	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8682	ACTIVE		ESX8682	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8689	ACTIVE		ESX8689	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8695	ACTIVE		ESX8695	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8706	ACTIVE		ESX8706	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8713	ACTIVE		ESX8713	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8719	ACTIVE		ESX8719	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8721	ACTIVE		ESX8721	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8725	ACTIVE		ESX8725	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8728	ACTIVE		ESX8728	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8729	ACTIVE		ESX8729	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8733	ACTIVE		ESX8733	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX8790	ACTIVE		ESX8790	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
ESX 8864	ACTIVE		ESX 8864	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
FW27507	ACTIVE		FW27507	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
KEN ALDONZA	ACTIVE		KEN ALDONZA	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
PANDUIT P8-12R-T	ACTIVE		PANDUIT P8-12R-T	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
PT102J6	ACTIVE		PT102J6	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
PT203J6	ACTIVE		PT203J6	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
REWORK CHARGE 2	ACTIVE		REWORK CHARGE 2	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
SLU4703	ACTIVE		SLU4703	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
SMALL QTY SU 02	ACTIVE		SMALL QTY SU 02	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X116157-HWG	ACTIVE		X116157-HWG	HW	HWG	95	THERMISTORS		0 SL	St. Lucia
X116158-HWG	ACTIVE		X116158-HWG	HW	HWG	95	THERMISTORS		0 SL	St. Lucia
X116580-HWB	ACTIVE		X116580-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X116590-HWG	ACTIVE		X116590-HWG	HW	HWG	95	THERMISTORS		0 SL	St. Lucia
X116594-HWB	ACTIVE		X116594-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X116604-HWB	ACTIVE		X116604-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X117498-HWG	ACTIVE		X117498-HWG	HW	HWG	95	THERMISTORS		0 SL	St. Lucia
X120979-HWF	ACTIVE		X120979-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X120986-HWF	ACTIVE		X120986-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X121570-HWB	ACTIVE		X121570-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X122581-HWF	ACTIVE		X122581-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X122679-HWF	ACTIVE		X122679-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123037-HWF	ACTIVE		X123037-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123038-HWB	ACTIVE		X123038-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X123176-HWB	ACTIVE		X123176-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X123207-HWF	ACTIVE		X123207-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123209-HWF	ACTIVE		X123209-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123230-HWF	ACTIVE		X123230-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123231-HWF	ACTIVE		X123231-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

X123435-HT	ACTIVE		X123435-HT	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123436-HT	ACTIVE		X123436-HT	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123451-HWF	ACTIVE		X123451-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123515-HWF	ACTIVE		X123515-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X123530-HWF	ACTIVE		X123530-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X124080-HWF	ACTIVE		X124080-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X124081-HWF	ACTIVE		X124081-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X124741-HWB	ACTIVE		X124741-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X124922-HWF	ACTIVE		X124922-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X124940-HWF	ACTIVE		X124940-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X124963-HWB	ACTIVE		X124963-HWB	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
X124968-HWB	ACTIVE		X124968-HWB	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
X124969-HWB	ACTIVE		X124969-HWB	HW	HWD	95	THERMISTORS		0 SL	St. Lucia
X200061-PTNX	ACTIVE		X200061-PTNX	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200112-PTNX	ACTIVE		X200112-PTNX	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200173-HWF	ACTIVE		X200173-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200174-HWF	ACTIVE		X200174-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200226-HWF	ACTIVE		X200226-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200227-HWF	ACTIVE		X200227-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200228-HWF	ACTIVE		X200228-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200255-HWF	ACTIVE		X200255-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200256-HWB	ACTIVE		X200256-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200274-HWF	ACTIVE		X200274-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200326-HWF	ACTIVE		X200326-HWF	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200332-HWB	ACTIVE		X200332-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200362-HWF	ACTIVE		X200362-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200444-HWF	ACTIVE		X200444-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200445-HWB	ACTIVE		X200445-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200446-HWF	ACTIVE		X200446-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200447-HWF	ACTIVE		X200447-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200471-HWB	ACTIVE		X200471-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200482-HWB	ACTIVE		X200482-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200538-HWF	ACTIVE		X200538-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200587-HWB	ACTIVE		X200587-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X200830-HUN	ACTIVE		X200830-HUN	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X200842-DRS	ACTIVE		X200842-DRS	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201019-HWF	ACTIVE		X201019-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201020-HWF	ACTIVE		X201020-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201049-HWF-002	ACTIVE		X201049-HWF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201050-HWF-001	ACTIVE		X201050-HWF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201050-HWF-002	ACTIVE		X201050-HWF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201133-HWF	ACTIVE		X201133-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201140-HWF	ACTIVE		X201140-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201323-HWB	ACTIVE		X201323-HWB	HW	HWB	95	THERMISTORS		0 SL	St. Lucia
X201341-HWF	ACTIVE		X201341-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201432-HWF	ACTIVE		X201432-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201459-HWF	ACTIVE		X201459-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201491-HWF	ACTIVE		X201491-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201605-HWF	ACTIVE		X201605-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

X201630-HWF	ACTIVE		X201630-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201631-HWF	ACTIVE		X201631-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201650-WINL	ACTIVE		X201650-WINL	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201651-WINL	ACTIVE		X201651-WINL	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201680-HWF-001	ACTIVE		X201680-HWF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201680-HWF-002	ACTIVE		X201680-HWF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201680-HWF-003	ACTIVE		X201680-HWF-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201680-HWF-004	ACTIVE		X201680-HWF-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201742-HWF	ACTIVE		X201742-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201743-HWF	ACTIVE		X201743-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201836-ECC-SLU	ACTIVE		X201836-ECC-SLU	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201842-HWB	ACTIVE		X201842-HWB	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201875-HWF	ACTIVE		X201875-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201973-HWF-001	ACTIVE		X201973-HWF-001	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201973-HWF-002	ACTIVE		X201973-HWF-002	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201973-HWF-003	ACTIVE		X201973-HWF-003	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201973-HWF-004	ACTIVE		X201973-HWF-004	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X201997-HWF	ACTIVE		X201997-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X202150-HWF	ACTIVE		X202150-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X202151-HWF	ACTIVE		X202151-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X202448-HWF	ACTIVE		X202448-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X202659-HWF	ACTIVE		X202659-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X202662-HWF	ACTIVE		X202662-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203269-HWF	ACTIVE		X203269-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203270-HWF	ACTIVE		X203270-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X-203305-HWF	ACTIVE		X-203305-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X-203306-HWF	ACTIVE		X-203306-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203383-HWF	ACTIVE		X203383-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203385-HWF	ACTIVE		X203385-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203654-HWF	ACTIVE		X203654-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203668	ACTIVE		X203668	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203669	ACTIVE		X203669	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203964-HWF	ACTIVE		X203964-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X203995-HWF	ACTIVE		X203995-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204047-HWF	ACTIVE		X204047-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204089-HWF	ACTIVE		X204089-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204114-HWF	ACTIVE		X204114-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204267-HWF	ACTIVE		X204267-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204468-HWF	ACTIVE		X204468-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204469-HWF	ACTIVE		X204469-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204523-HWF	ACTIVE		X204523-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204525-HWF	ACTIVE		X204525-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204574-HWF	ACTIVE		X204574-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204755-HWF	ACTIVE		X204755-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204920-HWF	ACTIVE		X204920-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204921-HWF	ACTIVE		X204921-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia
X204926-HWF	ACTIVE		X204926-HWF	HW	HWF	95	THERMISTORS		0 SL	St. Lucia

