 
 


# HIGH FREQUENCY AND PRECISION CONNECTOR ADAPTERS

 
ADAPTERS 50Ω

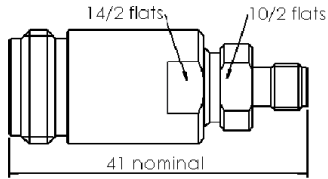


Part number	Interface
R191 330 000	N18 Female - SMA3.5 Female

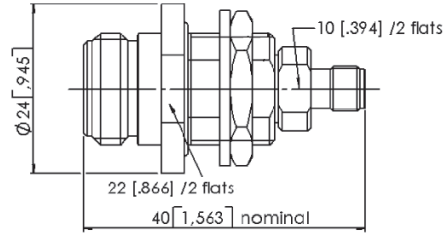


Part number	Interface	Panel drilling
R191 333 000	N18 Female - SMA3.5 Female	P11

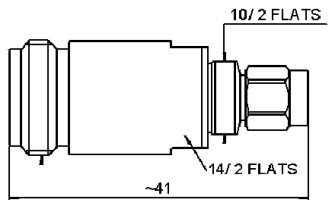


Part number	Interface
R191 326 000	N18 Female - SMA3.5 Male

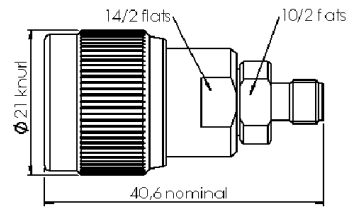 


Part number	Interface
R191 328 000	N18 Male - SMA3.5 Female

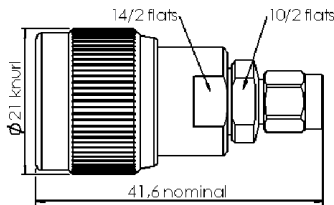 


Part number	Interface
R191 324 000	N18 Male - SMA3.5 Male

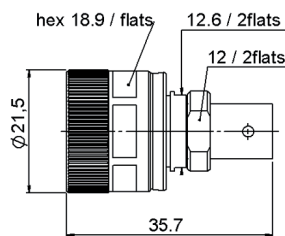 


Part number	Interface
R191 015 000	PC7 - BNC Female

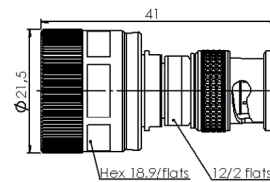 

Part number	Interface
R191 013 000	PC7 - BNC Male

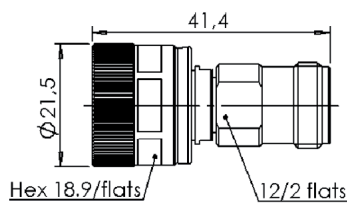 


Part number	Interface
R191 027 000	PC7 - N Female

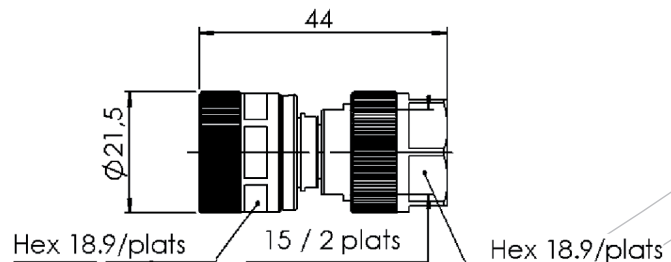 


Part number	Interface
R191 025 000	PC7 - N Male

To download data sheets and assembly instructions, visit [www.radiall.com](http://www.radiall.com) & enter the part number in the Search box.  
**Bold part numbers** represent products typically in stock & available for immediate shipment.  
 See page 8 and 9 for packaging information.

 
HIGH FREQUENCY AND PRECISION CONNECTOR ADAPTERS

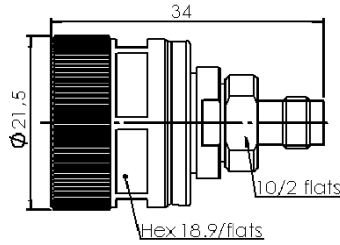


Part number	Interface
R191 011 000	PC7 - SMA Female

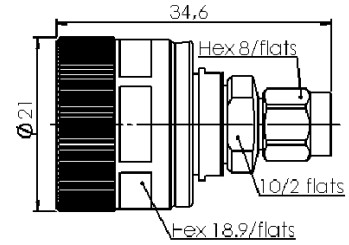 


Part number	Interface
R191 009 000	PC7 - SMA Male

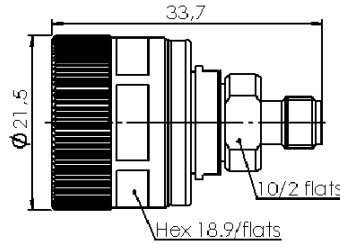 


Part number	Interface
R191 012 000	PC7 - SMA3.5 Female

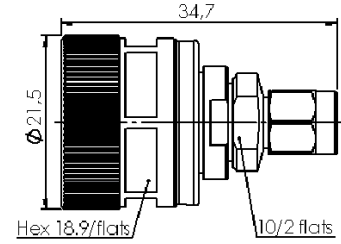 


Part number	Interface
R191 010 000	PC7 - SMA3.5 Male

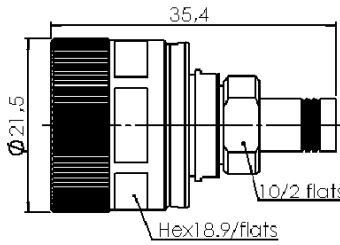 


Part number	Interface
R191 007 000	PC7 - SMB Female

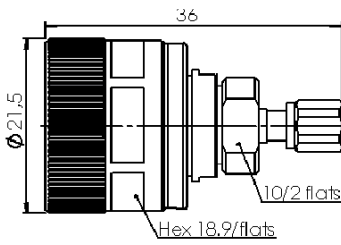 


Part number	Interface
R191 003 000	PC7 - SMC Female

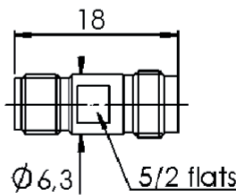 


Part number	Interface
R191 970 091	SMA2.4 Female - SMA2.9 Female

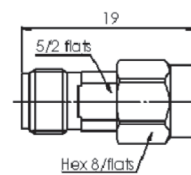 

Part number	Interface
R191 970 071	SMA2.4 Female - SMA2.9 Male

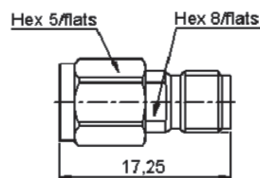 


Part number	Interface
R191 970 081	SMA2.4 Male - SMA2.9 Female

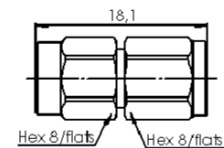 


Part number	Interface
R191 970 061	SMA2.4 Male - SMA2.9 Male

# HIGH FREQUENCY AND PRECISION CONNECTOR ADAPTERS

 
ADAPTERS 50Ω

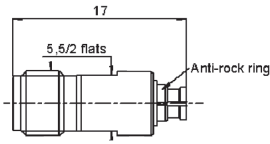


Part number	Interface
R191 969 002	SMA2.9 Female - SMP Female

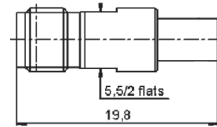 


Part number	Interface
R191 968 001	SMA2.9 Female - SMP Male

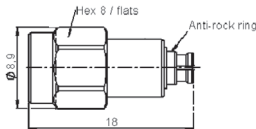 


Part number	Interface
R191 967 002	SMA2.9 Male - SMP Female

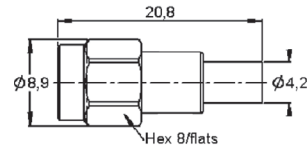 


Part number	Interface
R191 966 001	SMA2.9 Male - SMP Male

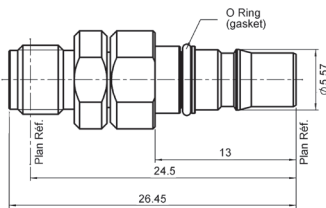 


Part number	Interface
R191 946 700	SMA3.5 Female - QRE Male

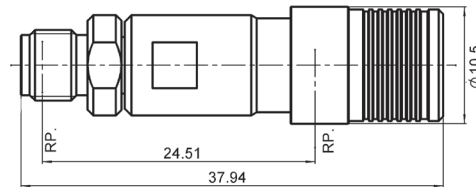 


Part number	Interface
R191 944 700	SMA3.5 Female - QRE Male

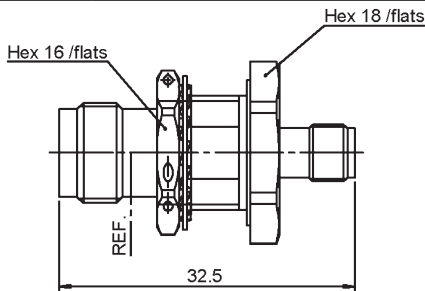 


Part number	Interface	Panel drilling
R191 316 700	TNC18 Female - SMA3.5 Female	P04

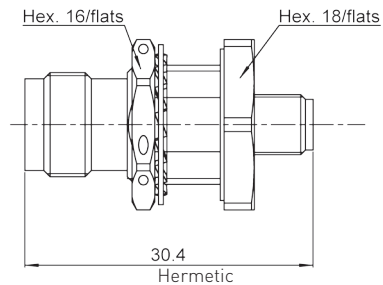 

Part number	Interface	Panel drilling
R191 318 700	TNC18 Female - SMA Female	P04

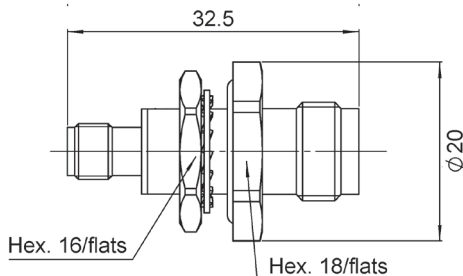 

Part number	Interface	Panel drilling
R191 314 730	SMA Female - TNC18 Female	P08

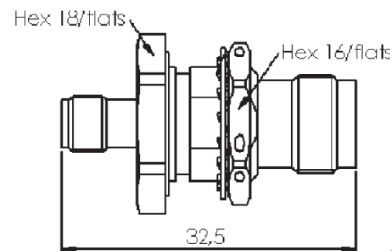 

Part number	Interface	Panel drilling
R191 314 700	SMA Female - TNC18 Female	P04

To download data sheets and assembly instructions, visit [www.radiall.com](http://www.radiall.com) & enter the part number in the Search box.

**Bold part numbers** represent products typically in stock & available for immediate shipment.

See page 8 and 9 for packaging information.