

Contact insert - HC-Q02-I-CT-F - 1419895

Please be informed that the data shown in this PDF Document is generated from our Online Catalog. Please find the complete data in the user's documentation. Our General Terms of Use for Downloads are valid (http://phoenixcontact.com/download)



Contact insert, Size: D7, Number of positions: 2+PE, Socket, Crimp connection, 400 V, 40 A, $1.5 \text{ mm}^2 \dots 6 \text{ mm}^2$, Application: Power



Key Commercial Data

Packing unit	2 STK
Minimum order quantity	2 STK
GTIN	4 055626 256146
GTIN	4055626256146

Technical data

General

Note	for HC-D7 housing, axial connection 2.0 mm, Allen key
Connection method	Crimp connection
Degree of pollution	3
Overvoltage category	III
Number of positions	2+PE
Insertion/withdrawal cycles	≥ 500
Size	D7
Conductor cross section	1.5 mm² 6 mm²
Connection cross section AWG	16 10
Stripping length of the individual wire	9 mm (1.5 6.0 mm²)
	11 mm (for 10 mm²)
Assembly instructions	-The axial screw connection must be established using a 2 mm Allen wrenchUse only stranded wires for axial screw connectionPlug-in connections may only be operated only when there is no load/voltage.
Connection	Note regarding axial connection technology: Only for stranded wires. The specified conductor cross sections refer to the geometric cross section of the cable used.

07/14/2017 Page 1 / 4



Contact insert - HC-Q02-I-CT-F - 1419895

Technical data

General

-	cable's nominal cross section should be checked before use. The wiring space of the axial screw method is established for fine strand cables in accordance with VDE 0295 Class 5. Deviating cable structures (e.g., Class 6 cables) should be checked before use. Assembly instructions Before assembly, ensure that the tapered screw is turned back all the way (chamber is open). The cables must not be twisted. The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE contact as far as possible in a clockwise direction.
cables in accordance with VDE 0295 Class 5. Deviating cable structures (e.g., Class 6 cables) should be checked before use. Assembly instructions Before assembly, ensure that the tapered screw is turned back all the way (chamber is open). The cables must not be twisted. The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	
Assembly instructions Before assembly, ensure that the tapered screw is turned back all the way (chamber is open). The cables must not be twisted. The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	
Before assembly, ensure that the tapered screw is turned back all the way (chamber is open). The cables must not be twisted. The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	,
way (chamber is open). The cables must not be twisted. The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	ı ,
The wires should be inserted as far as they will go into the contact chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	· '
chamber (until the insulation touches the contact). Hold the wires in position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	way (chamber is open). The cables must not be twisted.
position and use the socket wrench to tighten. The used wire end should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	, ,
should be cut off before connecting again. The connection screw may only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	chamber (until the insulation touches the contact). Hold the wires in
only be retightened once to prevent the litz wires from breaking. To prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	position and use the socket wrench to tighten. The used wire end
prevent damage to the contact, the wire/cable should be mechanically intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	should be cut off before connecting again. The connection screw may
intercepted at an appropriate distance from the connection point (e.g., by using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	only be retightened once to prevent the litz wires from breaking. To
using a plate cutout). DIN VDE 0100-520:2003-06 contains information on how to do this correctly. When not using PE contacts: set the PE	prevent damage to the contact, the wire/cable should be mechanically
on how to do this correctly. When not using PE contacts: set the PE	intercepted at an appropriate distance from the connection point (e.g., by
	using a plate cutout). DIN VDE 0100-520:2003-06 contains information
contact as far as possible in a clockwise direction.	on how to do this correctly. When not using PE contacts: set the PE
	contact as far as possible in a clockwise direction.

Ambient conditions

Ambient temperature (operation)	-40 °C 125 °C (including heating up of contacts)
· · · · · · · · · · · · · · · · · · ·	, , , , , , , , , , , , , , , , , , , ,

Material data

Contact material	Copper alloy
Contact surface material	Ag
Contact carrier material	PC

Electrical characteristics

Rated voltage (III/3)	400 V
Rated surge voltage	6 kV
Rated current	40 A

Standards and Regulations

Constructional and testing regulations	DIN VDE 0627/86
	DIN VDE 0110/02.79
	DIN VDE 0110-1/04.97
	IEC 60664-1, DIN IEC 60512
	IEC 60352
Flammability rating according to UL 94	V0

Drawings




Contact insert - HC-Q02-I-CT-F - 1419895

Schematic diagram




Diagram

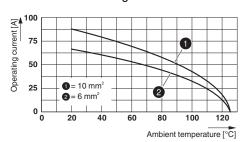

Derating diagram: Series HC-HS2-D7-E...S

Dimensional drawing



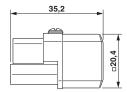

Female insert

Approvals

Approvals

Approvals

EAC

Ex Approvals

Approval details





EAC-Zulassung



Phoenix Contact 2017 © - all rights reserved http://www.phoenixcontact.com

PHOENIX CONTACT GmbH & Co. KG Flachsmarktstr. 8 32825 Blomberg Germany Tel. +49 5235 300

Fax +49 5235 3 41200

http://www.phoenixcontact.com