

## **USB3340**

# **Enhanced Single Supply Hi-Speed USB ULPI Transceiver**

#### **Product Features**

- USB-IF Battery Charging 1.2 Specification Compliant
- Link Power Management (LPM) Specification Compliant
- · Integrated ESD protection circuits
  - Up to ±25kV IEC Air Discharge without external devices
- Over-Voltage Protection circuit (OVP) protects the VBUS pin from continuous DC voltages up to 30V
- Integrated USB Switch
  - Allows single USB port of connection by providing switching function for:
    - -Battery charging
    - -Stereo and mono/mic audio
    - -USB Full-Speed/Low-Speed data
- RapidCharge Anywhere™ Provides:
  - 3-times the charging current through a USB port over traditional solutions
  - USB-IF Battery Charging 1.2 compliance to any portable device
  - Charging current up to 1.5Amps via compatible USB host or dedicated charger
  - Dedicated Charging Port (DCP), Charging (CDP) & Standard (SDP) Downstream Port support
- flexPWR<sup>®</sup> Technology
  - Extremely low current design ideal for battery powered applications
  - "Sleep" mode tri-states all ULPI pins and places the part in a low current state
  - 1.8V to 3.3V IO Voltage
- Single Power Supply Operation
  - Integrated 1.8V regulator
  - Integrated 3.3V regulator
     –100mV dropout voltage
- PHYBoost
  - Programmable USB transceiver drive strength for recovering signal integrity
- VariSense<sup>™</sup>
  - Programmable USB receiver sensitivity
- "Wrapper-less" design for optimal timing performance and design ease
  - Low Latency Hi-Speed Receiver (43 Hi-Speed clocks Max) allows use of legacy UTMI Links with a ULPI bridge

- External Reference Clock operation available
  - ULPI Clock Input Mode (60 MHz sourced by Link)
  - 0 to 3.6V input drive tolerant
  - Able to accept "noisy" clock sources as reference to internal, low-jitter PLL
  - Crystal support available
- Smart detection circuits allow identification of USB charger, headset, or data cable insertion
- Includes full support for the optional On-The-Go (OTG) protocol detailed in the On-The-Go Supplement Revision 2.0 specification
- Supports the OTG Host Negotiation Protocol (HNP) and Session Request Protocol (SRP)
- · UART mode for non-USB serial data transfers
- Internal 5V cable short-circuit protection of ID, DP and DM lines to VBUS or ground
- Industrial Operating Temperature -40°C to +85°C
- 32 pin, QFN RoHS Compliant package (5 x 5 x 0.90 mm height)

## **Applications**

The USB3340 is the solution of choice for any application where a Hi-Speed USB connection is desired and when board space, power, and interface pins must be minimized.

- · Cell Phones
- PDAs
- · MP3 Players
- GPS Personal Navigation
- Scanners
- · External Hard Drives
- · Digital Still and Video Cameras
- · Portable Media Players
- · Entertainment Devices
- Printers
- · Set Top Boxes
- · Video Record/Playback Systems
- · IP and Video Phones
- · Gaming Consoles

#### TO OUR VALUED CUSTOMERS

It is our intention to provide our valued customers with the best documentation possible to ensure successful use of your Microchip products. To this end, we will continue to improve our publications to better suit your needs. Our publications will be refined and enhanced as new volumes and updates are introduced.

If you have any questions or comments regarding this publication, please contact the Marketing Communications Department via E-mail at docerrors@microchip.com. We welcome your feedback.

#### Most Current Data Sheet

To obtain the most up-to-date version of this data sheet, please register at our Worldwide Web site at:

#### http://www.microchip.com

You can determine the version of a data sheet by examining its literature number found on the bottom outside corner of any page. The last character of the literature number is the version number, (e.g., DS30000000A is version A of document DS30000000).

#### **Errata**

An errata sheet, describing minor operational differences from the data sheet and recommended workarounds, may exist for current devices. As device/documentation issues become known to us, we will publish an errata sheet. The errata will specify the revision of silicon and revision of document to which it applies.

To determine if an errata sheet exists for a particular device, please check with one of the following:

- · Microchip's Worldwide Web site; http://www.microchip.com
- Your local Microchip sales office (see last page)

When contacting a sales office, please specify which device, revision of silicon and data sheet (include -literature number) you are using.

#### **Customer Notification System**

Register on our web site at www.microchip.com to receive the most current information on all of our products.

## **Table of Contents**

| 1.0 General Description                 |    |
|---|----|
| 2.0 Pin Locations and Definitions       | 6  |
| 3.0 Limiting Values                     | 9  |
| 4.0 Electrical Characteristics          | 10 |
| 5.0 Architecture Overview               | 18 |
| 6.0 ULPI Operation                      | 36 |
| 7.0 ULPI Register Map                   | 57 |
| 8.0 Application Notes                   | 71 |
| 9.0 Package Outline                     | 76 |
| Appendix A: Data sheet Revision History | 78 |

#### 1.0 GENERAL DESCRIPTION

Microchip's USB3340 is a Hi-Speed USB 2.0 Transceiver that provides a physical layer (PHY) solution well-suited for portable electronic devices. Both commercial and industrial temperature applications are supported.

the Several advanced features make the USB3340 the transceiver of choice by reducing both eBOM part count and printed circuit board (PCB) area. Outstanding ESD robustness eliminates the need for external ESD protection devices in typical applications. The internal Over-Voltage Protection circuit (OVP) protects the USB3340 from voltages up to 30V on the **VBUS** pin. By using a reference clock from the Link, the USB3340 removes the cost of a dedicated crystal reference from the design. The USB3340 includes integrated 3.3V and 1.8V regulators, making it possible to operate the device from a single power supply.

The USB3340 is optimized for use in portable applications where a low operating current and standby currents are essential. The USB3340 operates from a single supply and includes integrated regulators for its supplies. The USB3340 also supports the USB Link Power Management protocol (LPM) to further reduce USB operating currents.

The USB3340 also includes RapidCharge Anywhere which supports USB-IF Battery Charging 1.2 for any portable device. RapidCharge Anywhere provides three times the charging current through a USB port over traditional solutions which translate up to 1.5Amps via compatible USB host or dedicated charger. In addition, this provides a complete USB charging ecosystem between device and host ports such as Dedicated Charging Port (DCP), Charging (CDP) and Standard (SDP) Downstream Ports. Section 5.9, "USB Charger Detection Support," on page 32 describes this is further detail.

The USB3340 meets all of the electrical requirements for a Hi-Speed USB Host, Device, or an On-the-Go (OTG) transceiver. In addition to the supporting USB signaling, the USB3340 also provides USB UART mode and, in versions with the integrated USB switch, USB Audio mode.

USB3340 uses the industry standard UTMI+ Low Pin Interface (ULPI) to connect the USB transceiver to the Link. ULPI uses a method of in-band signaling and status byte transfers between the Link and PHY to facilitate a USB session with only twelve pins.

The USB3340 uses "wrapper-less" technology to implement the ULPI interface. This "wrapper-less" technology allows the PHY to achieve a low latency transmit and receive time. Microchip's low latency transceiver allows an existing UTMI Link to be reused by adding a UTMI to ULPI bridge. By adding a bridge to the ASIC the existing and proven UTMI Link IP can be reused.

The integrated USB switch enables a single USB port of connection.

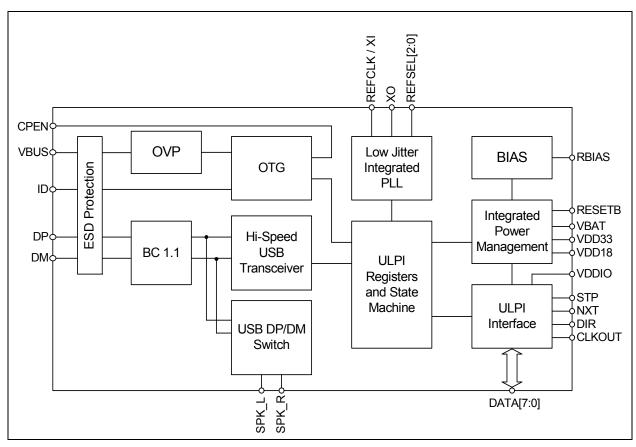


FIGURE 1-1: BLOCK DIAGRAM USB3340

In USB audio mode, a switch connects the **DP** pin to the **SPK\_R** pin, and another switch connects he **DM** pin to the **SPK\_L** pin. These switches are shown in the lower left-hand corner of .The USB3340 can be configured to enter USB audio mode as described in Section 6.7.2, "USB Audio Mode," on page 55. In addition, these switches are on when the **RESETB** pin of the USB3340 is asserted. The USB audio mode enables audio signaling from a single USB port of connection, and the switches may also be used to connect Full Speed USB from another transceiver to the USB connector.

The USB3340 includes an integrated 3.3V LDO regulator that is used to generate 3.3V from power applied to the **VBAT** pin. The voltage on the **VBAT** pin can range from 3.0 to 5.5V. The regulator dropout voltage is less than 100mV which allows the PHY to continue USB signaling when the voltage on **VBAT** drops to 3.0V. The USB transceiver will continue to operate at lower voltages, although some parameters may be outside the limits of the USB specifications. The **VBAT** and **VDD33** pins should *never* be connected together.

In USB UART mode, the USB3340 **DP** and **DM** pins are redefined to enable pass-through of asynchronous serial data. The USB3340 will enter UART mode when programmed, as described in Section 6.7.1, "Entering USB UART Mode," on page 54.


#### 2.0 PIN LOCATIONS AND DEFINITIONS

## 2.1 USB3340 Pin Locations and Descriptions

#### 2.1.1 USB3340 PIN DIAGRAM AND PIN DEFINITIONS

The illustration below is viewed from the top of the package.

FIGURE 2-1: USB3340 PIN LOCATIONS - TOP VIEW

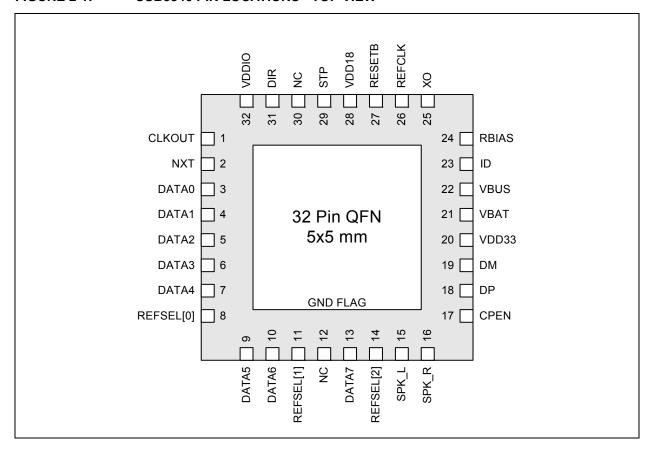

The following table details the pin definitions for the figure above.

TABLE 2-1: USB3340 PIN DESCRIPTIONS

| Pin | Name    | Direction/<br>Type | Active<br>Level | Description  |
|-----|---------|--------------------|-----------------|--|
| 1   | CLKOUT  | Output,<br>CMOS    | N/A             | ULPI Clock Out Mode: 60 MHz ULPI clock output. All ULPI signals are driven synchronous to the rising edge of this clock. ULPI Clock In Mode: Connect this pin to VDDIO to configure 60 MHz ULPI Clock IN mode as described in Section 5.5.1, "REFCLK Frequency Selection," on page 21. |
| 2   | NXT     | Output,<br>CMOS    | High            | The PHY asserts <b>NXT</b> to throttle the data. When the Link is sending data to the PHY, <b>NXT</b> indicates when the current byte has been accepted by the PHY.  |
| 3   | DATA[0] | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus. DATA[0] is the LSB.  |

TABLE 2-1: USB3340 PIN DESCRIPTIONS (CONTINUED)

| Pin | Name      | Direction/<br>Type | Active<br>Level | Description   |
|-----|-----------|--------------------|-----------------|---|
| 4   | DATA[1]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 5   | DATA[2]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 6   | DATA[3]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 7   | DATA[4]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 8   | REFSEL[0] | Input              | N/A             | Used to select xtal/reference frequency. This pad is connected to <b>VDDIO</b> or <b>GND</b> .  |
| 9   | DATA[5]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 10  | DATA[6]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus.   |
| 11  | REFSEL[1] | Input              | N/A             | Used to select xtal/reference frequency. This pad is connected to <b>VDDIO</b> or <b>GND</b> .  |
| 12  | NC        | N/A                | N/A             | No connect. Leave pin floating.   |
| 13  | DATA[7]   | I/O,<br>CMOS       | N/A             | ULPI bi-directional data bus. DATA[7] is the MSB.   |
| 14  | REFSEL[2] | Input              | N/A             | Used to select xtal/reference frequency. This pad is connected to <b>VDDIO</b> or <b>GND</b> .  |
| 15  | SPK_L     | I/O,<br>Analog     | N/A             | USB switch in/out for <b>DM</b> signals.  |
| 16  | SPK_R     | I/O,<br>Analog     | N/A             | USB switch in/out for <b>DP</b> signals.  |
| 17  | CPEN      | Output,<br>CMOS    | High            | External 5 volt supply enable. This pin is used to enable the external Vbus power supply. The <b>CPEN</b> pin is low on POR. This pad uses VDD33 logic level.                                       |
| 18  | DP        | I/O,<br>Analog     | N/A             | D+ pin of the USB cable.  |
| 19  | DM        | I/O,<br>Analog     | N/A             | D- pin of the USB cable.  |
| 20  | VDD33     | Power              | N/A             | 3.3V Regulator Output. A 1.0 $\mu$ F (<1 $\Omega$ ESR) bypass capacitor to ground is required for regulator stability. The bypass capacitor should be placed as close as possible to the USB3340.   |
| 21  | VBAT      | Power              | N/A             | Regulator input. The regulator supply can be from 5.5V to 3.0V.   |
| 22  | VBUS      | I/O,<br>Analog     | N/A             | This pin is used for the VBUS comparator inputs and for VBUS pulsing during session request protocol. An external resistor, R <sub>VBUS</sub> , is required between this pin and the USB connector. |

## **USB3340**

TABLE 2-1: USB3340 PIN DESCRIPTIONS (CONTINUED)

| Pin  | Name   | Direction/<br>Type | Active<br>Level | Description   |
|------|--------|--------------------|-----------------|---|
| 23   | ID     | Input,<br>Analog   | N/A             | For device applications the <b>ID</b> pin is connected to <b>VDD33</b> . For Host applications <b>ID</b> is grounded. For OTG applications the <b>ID</b> pin is connected to the USB connector.   |
| 24   | RBIAS  | Analog,<br>CMOS    | N/A             | Bias Resistor pin. This pin requires an $8.06~\text{k}\Omega$ ( $\pm 1\%$ ) resistor to ground, placed as close as possible to the USB3340. Nominal voltage during ULPI operation is $0.8\text{V}$ .  |
| 25   | хо     | Output,<br>Analog  | N/A             | Crystal pin. If using an external clock on XI this pin should be floated.   |
| 26   | REFCLK | Input,<br>CMOS     | N/A             | ULPI Clock Out Mode: Model-specific reference clock or XI (crystal in) pin. See Example a, Product Identification System on page 80. ULPI Clock In Mode: 60 MHz ULPI clock input.   |
| 27   | RESETB | Input,<br>CMOS,    | Low             | When low, the part is suspended and the 3.3V and 1.8V regulators are disabled. When high, the USB3340 will operate as a normal ULPI device, as described in Section 5.6.2, "Power On Reset (POR)," on page 25. The state of this pin may be changed asynchronously to the clock signals. When asserted for a minimum of 1 microsecond and then deasserted, the ULPI registers are reset to their default state and all internal state machines are reset. |
| 28   | VDD18  | Power              | N/A             | 1.8V Regulator Output. A 1.0 $\mu$ F (<1 $\Omega$ ESR) bypass capacitor to ground is required for regulator stability. The bypass capacitor should be placed as close as possible to the USB3340.   |
| 29   | STP    | Input,<br>CMOS     | High            | The Link asserts <b>STP</b> for one clock cycle to stop the data stream currently on the bus. If the Link is sending data to the PHY, <b>STP</b> indicates the last byte of data was on the bus in the previous cycle.  |
| 30   | NC     | N/A                | N/A             | No connect.   |
| 31   | DIR    | Output,<br>CMOS    | N/A             | Controls the direction of the data bus. When the PHY has data to transfer to the Link, it drives <b>DIR</b> high to take ownership of the bus. When the PHY has no data to transfer it drives <b>DIR</b> low and monitors the bus for commands from the Link.   |
| 32   | VDDIO  | Power              | N/A             | ULPI interface supply voltage. When RESETB is low and VDDIO is powered on, ULPI pins will tri-state.  |
| FLAG | GND    | Ground             | N/A             | Ground.   |

## 3.0 LIMITING VALUES

## 3.1 Absolute Maximum Ratings

TABLE 3-1: ABSOLUTE MAXIMUM RATINGS

| Parameter   | Symbol               | Conditions   | MIN  | TYP | MAX                     | Units |
|---|----------------------|--|------|-----|-------------------------|-------|
| VBUS, VBAT, ID, DP, DM,<br>SPK_L, and SPK_R<br>voltage to GND | V <sub>MAX_5V</sub>  | Voltage measured at pin. <b>VBUS</b> tolerant to 30V with external R <sub>VBUS</sub> . | -0.5 |     | +6.0                    | V     |
| Maximum <b>VDD18</b> voltage to Ground                        | V <sub>MAX_18V</sub> |  | -0.5 |     | 2.5                     | V     |
| Maximum VDD33 voltage to Ground                               | V <sub>MAX_33V</sub> |  | -0.5 |     | 4.0                     | V     |
| Maximum <b>VDDIO</b> voltage to Ground                        | V <sub>MAX_IOV</sub> |  | -0.5 |     | 4.0                     | V     |
| Maximum I/O voltage to Ground                                 | V <sub>MAX_IN</sub>  |  | -0.5 |     | V <sub>DDIO</sub> + 0.7 |       |
| Operating Temperature   | T <sub>MAX_OP</sub>  |  | -40  |     | 85                      | С     |
| Storage Temperature   | T <sub>MAX_STG</sub> |  | -55  |     | 150                     | С     |

**Note:** Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

## 3.2 Recommended Operating Conditions

TABLE 3-2: RECOMMENDED OPERATING CONDITIONS

| Parameter   | Symbol              | Conditions | MIN | TYP     | MAX               | Units |
|---|---------------------|------------|-----|---------|-------------------|-------|
| VBAT to GND   | V <sub>BAT</sub>    |            | 3.0 |         | 5.5               | V     |
| VDD33 to GND  | V <sub>DD33</sub>   |            | 3.0 | 3.3     | 3.6               | V     |
| VDD18 to GND  | V <sub>DD18</sub>   |            | 1.6 | 1.8     | 2.0               | V     |
| VDDIO to GND  | V <sub>DDIO</sub>   |            | 1.6 | 1.8-3.3 | 3.6               | V     |
| Input Voltage on Digital Pins (RESETB, STP, DIR, NXT, DATA[7:0])  | V <sub>I</sub>      |            | 0.0 |         | V <sub>DDIO</sub> | V     |
| Voltage on Analog I/O<br>Pins (DP, DM, ID, CPEN,<br>SPK_L, SPK_R) | V <sub>I(I/O)</sub> |            | 0.0 |         | V <sub>DD33</sub> | V     |
| VBUS to GND   | V <sub>VMAX</sub>   |            | 0.0 |         | 5.5               | V     |
| Ambient Temperature   | T <sub>A</sub>      |            | -40 |         | 85                | С     |

#### 4.0 ELECTRICAL CHARACTERISTICS

The following conditions are assumed unless otherwise specified:

 $V_{DD33}$  = 3.0 to 3.6V; VDD18 = 1.6 to 2.0V;  $V_{SS}$  = 0V;  $T_A$  = -40C to +85C

## 4.1 Operating Current

**TABLE 4-1: OPERATING CURRENT** 

| Parameter  | Symbol                                   | Conditions                              | MIN | TYP  | MAX   | Units |
|--|--|---|-----|------|---|-------|
| Synchronous Mode Current (Default Configuration) | I <sub>VBAT(SYNC)</sub>                  | USB Idle                                | 18  | 22   | 24  | mA    |
| (Delault Corniguration)                          | I <sub>VIO(SYNC)</sub>                   |   | 1   | 2    | 22 24<br>2 5<br>35 37<br>6 14<br>28.5 30<br>5 13<br>8 9<br>0.1 0.7<br>8 9<br>0.1 0.7<br>32 83 | mA    |
| Synchronous Mode Current (HS USB operation)      | I <sub>VBAT(HS)</sub>                    | Active USB Transfer                     | 33  | 35   | 37  | mA    |
| (No dob operation)                               | I <sub>VIO(HS)</sub>                     |   | 5   | 6    | 14  | mA    |
| Synchronous Mode Current (FS/LS USB operation)   | I <sub>VBAT(FS)</sub>                    | Active USB Transfer                     | 25  | 28.5 | 30  | mA    |
| (1 3/L3 03B operation)                           | I <sub>VIO(FS)</sub>                     | 4 5                                     | 5   | 13   | mA  |       |
| Serial Mode Current<br>(FS/LS USB)               | I <sub>VBAT(FS_S)</sub>                  |   | 7   | 8    | 9 r   | mA    |
| Note 4-1   | I <sub>VIO(FS_S)</sub>                   |   | 0   | 0.1  | 0.7   | mA    |
| USB UART Current<br>Note 4-1                     | I <sub>VBAT(UART)</sub>                  |   | 7   | 8    | 9   | mA    |
| Note 4-1   | I <sub>VIO(UART)</sub>                   |   | 0   | 0.1  | 0.7   | mA    |
| Low Power Mode<br>Note 4-2                       | I <sub>VBAT(SUSPEND)</sub>               | V <sub>VBAT</sub> = 4.2V                | 29  | 32   | 83  | uA    |
| Note 4-2<br>Note 4-3                             | $I_{VIO(SUSPEND)} V_{VDDIO} = 1.8V $ 0 0 | 0                                       | 2   | uA   |   |       |
| RESET Mode<br>Note 4-3                           | I <sub>VBAT(RSTB)</sub>                  | <b>RESETB</b> = 0                       | 0.1 | 1    | 12  | uA    |
| 14010 4 0  | I <sub>VIO(RSTB)</sub>                   | $V_{VBAT} = 4.2V$<br>$V_{VDDIO} = 1.8V$ | 0   | 0    | 7   | uA    |

Note 4-1 ClockSuspendM bit = 0.

Note 4-2 SessEnd, VbusVld, and IdFloat comparators disabled. STP Interface protection disabled.

Note 4-3 REFCLK is OFF

## 4.2 Clock Specifications

The model number for each frequency of REFCLK is provided in "Product Identification System".

TABLE 4-2: CLOCK SPECIFICATIONS

| Parameter                                    | Symbol                 | Conditions     | MIN | TYP | MAX | Units |
|--|------------------------|----------------|-----|-----|-----|-------|
| Suspend Recovery Time                        | T <sub>START</sub>     | LPM Enable = 0 | 1.0 | 1.1 | 1.2 | ms    |
|  | T <sub>START_LPM</sub> | LPM Enable = 1 | 125 |     | 150 | uS    |
| PHY Preparation Time<br>60 MHz <b>REFCLK</b> | T <sub>PREP</sub>      | LPM Enable = 0 | 1.0 | 1.1 | 1.2 | ms    |
| OO WILL REFORM                               | T <sub>PREP_LPM</sub>  | LPM Enable = 1 | 125 |     | 150 | uS    |

TABLE 4-2: CLOCK SPECIFICATIONS (CONTINUED)

| Parameter                 | Symbol               | Conditions            | MIN  | TYP | MAX  | Units |
|---------------------------|----------------------|-----------------------|------|-----|------|-------|
| CLKOUT Duty Cycle         | DC <sub>CLKOUT</sub> | ULPI Clock Input Mode | 45   |     | 55   | %     |
| REFCLK Duty Cycle         | DC <sub>REFCLK</sub> |                       | 20   |     | 80   | %     |
| REFCLK Frequency Accuracy | F <sub>REFCLK</sub>  |                       | -500 |     | +500 | PPM   |

#### Note:

## 4.3 ULPI Interface Timing

TABLE 4-3: ULPI INTERFACE TIMING

| Parameter                                  | Symbol                            | Conditions            | MIN | MAX | Units |  |  |  |
|--|-----------------------------------|-----------------------|-----|-----|-------|--|--|--|
| 60 MHz ULPI Output Clock Note 4-4          |                                   |                       |     |     |       |  |  |  |
| Setup time (STP, data in)                  | T <sub>SC</sub> , T <sub>SD</sub> | Model-specific REFCLK | 5.0 |     | ns    |  |  |  |
| Hold time (STP, data in)                   | T <sub>HC</sub> , T <sub>HD</sub> | Model-specific REFCLK | 0.0 |     | ns    |  |  |  |
| Output delay (control out, 8-bit data out) | T <sub>DC</sub> , T <sub>DD</sub> | Model-specific REFCLK | 1.5 | 6   | ns    |  |  |  |
| 60 MHz ULPI Input Clock                    |                                   |                       |     |     |       |  |  |  |
| Setup time (STP, data in)                  | T <sub>SC</sub> , T <sub>SD</sub> | 60 MHz REFCLK         | 3   |     | ns    |  |  |  |
| Hold time (STP, data in)                   | T <sub>HC</sub> , T <sub>HD</sub> | 60 MHz <b>REFCLK</b>  | 0   |     | ns    |  |  |  |
| Output delay (control out, 8-bit data out) | T <sub>DC</sub> , T <sub>DD</sub> | 60 MHz REFCLK         | 0.5 | 6.0 | ns    |  |  |  |

**Note:**  $C_{Load} = 10pF$ 

Note 4-4 REFCLK does not need to be aligned in any way to the ULPI signals.

## 4.4 Digital IO Pins

TABLE 4-4: DIGITAL IO CHARACTERISTICS: RESETB, CPEN, STP, DIR, NXT, DATA[7:0], AND REFCLK PINS

| Parameter                                  | Symbol              | Conditions             | MIN                         | TYP | MAX               | Units |
|--|---------------------|------------------------|-----------------------------|-----|-------------------|-------|
| Low-Level Input Voltage                    | V <sub>IL</sub>     |                        | V <sub>SS</sub>             |     | 0.8               | ٧     |
| High-Level Input Voltage                   | V <sub>IH</sub>     |                        | 0.68 *<br>V <sub>DDIO</sub> |     | V <sub>DDIO</sub> | V     |
| High-Level Input Voltage REFCLK and RESETB | V <sub>IH_REF</sub> |                        | 0.68 *<br>V <sub>DDIO</sub> |     | V <sub>DD33</sub> | V     |
| Low-Level Output Voltage                   | V <sub>OL</sub>     | I <sub>OL</sub> = 8mA  |                             |     | 0.4               | ٧     |
| High-Level Output Voltage                  | V <sub>OH</sub>     | I <sub>OH</sub> = -8mA | V <sub>DDIO</sub> -<br>0.4  |     |                   | ٧     |

T<sub>START</sub> and T<sub>PREP</sub> are measured from the time when REFCLK and RESETB are both valid to when the USB3340 de-asserts DIR.

<sup>•</sup> The USB3340 uses the *AutoResume* feature, Section 6.4.1.4, "Host Resume K," on page 47, to allow a host start-up time of less than 1ms.

TABLE 4-4: DIGITAL IO CHARACTERISTICS: RESETB, CPEN, STP, DIR, NXT, DATA[7:0], AND REFCLK PINS (CONTINUED)

| Parameter                      | Symbol               | Conditions                     | MIN                        | TYP  | MAX                        | Units |
|--------------------------------|----------------------|--------------------------------|----------------------------|------|----------------------------|-------|
| High-Level Output Voltage CPEN | V <sub>OH</sub>      | I <sub>OH</sub> = -8mA         | V <sub>DD33</sub><br>- 0.4 |      |                            | V     |
| Output rise time               | T <sub>IORISE</sub>  | C <sub>LOAD</sub> = 10pF       |                            | 1.19 |                            | nS    |
| Output fall time               | T <sub>IOFALL</sub>  | C <sub>LOAD</sub> = 10pF       |                            | 1.56 |                            | nS    |
| Input Leakage Current          | I <sub>LI</sub>      |                                |                            |      | ±10                        | uA    |
| Pin Capacitance                | Cpin                 |                                |                            |      | 4                          | pF    |
| STP pull-up resistance         | R <sub>STP</sub>     | InterfaceProtectDisable = 0    | 55                         | 67   | 80                         | kΩ    |
| DATA[7:0] pull-down resistance | R <sub>DATA_PD</sub> | ULPI Synchronous Mode          | 55                         | 67   | 77                         | kΩ    |
| CLKOUT External Drive          | V <sub>IH_ED</sub>   | At start-up or following reset |                            |      | 0.4 *<br>V <sub>DDIO</sub> | V     |

## 4.5 DC Characteristics: Analog I/O Pins

TABLE 4-5: DC CHARACTERISTICS: ANALOG I/O PINS (DP/DM)

| Parameter   | Symbol             | Conditions  | MIN   | TYP | MAX   | Units |
|---|--------------------|---|-------|-----|-------|-------|
| LS/FS FUNCTIONALITY                               |                    |   |       |     |       |       |
| Input levels                                      |                    |   |       |     |       |       |
| Differential Receiver Input<br>Sensitivity        | V <sub>DIFS</sub>  | V(DP) - V(DM)   | 0.2   |     |       | V     |
| Differential Receiver<br>Common-Mode Voltage      | V <sub>CMFS</sub>  |   | 0.8   |     | 2.5   | V     |
| Single-Ended Receiver Low<br>Level Input Voltage  | V <sub>ILSE</sub>  | Note 4-6  |       |     | 0.8   | V     |
| Single-Ended Receiver High<br>Level Input Voltage | V <sub>IHSE</sub>  | Note 4-6  | 2.0   |     |       | V     |
| Single-Ended Receiver<br>Hysteresis               | V <sub>HYSSE</sub> |   | 0.050 |     | 0.150 | V     |
| Output Levels                                     |                    |   |       |     |       |       |
| Low Level Output Voltage                          | V <sub>FSOL</sub>  | Pull-up resistor on DP;<br>R <sub>L</sub> = 1.5kΩ to $V_{DD33}$ |       |     | 0.3   | V     |
| High Level Output Voltage                         | V <sub>FSOH</sub>  | Pull-down resistor on DP, DM; Note 4-6 $R_L = 15k\Omega$ to GND | 2.8   |     | 3.6   | V     |
| Termination                                       |                    |   |       |     |       |       |
| Driver Output Impedance for HS                    | Z <sub>HSDRV</sub> | Steady state drive  | 40.5  | 45  | 49.5  | Ω     |
| Input Impedance                                   | Z <sub>INP</sub>   | RX, RPU, RPD disabled   | 1.0   |     |       | ΜΩ    |

TABLE 4-5: DC CHARACTERISTICS: ANALOG I/O PINS (DP/DM) (CONTINUED)

| Parameter  | Symbol              | Conditions   | MIN   | TYP  | MAX   | Units |
|--|---------------------|--|-------|------|-------|-------|
| Pull-up Resistor Impedance   | R <sub>PU</sub>     | Bus Idle, Note 4-5   | 0.900 | 1.24 | 1.575 | kΩ    |
| Pull-up Resistor Impedance   | R <sub>PU</sub>     | Device Receiving, Note 4-5   | 1.425 | 2.26 | 3.09  | kΩ    |
| Pull-dn Resistor Impedance   | R <sub>PD</sub>     | Note 4-5   | 14.25 | 16.9 | 20    | kΩ    |
| HS FUNCTIONALITY   |                     |  |       |      |       |       |
| Input levels   |                     |  |       |      |       |       |
| HS Differential Input<br>Sensitivity                                 | V <sub>DIHS</sub>   | V(DP) - V(DM)  | 100   |      |       | mV    |
| HS Data Signaling Common<br>Mode Voltage Range                       | V <sub>CMHS</sub>   |  | -50   |      | 500   | mV    |
| HS Squelch Detection<br>Threshold (Differential)                     | V <sub>HSSQ</sub>   | VariSense[1:0] = 00b<br>Note 4-7   | 100   |      | 150   | mV    |
| HS Disconnect Threshold  | V <sub>HSDSC</sub>  |  | 525   |      | 625   | mV    |
| Output Levels  |                     |  |       |      |       |       |
| High Speed Low Level<br>Output Voltage (DP/DM<br>referenced to GND)  | V <sub>HSOL</sub>   | 45Ω load   | -10   |      | 10    | mV    |
| High Speed High Level<br>Output Voltage (DP/DM<br>referenced to GND) | V <sub>HSOH</sub>   | 45Ω load   | 360   |      | 440   | mV    |
| High Speed IDLE Level<br>Output Voltage (DP/DM<br>referenced to GND) | V <sub>OLHS</sub>   | 45Ω load   | -10   |      | 10    | mV    |
| Chirp-J Output Voltage (Differential)                                | V <sub>CHIRPJ</sub> | HS termination resistor disabled, pull-up resistor connected. $45\Omega$ load. | 700   |      | 1100  | mV    |
| Chirp-K Output Voltage (Differential)                                | V <sub>CHIRPK</sub> | HS termination resistor disabled, pull-up resistor connected. 45Ω load.        | -900  |      | -500  | mV    |
| Leakage Current  |                     |  |       |      |       |       |
| OFF-State Leakage Current  | I <sub>LZ</sub>     |  |       |      | ±10   | uA    |
| Port Capacitance   |                     |  |       |      |       |       |
| Transceiver Input<br>Capacitance                                     | C <sub>IN</sub>     | Pin to GND   |       | 5    | 10    | pF    |

- Note 4-5 The resistor value follows the 27% Resistor ECN published by the USB-IF.
- Note 4-6 The values shown are valid when the *USB RegOutput* bits in the USB IO & Power Management register are set to the default value.
- An automatic waiver up to 200mV is granted to accommodate system-level elements such as measurement/test fixtures, captive cables, EMI components, and ESD suppression. This parameter can be tuned using VariSense technology, as defined in Section 7.1.3.1, "HS Compensation Register," on page 66 of Section 7.0, ULPI Register Map.

## 4.6 Dynamic Characteristics: Analog I/O Pins

TABLE 4-6: DYNAMIC CHARACTERISTICS: ANALOG I/O PINS (DP/DM)

| Parameter   | Symbol            | Conditions   | MIN | TYP | MAX   | Units |
|---|-------------------|--|-----|-----|-------|-------|
| FS Output Driver Timing                             |                   |  |     |     |       |       |
| FS Rise Time  | T <sub>FR</sub>   | C <sub>L</sub> = 50pF; 10 to 90% of  V <sub>OH</sub> - V <sub>OL</sub> | 4   |     | 20    | ns    |
| FS Fall Time  | T <sub>FF</sub>   | C <sub>L</sub> = 50pF; 10 to 90% of  V <sub>OH</sub> - V <sub>OL</sub> | 4   |     | 20    | ns    |
| Output Signal Crossover<br>Voltage                  | V <sub>CRS</sub>  | Excluding the first transition from IDLE state                         | 1.3 |     | 2.0   | V     |
| Differential Rise/Fall Time<br>Matching             | T <sub>FRFM</sub> | Excluding the first 90 transition from IDLE state                      |     |     | 111.1 | %     |
| LS Output Driver Timing                             |                   |  |     |     |       |       |
| LS Rise Time  | T <sub>LR</sub>   | $C_L = 50-600pF;$<br>10 to 90% of $ V_{OH} - V_{OL} $                  | 75  |     | 300   | ns    |
| LS Fall Time  | T <sub>LF</sub>   | $C_L = 50-600 pF;$<br>10 to 90% of $ V_{OH} - V_{OL} $                 | 75  | 75  |       | ns    |
| Differential Rise/Fall Time<br>Matching             | T <sub>LRFM</sub> | Excluding the first transition from IDLE state                         | 80  |     | 125   | %     |
| HS Output Driver Timing                             |                   |  |     |     |       |       |
| Differential Rise Time                              | T <sub>HSR</sub>  |  | 500 |     |       | ps    |
| Differential Fall Time                              | T <sub>HSF</sub>  |  | 500 |     |       | ps    |
| Driver Waveform<br>Requirements                     |                   | Eye pattern of Template 1 in USB 2.0 specification                     |     |     |       |       |
| High Speed Mode Timing                              |                   |  |     |     |       |       |
| Receiver Waveform<br>Requirements                   |                   | Eye pattern of Template 4 in USB 2.0 specification                     |     |     |       |       |
| Data Source Jitter and<br>Receiver Jitter Tolerance |                   | Eye pattern of Template 4 in USB 2.0 specification                     |     |     |       |       |

## 4.7 VBUS Electrical Characteristics

TABLE 4-7: VBUS ELECTRICAL CHARACTERISTICS

| Parameter          | Symbol               | Conditions                                 | MIN  | TYP  | MAX  | Units |
|--------------------|----------------------|--|------|------|------|-------|
| SessEnd trip point | V <sub>SessEnd</sub> |  | 0.2  | 0.5  | 0.8  | V     |
| SessVld trip point | V <sub>SessVld</sub> |  | 0.8  | 1.4  | 2.0  | V     |
| VbusVld trip point | V <sub>VbusVld</sub> |  | 4.4  | 4.58 | 4.75 | V     |
| VBUS Pull-Up       | R <sub>VPU</sub>     | VBUS to VDD33 Note 4-8<br>(ChargeVbus = 1) | 1.29 | 1.34 | 1.45 | kΩ    |

TABLE 4-7: VBUS ELECTRICAL CHARACTERISTICS (CONTINUED)

| Parameter                    | Symbol             | Conditions                                  | MIN  | TYP | MAX  | Units |
|------------------------------|--------------------|---|------|-----|------|-------|
| VBUS Pull-down               | R <sub>VPD</sub>   | VBUS to GND Note 4-8<br>(DisChargeVbus = 1) | 1.55 | 1.7 | 1.85 | kΩ    |
| VBUS Impedance               | R <sub>VB</sub>    | VBUS to GND                                 | 40   | 75  | 100  | kΩ    |
| A-Device Impedance to ground | R <sub>IdGnd</sub> | Maximum Impedance to ground on ID pin       |      |     | 100  | kΩ    |

Note 4-8 The  $R_{VPD}$  and  $R_{VPU}$  values include the required  $1k\Omega$  external  $R_{VBUS}$  resistor.

## 4.8 ID Electrical Characteristics

TABLE 4-8: ID ELECTRICAL CHARACTERISTICS

| Parameter                  | Symbol               | Conditions   | MIN | TYP | MAX  | Units |
|----------------------------|----------------------|--------------|-----|-----|------|-------|
| ID Ground Trip Point       | V <sub>IdGnd</sub>   |              | 0.4 | 0.7 | 0.9  | V     |
| ID Float Trip Point        | V <sub>IdFloat</sub> |              | 1.6 | 2.2 | 2.5  | V     |
| ID pull-up resistance      | R <sub>ID</sub>      | IdPullup = 1 | 80  | 100 | 120  | kΩ    |
| ID weak pull-up resistance | R <sub>IDW</sub>     | IdPullup = 0 | 1   |     |      | ΜΩ    |
| ID pull-dn resistance      | R <sub>IDPD</sub>    | IdGndDrv = 1 |     |     | 1000 | Ω     |

#### 4.9 USB Audio Switch Characteristics

TABLE 4-9: USB AUDIO SWITCH CHARACTERISTICS

| Parameter                   | Symbol               | Conditions                                  | MIN | TYP | MAX | Units |
|-----------------------------|----------------------|---|-----|-----|-----|-------|
| Minimum "ON" Resistance     | R <sub>ON_Min</sub>  | 0 < V <sub>switch</sub> < V <sub>DD33</sub> | 2.7 | 5   | 5.8 | Ω     |
| Maximum "ON" Resistance     | R <sub>ON_Max</sub>  | 0 < V <sub>switch</sub> < V <sub>DD33</sub> | 4.5 | 7   | 13  | Ω     |
| Minimum "OFF"<br>Resistance | R <sub>OFF_Min</sub> | 0 < V <sub>switch</sub> < V <sub>DD33</sub> | 1   |     |     | ΜΩ    |

## 4.10 USB Charger Detection Characteristics

TABLE 4-10: USB CHARGER DETECTION CHARACTERISTICS

| Parameter           | Symbol                | Conditions                   | MIN  | TYP | MAX | Units |
|---------------------|-----------------------|------------------------------|------|-----|-----|-------|
| Data Source Voltage | V <sub>DAT_SRC</sub>  | I <sub>DAT_SRC</sub> < 250uA | 0.5  |     | 0.7 | ٧     |
| Data Detect Voltage | V <sub>DAT_REF</sub>  |                              | 0.25 |     | 0.4 | V     |
| Data Source Current | I <sub>DAT_SRC</sub>  |                              | 250  |     |     | uA    |
| Data Sink Current   | I <sub>DAT_SINK</sub> |                              | 50   |     | 150 | uA    |

TABLE 4-10: USB CHARGER DETECTION CHARACTERISTICS (CONTINUED)

| Parameter                          | Symbol              | Conditions  | MIN | TYP | MAX | Units |
|------------------------------------|---------------------|---|-----|-----|-----|-------|
| Data Connect Current               | I <sub>DP_SRC</sub> |   | 7   |     | 13  | uA    |
| Weak Pull-up Resistor<br>Impedance | R <sub>CD</sub>     | Configured by bits 4 and 5 in USB IO & Power Management register. | 128 | 170 | 212 | kΩ    |

## 4.11 Regulator Output Voltages and Capacitor Requirement

TABLE 4-11: REGULATOR OUTPUT VOLTAGES AND CAPACITOR REQUIREMENT

| Parameter                  | Symbol             | Conditions  | MIN  | TYP  | MAX  | Units |
|----------------------------|--------------------|---|------|------|------|-------|
| Regulator Output Voltage   | V <sub>DD33</sub>  | 5.5V > <b>VBAT</b> > 3.0V                                       | 2.8  | 3.3  | 3.6  | V     |
|                            |                    | USB UART Mode & UART<br>RegOutput[1:0] = 01<br>6V > VBAT > 3.0V | 2.7  | 3.0  | 3.3  | V     |
|                            |                    | USB UART Mode & UART<br>RegOutput[1:0] = 10<br>6V > VBAT > 3.0V | 2.47 | 2.75 | 3.03 | V     |
|                            |                    | USB UART Mode & UART<br>RegOutput[1:0] = 11<br>6V > VBAT > 3.0V | 2.25 | 2.5  | 2.75 | V     |
| Regulator Bypass Capacitor | C <sub>OUT33</sub> |   | 1.0  |      |      | μF    |
| Bypass Capacitor ESR       | C <sub>ESR33</sub> |   |      |      | 1    | Ω     |
| Regulator Output Voltage   | V <sub>DD18</sub>  | 3.6V > <b>VDD33</b> > 2.25V                                     | 1.6  | 1.8  | 2.0  | ٧     |
| Regulator Bypass Capacitor | C <sub>OUT18</sub> |   | 1.0  |      |      | μF    |
| Bypass Capacitor ESR       | C <sub>ESR18</sub> |   |      |      | 1    | Ω     |

## 4.12 Piezoelectric Resonator for Internal Oscillator

The internal oscillator may be used with an external quartz crystal or ceramic resonator as described in Section 5.4, "Crystal Reference Support," on page 21. See Table 4-12 for the recommended crystal specifications.

TABLE 4-12: USB3340 QUARTZ CRYSTAL SPECIFICATIONS

| Parameter                  | Symbol            | MIN                    | NOM   | MAX  | Units | Notes    |  |  |  |
|----------------------------|-------------------|------------------------|---|------|-------|----------|--|--|--|
| Crystal Cut                |                   | AT, typ                |   |      |       |          |  |  |  |
| Crystal Oscillation Mode   |                   | Fundamental Mode       |   |      |       |          |  |  |  |
| Crystal Calibration Mode   |                   | Parallel Resonant Mode |   |      |       |          |  |  |  |
| Frequency                  | F <sub>fund</sub> | -                      | See<br>Product<br>Identificati<br>on System<br>on page 80 | -    | MHz   |          |  |  |  |
| Total Allowable PPM Budget |                   | -                      | -   | ±500 | PPM   | Note 4-9 |  |  |  |
| Shunt Capacitance          | C <sub>O</sub>    | -                      | 7 typ   | -    | pF    |          |  |  |  |
| Load Capacitance           | C <sub>L</sub>    | -                      | 20 typ  | -    | pF    |          |  |  |  |

TABLE 4-12: USB3340 QUARTZ CRYSTAL SPECIFICATIONS (CONTINUED)

| Parameter                             | Symbol         | MIN | NOM   | MAX | Units | Notes     |
|---------------------------------------|----------------|-----|-------|-----|-------|-----------|
| Drive Level                           | P <sub>W</sub> | 0.1 | -     | -   | μW    |           |
| Equivalent Series Resistance          | R <sub>1</sub> | -   | -     | 30  | Ω     |           |
| USB3340 <b>REFCLK</b> Pin Capacitance |                | -   | 3 typ | -   | pF    | Note 4-10 |
| USB3340 XO Pin Capacitance            |                | -   | 3 typ | -   | pF    | Note 4-10 |

- Note 4-9 The required bit rate accuracy for Hi-Speed USB applications is ±500 ppm as provided in the USB 2.0 Specification. This takes into account the effect of voltage, temperature, aging, etc.
- Note 4-10 This number includes the pad, the bond wire and the lead frame. Printed Circuit Board (PCB) capacitance is not included in this value. The PCB capacitance value and the capacitance value of the XO and REFCLK pins are required to accurately calculate the value of the two external load capacitors.

## 4.13 ESD and Latch-Up Performance

TABLE 4-13: ESD AND LATCH-UP PERFORMANCE


| Parameter              | Conditions                            | MIN | TYP | MAX | Units | Comments              |  |
|------------------------|---------------------------------------|-----|-----|-----|-------|-----------------------|--|
| ESD PERFORMANCE        |                                       |     |     |     |       |                       |  |
| Note 4-11<br>Note 4-12 | Human Body Model                      |     |     | ±8  | kV    | Device                |  |
| System                 | EN/IEC 61000-4-2 Contact<br>Discharge |     |     | ±25 | kV    | 3rd party system test |  |
| System                 | EN/IEC 61000-4-2 Air-gap<br>Discharge |     |     | ±25 | kV    | 3rd party system test |  |
| LATCH-UP PERFORMANCE   |                                       |     |     |     |       |                       |  |
| All Pins               | EIA/JESD 78, Class II                 |     | 150 |     | mA    |                       |  |

- Note 4-11 REFCLK, XO , ID, RESETB, SPK\_L and SPK\_Rpins: ±5kV Human Body Model.
- Note 4-12 The REFSEL[2:0] pins only tested to ±2kV Human Body Model.

#### 5.0 ARCHITECTURE OVERVIEW

The USB3340 consists of the blocks shown in the diagram below.

FIGURE 5-1: USB3340 SYSTEM DIAGRAM

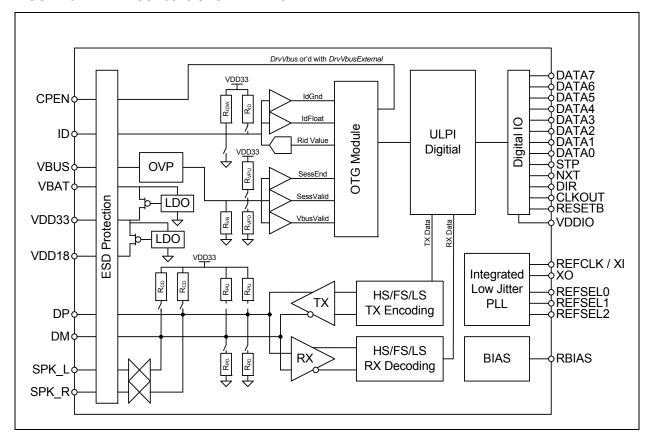

## 5.1 ULPI Digital Operation and Interface

This section of the USB3340 is covered in detail in Section 6.0, "ULPI Operation".

#### 5.2 USB 2.0 Hi-Speed Transceiver

The blocks in the lower left-hand corner of interface to the DP/DM pins.

#### 5.2.1 USB TRANSCEIVER

The USB3340 transceiver includes a Universal Serial Bus Specification Rev 2.0 compliant receiver and transmitter. The DP/DM signals in the USB cable connect directly to the receivers and transmitters.

The receiver consists of receivers for HS and FS/LS mode. Depending on the mode, the selected receiver provides the serial data stream through the multiplexer to the RX Logic block. For HS mode support, the HS RX block contains a squelch circuit to insure that noise is not interpreted as data. The RX block also includes a single-ended receiver on each of the data lines to determine the correct FS linestate.

Data from the Link is encoded, bit stuffed, serialized and transmitted onto the USB cable by the transmitter. Separate differential FS/LS and HS transmitters are included to support all modes.

The USB3340 TX block meets the HS signaling level requirements in the USB 2.0 Specification when the PCB traces from the **DP** and **DM** pins to the USB connector are correctly designed. In some systems the proper  $90\Omega$  differential impedance can not be maintained and it may be desirable to compensate for loss by adjusting the HS transmitter ampli-

tude and this HS squelch threshold. The *PHYBoost* bits in the HS Compensation Register may be configured to adjust the HS transmitter amplitude at the **DP** and **DM** pins. The *VariSense* bits in the HS Compensation Register can also be used to lower the squelch threshold to compensate for losses on the PCB.

To ensure proper operation of the USB transceiver the settings of Table 5-1 must be followed.

#### 5.2.2 TERMINATION RESISTORS

The USB3340 transceiver fully integrates all of the USB termination resistors on both DP and DM. This includes  $1.5k\Omega$  pull-up resistors,  $15k\Omega$  pull-down resistors and the  $45\Omega$  High Speed termination resistors. These resistors require no tuning or trimming by the Link. The state of the resistors is determined by the operating mode of the transceiver when operating in synchronous mode.

The XcvrSelect[1:0], TermSelect and OpMode[1:0] bits in the Function Control register, and the DpPulldown and DmPulldown bits in the OTG Control register control the configuration of the termination resistors. All possible valid resistor combinations are shown in Table 5-1, and operation is supported in only the configurations shown. If a ULPI Register Setting is configured that does not match a setting in the table, the transceiver operation is not maintained and the settings in the last row of Table 5-1 will be used.

- RPU DP EN activates the 1.5kΩ DP pull-up resistor
- RPU DM EN activates the 1.5kΩ DM pull-up resistor
- RPD\_DP\_EN activates the  $15k\Omega$  DP pull-down resistor
- RPD\_DM\_EN activates the 15kΩ DM pull-down resistor
- HSTERM EN activates the  $45\Omega$  DP and DM High Speed termination resistors

TABLE 5-1: DP/DM TERMINATION VS. SIGNALING MODE

|   | U               | ULPI Register Settings |             |            |            | USB3340 Termination<br>Resistor Settings |           |           |           | n         |
|---|-----------------|------------------------|-------------|------------|------------|--|-----------|-----------|-----------|-----------|
| Signaling Mode                          | XcvrSelect[1:0] | TermSelect             | OpMode[1:0] | DpPulldown | DmPulldown | RPU_DP_EN                                | RPU_DM_EN | RPD_DP_EN | RPD_DM_EN | HSTERM_EN |
| General Settings                        |                 |                        |             |            |            |  |           |           |           |           |
| Tri-State Drivers, Note 5-1             | XXb             | Xb                     | 01b         | Xb         | Xb         | 0b                                       | 0b        | 0b        | 0b        | 0b        |
| Power-up or VBUS < V <sub>SESSEND</sub> | 01b             | 0b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host Settings                           |                 |                        |             |            |            |  |           |           |           |           |
| Host Chirp                              | 00b             | 0b                     | 10b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 1b        |
| Host High Speed                         | 00b             | 0b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 1b        |
| Host Full Speed                         | X1b             | 1b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host HS/FS Suspend                      | 01b             | 1b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host HS/FS Resume                       | 01b             | 1b                     | 10b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host Low Speed                          | 10b             | 1b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host LS Suspend                         | 10b             | 1b                     | 00b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host LS Resume                          | 10b             | 1b                     | 10b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 0b        |
| Host Test J/Test_K                      | 00b             | 0b                     | 10b         | 1b         | 1b         | 0b                                       | 0b        | 1b        | 1b        | 1b        |
| Peripheral Settings                     | •               | •                      |             | •          | •          |  |           |           |           |           |

TABLE 5-1: DP/DM TERMINATION VS. SIGNALING MODE (CONTINUED)

|  | U               | ULPI Register Settings |             |            |            | USB3340 Termination<br>Resistor Settings |           |           |           |           |
|--|-----------------|------------------------|-------------|------------|------------|--|-----------|-----------|-----------|-----------|
| Signaling Mode                                 | XcvrSelect[1:0] | TermSelect             | OpMode[1:0] | DpPulldown | DmPulldown | RPU_DP_EN                                | RPU_DM_EN | RPD_DP_EN | RPD_DM_EN | HSTERM_EN |
| Peripheral Chirp                               | 00b             | 1b                     | 10b         | 0b         | 0b         | 1b                                       | 0b        | 0b        | 0b        | 0b        |
| Peripheral HS                                  | 00b             | 0b                     | 00b         | 0b         | 0b         | 0b                                       | 0b        | 0b        | 0b        | 1b        |
| Peripheral FS                                  | 01b             | 1b                     | 00b         | 0b         | 0b         | 1b                                       | 0b        | 0b        | 0b        | 0b        |
| Peripheral HS/FS Suspend                       | 01b             | 1b                     | 00b         | 0b         | 0b         | 1b                                       | 0b        | 0b        | 0b        | 0b        |
| Peripheral HS/FS Resume                        | 01b             | 1b                     | 10b         | 0b         | 0b         | 1b                                       | 0b        | 0b        | 0b        | 0b        |
| Peripheral LS                                  | 10b             | 1b                     | 00b         | 0b         | 0b         | 0b                                       | 1b        | 0b        | 0b        | 0b        |
| Peripheral LS Suspend                          | 10b             | 1b                     | 00b         | 0b         | 0b         | 0b                                       | 1b        | 0b        | 0b        | 0b        |
| Peripheral LS Resume                           | 10b             | 1b                     | 10b         | 0b         | 0b         | 0b                                       | 1b        | 0b        | 0b        | 0b        |
| Peripheral Test J/Test K                       | 00b             | 0b                     | 10b         | 0b         | 0b         | 0b                                       | 0b        | 0b        | 0b        | 1b        |
| OTG device, Peripheral Chirp                   | 00b             | 1b                     | 10b         | 0b         | 1b         | 1b                                       | 0b        | 0b        | 1b        | 0b        |
| OTG device, Peripheral HS                      | 00b             | 0b                     | 00b         | 0b         | 1b         | 0b                                       | 0b        | 0b        | 1b        | 1b        |
| OTG device, Peripheral FS                      | 01b             | 1b                     | 00b         | 0b         | 1b         | 1b                                       | 0b        | 0b        | 1b        | 0b        |
| OTG device, Peripheral HS/FS Suspend           | 01b             | 1b                     | 00b         | 0b         | 1b         | 1b                                       | 0b        | 0b        | 1b        | 0b        |
| OTG device, Peripheral HS/FS Resume            | 01b             | 1b                     | 10b         | 0b         | 1b         | 1b                                       | 0b        | 0b        | 1b        | 0b        |
| OTG device, Peripheral Test J/Test K           | 00b             | 0b                     | 10b         | 0b         | 1b         | 0b                                       | 0b        | 0b        | 1b        | 1b        |
| Charger Detection                              |                 |                        | •           | •          |            | -  |           |           |           |           |
| Connect Detect                                 | 01b             | 0b                     | 00b         | 0b         | 1b         | 0b                                       | 0b        | 0b        | 1b        | 0b        |
| Any combination not defined above,<br>Note 5-2 |                 |                        |             |            |            | 0b                                       | 0b        | 1b        | 1b        | 0b        |

## Note:

- This is equivalent to Table 40, Section 4.4 of the ULPI 1.1 specification.
- USB3340 does not support operation as an upstream hub port. See Section 6.4.1.3, "UTMI+ Level 3," on page 47.
  - Note 5-1 When RESETB = 0 The HS termination will tri-state the USB drivers
  - Note 5-2 The transceiver operation is not maintained in a combination that is not defined.

The USB3340 uses the 27% resistor ECN resistor tolerances. The resistor values are shown in Table 4-5.

#### 5.3 Bias Generator

This block consists of an internal bandgap reference circuit used for generating the driver current and the biasing of the analog circuits. This block requires an external  $8.06K\Omega,1\%$  tolerance, reference resistor connected from **RBIAS** to ground. This resistor should be placed as close as possible to the USB3340 to minimize the trace length. The nominal voltage at **RBIAS** is 0.8V +/- 10% and therefore the resistor will dissipate approximately  $80~\mu W$  of power.

#### 5.4 Crystal Reference Support

The USB3340 provide support for a 26 MHz crystal to provide the reference frequency required by the device in place of a clock oscillator. The crystal should be connected to the REFCLK/XI and XO pins as shown in Figure 8-2. If a 26 MHz clock oscillator is used in place of a crystal, it should be driven into the REFCLK/XI pin, and the XO pin should be left floating.

Proper care should be taken to ensure that a crystal is selected with appropriate power dissipation characteristics.

#### 5.5 Integrated Low Jitter PLL

The USB3340 uses an integrated low jitter phase locked loop (PLL) to provide a clean 480 MHz clock required for HS USB signal quality. This clock is used by the PHY during both transmit and receive. The USB3340 PLL requires an accurate frequency reference to be driven on the **REFCLK** pin.

#### 5.5.1 REFCLK FREQUENCY SELECTION

The USB3340 PLL is designed to operate in one of two reference clock modes. In the first mode, the 60 MHz ULPI clock is driven on the **REFCLK** pin. In the second mode a reference clock is driven on the **REFCLK** pin. The Link is driving the ULPI clock, in the first mode, and this is referred to as **ULPI Clock Input Mode**. In the second mode, the USB3340 generates the ULPI clock, and this is referred to as **ULPI Clock Output Mode**.

During start-up, the USB3340 monitors the **CLKOUT** pin. If a connection to **VDDIO** is detected, the USB3340 is configured for a 60 MHz ULPI reference clock driven on the **REFCLK** pin. Section 5.5.1.1, "ULPI Clock Input Mode (60 MHz REFCLK Mode)," on page 21 and Section 5.5.1.2, "ULPI Clock Output Mode," on page 22 describe how to configure the USB3340 for either ULPI Clock Input Mode or ULPI Clock Output Mode.

#### 5.5.1.1 ULPI Clock Input Mode (60 MHz REFCLK Mode)

When using ULPI Clock Input Mode, the Link must supply the 60 MHz ULPI clock to the USB3340. In this mode the 60 MHz ULPI Clock is connected to the **REFCLK** pin, and the **CLKOUT** pin is tied high to **VDDIO**.

After the PLL has locked to the correct frequency, the USB3340 will de-assert **DIR** and the Link can begin using the ULPI interface. The USB3340 will start the clock within the time specified in Table 4-2. For Host applications, the ULPI *AutoResume* bit should be enabled. This is described in Section 6.4.1.4, "Host Resume K," on page 47.

For the USB3340, the REF pins should be tied to ground.

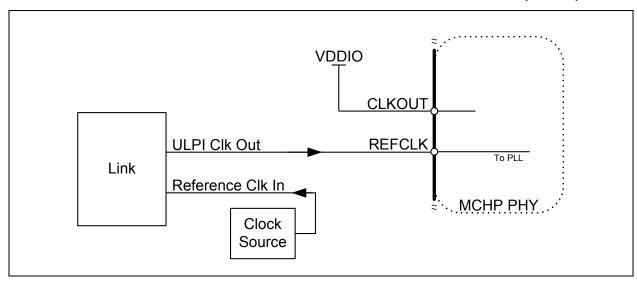


FIGURE 5-2: CONFIGURING THE USB3340 FOR ULPI CLOCK INPUT MODE (60 MHZ)

#### 5.5.1.2 ULPI Clock Output Mode

When using ULPI Clock Output Mode, the USB3340 generates the 60 MHz ULPI clock used by the Link. In this mode, the **REFCLK** pin must be driven with the model-specific frequency, and the **CLKOUT** pin sources the 60 MHz ULPI clock to the Link. When using ULPI Clock Output Mode, the system must not drive the **CLKOUT** pin following POR or hardware reset with a voltage that exceeds the value of V<sub>IH\_ED</sub> provided in Table 4-3. An example of ULPI Clock Output Mode is shown in Figure 8-1

After the PLL has locked to the correct frequency, the USB3340 generates the 60 MHz ULPI clock on the **CLKOUT** pin, and de-asserts **DIR** to indicate that the PLL is locked. The USB3340 will start the clock within the time specified in Table 4-2, and it will be accurate to within ±500ppm. For Host applications the ULPI *AutoResume* bit should be enabled. This is described in Section 6.4.1.4, "Host Resume K," on page 47.

When using ULPI Clock Output Mode, the edges of the reference clock do not need to be aligned in any way to the ULPI interface signals. There is no need to align the phase of the **REFCLK** and the **CLKOUT**.

For the USB3340, the reference clock frequency required is determined by the settings of the REFSEL[2:0] pins. The pins should either be connected to **VDDIO** or **GND**. The reference frequency use is shown in Table 5-2.


| REFSEL[2:0] | REFCLK<br>Frequency |
|-------------|---------------------|
| 000         | 52 MHz              |
| 001         | 38.4 MHz            |
| 010         | 12 MHz              |
| 011         | 27 MHz              |
| 100         | 13 MHz              |
| 101         | 19.2 MHz            |

TABLE 5-2: REF[2:0] VS. REQUIRED FREQUENCY AT REFCLK

TABLE 5-2: REF[2:0] VS. REQUIRED FREQUENCY AT REFCLK (CONTINUED)

| REFSEL[2:0] | REFCLK<br>Frequency |
|-------------|---------------------|
| 110         | 26 MHz              |
| 111         | 24 MHz              |

FIGURE 5-3: CONFIGURING THE USB3340 FOR ULPI CLOCK OUTPUT MODE

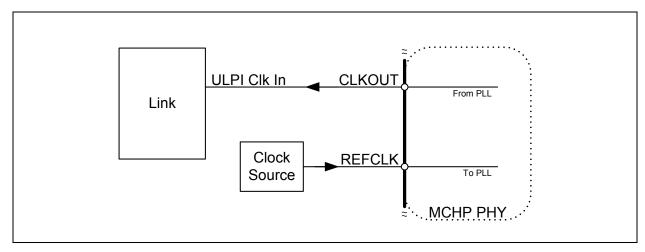


#### 5.5.2 REFCLK AMPLITUDE

The reference clock should be connected to the **REFCLK** pin as shown in the application diagrams, Figure 8-1. The **REFCLK** pin is designed to be driven with a square wave from 0V to **VDDIO**, but can be driven with a square wave from 0V to as high as 3.6V. The USB3340 uses only the positive edge of the **REFCLK**.

If a digital reference is not available, the **REFCLK** pin can be driven by an analog sine wave that is AC coupled into the **REFCLK** pin. If using an analog clock the DC bias should be set at the mid-point of the **VDD18** supply using a bias circuit as shown in Figure 5-4. The amplitude must be greater than 300mV peak to peak. The component values provided in Figure 5-4 are for example only. The actual values should be selected to satisfy system requirements.

The **REFCLK** amplitude must comply with the signal amplitudes shown in Table 4-4 and the duty cycle in Table 4-2.

FIGURE 5-4: EXAMPLE OF CIRCUIT USED TO SHIFT A REFERENCE CLOCK COMMON-MODE VOLTAGE LEVEL

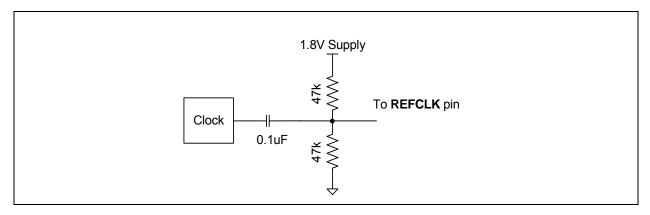

#### 5.5.3 REFCLK JITTER

The USB3340 is tolerant to jitter on the reference clock. The **REFCLK** jitter should be limited to a peak to peak jitter of less than 1nS over a 10uS time interval. If this level of jitter is exceeded when configured for either ULPI Clock Input Mode or ULPI Clock Output Mode, the USB3340 High Speed eye diagram may be degraded.

The frequency accuracy of the REFCLK must meet the +/- 500ppm requirement as shown in Table 4-2.

#### 5.5.4 REFCLK ENABLE/DISABLE

The **REFCLK** should be enabled when the **RESETB** pin is brought high. The ULPI interface will start running after the time specified in Table 4-2. If the reference clock enable is delayed relative to the **RESETB** pin, the ULPI interface will start operation delayed by the same amount. The reference clock can be run at anytime the **RESETB** pin is low without causing the USB3340 to start-up or draw current.

When the USB3340 is placed in Low Power Mode or Carkit Mode, the reference clock can be stopped after the final ULPI register write is complete. The **STP** pin is asserted to bring the USB3340 out of Low Power Mode. The reference clock should be started at the same time **STP** is asserted to minimize the USB3340 start-up time.

If the reference clock is stopped while in ULPI Synchronous mode the PLL will come out of lock and the frequency of oscillation will decrease to the minimum allowed by the PLL design. If the reference clock is stopped during a USB session, the session may drop.

## 5.6 Internal Regulators and POR

The USB3340 includes integrated power management functions, including a Low-Dropout regulator that can be used to generate the 3.3V USB supply, an integrated 1.8V regulator, and a POR generator described in Section 5.6.2, "Power On Reset (POR)," on page 25.

#### 5.6.1 INTEGRATED LOW DROPOUT REGULATORS

The USB3340 includes two integrated linear regulators. Power sourced at the **VBAT** pin is regulated to 3.3V and 1.8V output on the **VDD33** and **VDD18** pins. To ensure stability, both regulators require an external bypass capacitor as specified in Table 4-11 placed as close to the pin as possible.

The USB3340 regulators are designed to generate the 3.3 Volt and 1.8 Volt supplies for the USB3340 only. Using the regulators to provide current for other circuits is not recommended and Microchip does not ensure USB performance or regulator stability.

During USB UART mode the 3.3V regulator output voltage can be changed to allow the USB3340 to work with UARTs operating at different operating voltages. The 3.3V regulator output is configured to the voltages shown in Table 4-11 with the *UART RegOutput[1:0]* bits in the USB IO & Power Management register.

The regulators are enabled by the **RESETB** pin. When **RESETB** pin is low both regulators are disabled and the regulator outputs are pulled low by weak pull-down. The **RESETB** pin must be brought high to enable the regulators.

For peripheral-only or host-only bus-powered applications, the input to **VBAT** may be derived from the VBUS pin of the USB connector. In this configuration, the supply must be capable of withstanding any transient voltage present at the VBUS pin of the USB connector. Microchip does not recommend connecting the **VBAT** pin to the VBUS terminal of the USB connector.

#### 5.6.2 POWER ON RESET (POR)

The USB3340 provides a POR circuit that generates an internal reset pulse after the **VDD18** supply is stable. After the internal POR goes high the USB3340 will release from reset and begin normal ULPI operation as described in Note 5-3.

The ULPI registers will power up in their default state summarized in Table 7-1 when the 1.8V supply comes up. Cycling the **RESETB** pin can also be used to reset the ULPI registers to their default state (and reset all internal state machines) by bringing the pin low for a minimum of 1 microsecond and then high. It is not necessary to wait for the **VDD33** and **VDD18** pins to discharge to 0 volts to reset the part.

The **RESETB** pin must be pulled high to enable the 3.3V and 1.8V regulators. A pull-down resistor is not present on the **RESETB** pin and therefore the system should drive the **RESETB** pin to the desired state at all times. If the system does not need to place the USB3340 into reset mode the **RESETB** pin can be connected to a supply between 1.8V and 3.3V.

#### 5.6.3 RECOMMENDED POWER SUPPLY SEQUENCE

For USB operation, the USB3340 requires a valid voltage on the **VBAT** and **VDDIO** pins. The **VDD33** and **VDD18** regulators are automatically enabled when the **RESETB** pin is brought high. Table 5-3 presents the power supply configurations in more detail.

The **RESETB** pin can be held low until the **VBAT** supply is stable. If the Link is not ready to interface the USB3340, the Link may choose to hold the **RESETB** pin low until it is ready to control the ULPI interface.

| VBAT | VDDIO | RESETB | Operating Modes Available   |  |  |  |
|------|-------|--------|---|--|--|--|
| 0    | 0     | 0      | Powered Off   |  |  |  |
| 1    | Х     | 0      | RESET Mode. (Note 5-3)  |  |  |  |
| 1    | 1     | 1      | Full USB operation as described in Section 6.0, "ULPI Operation," on page 36. |  |  |  |

TABLE 5-3: OPERATING MODE VS. POWER SUPPLY CONFIGURATION


Note 5-3 VDDIO must be present for ULPI pins to tri-state.

#### 5.6.4 START-UP

The power on default state of the USB3340 is ULPI Synchronous mode. The USB3340 requires the following conditions to begin operation: the power supplies must be stable, the **REFCLK** must be present and the **RESETB** pin must be high. After these conditions are met, the USB3340 will begin ULPI operation that is described in Section 6.0, "ULPI Operation," on page 36.

Figure 5-5 below shows a timing diagram to illustrate the start-up of the USB3340. At T0, the supplies are stable and the USB3340 is held in reset mode. At T1, the Link drives **RESETB** high after the **REFCLK** has started. The **RESETB** pin may be brought high asynchronously to **REFCLK**. Once, the 3.3V and 1.8V internal supplies become stable the USB3340 will apply the 15 K $\Omega$  pull downs to the data bus and assert **DIR** until the internal PLL has locked. After the PLL has locked, the USB3340 will check that the Link has de-asserted **STP** and at T2 it will de-assert **DIR** and begin ULPI operation.

The ULPI bus will be available as shown in Figure 5-5 in the time defined as  $T_{START}$  given in Table 4-2. If the REFCLK signal starts after the RESETB pin is brought high, then time T0 will begin when REFCLK starts.  $T_{START}$  also assumes that the Link has de-asserted STP. If the Link has held STP high the USB3340 will hold DIR high until STP is deasserted. When the LINK de-asserts STP, it must be ready drive the ULPI data bus to idle (00h) for a minimum of one clock cycle after DIR de-asserts.

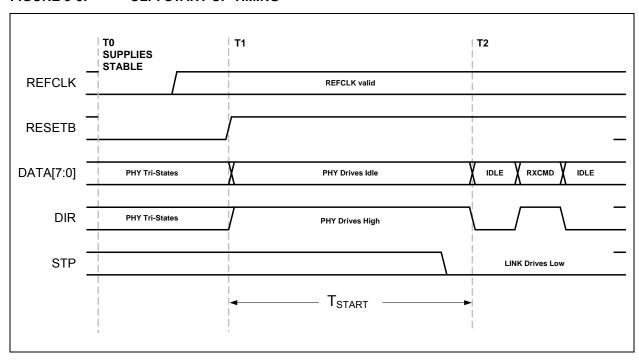

#### FIGURE 5-5: ULPI START-UP TIMING

## 5.7 USB On-The-Go (OTG)

The USB3340 provides support for the USB OTG protocol. OTG allows the USB3340 to be dynamically configured as a host or peripheral depending on the type of cable inserted into the Micro-AB receptacle. When the Micro-A plug of a cable is inserted into the Micro-AB receptacle, the USB device becomes the A-device. When a Micro-B plug is inserted, the device becomes the B-device. The OTG A-device behaves similar to a Host while the B-device behaves similar to a peripheral. The differences are covered in the "On-The-Go Supplement to the USB 2.0 Specification". In applications where only USB Host or USB Peripheral is required, the OTG Module is unused.

#### 5.7.1 ID RESISTOR DETECTION

The ID pin of the USB connector is monitored by the **ID** pin of the USB3340 to detect the attachment of different types of USB devices and cables. For device only applications that do not use the ID signal the **ID** pin should be connected to **VDD33**. The block diagram of the ID detection circuitry is shown in Figure 5-6 and the related parameters are given in Table 4-8.

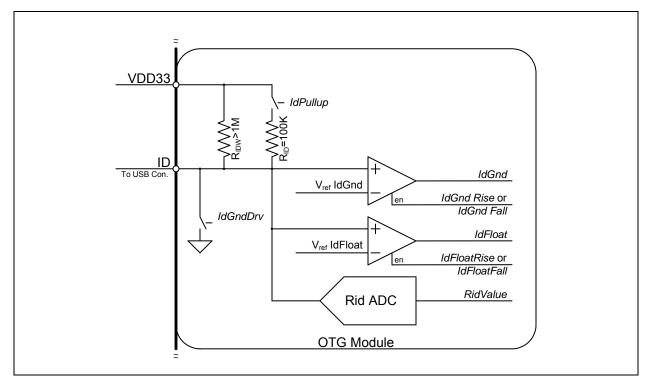


FIGURE 5-6: USB3340 ID RESISTOR DETECTION CIRCUITRY

#### 5.7.1.1 USB OTG Operation

The USB3340 can detect **ID** grounded and **ID** floating to determine if an A or B cable has been inserted. The A plug will ground the **ID** pin while the B plug will float the **ID** pin. These are the only two valid states allowed in the OTG Protocol.

To monitor the status of the **ID** pin, the Link activates the *IdPullup* bit in the OTG Control register, waits 50mS and then reads the status of the *IdGnd* bit in the USB Interrupt Status register. If an A cable has been inserted the *IdGnd* bit will read 0. If a B cable is inserted, the **ID** pin is floating and the *IdGnd* bit will read 1.

The USB3340 provides an integrated weak pull-up resistor on the  ${\bf ID}$  pin,  $R_{\rm IDW}$ . This resistor is present to keep the  ${\bf ID}$  pin in a known state when the  ${\it IdPullup}$  bit is disabled and the  ${\bf ID}$  pin is floated. In addition to keeping the  ${\bf ID}$  pin in a known state, it enables the USB3340 to generate an interrupt to inform the link when a cable with a resistor to ground has been attached to the  ${\bf ID}$  pin. The weak pull-up is small enough that the largest valid RID resistor pulls the  ${\bf ID}$  pin low and causes the IdGnd comparator to go low.

After the link has detected an **ID** pin state change, the RID converter can be used to determine the resistor value as described in Section 5.7.1.2, "Measuring ID Resistance to Ground," on page 27.

#### 5.7.1.2 Measuring ID Resistance to Ground

The Link can use the integrated resistance measurement capabilities of the USB3340 to determine the value of an ID resistance to ground. The following table details the valid values of resistance to ground that the USB3340 can detect.

TABLE 5-4: VALID VALUES OF ID RESISTANCE TO GROUND

| ID Resistance to Ground | Rid Value |
|-------------------------|-----------|
| Ground                  | 000       |
| 75Ω +/-1%               | 001       |
| 102kΩ +/-1%             | 010       |
| 200kΩ+/-1%              | 011       |
| Floating                | 101       |

**Note:** IdPullUp = 0

The ID resistance to ground can be read while the USB3340 is in Synchronous Mode. When a resistor to ground is attached to the **ID** pin, the state of the IdGnd comparator will change. After the Link has detected **ID** transition to ground, it can use the methods described in Section 6.8, "RID Converter Operation," on page 55 to operate the Rid converter.

#### 5.7.1.3 Using IdFloat Comparator (not recommended)

**Note:** The ULPI specification details a method to detect a 102 k $\Omega$  resistance to ground using the IdFloat comparator. This method can only detect  $0\Omega$ ,  $102 \text{ k}\Omega$ , and floating terminations of the **ID** pin. Due to this limitation it is recommended to use the RID Converter as described in Section 5.7.1.2, "Measuring ID Resistance to Ground," on page 27.

The ID pin can be either grounded, floated, or connected to ground with a 102 k $\Omega$  external resistor. To detect the 102K resistor, set the *idPullup* bit in the OTG Control register, causing the USB3340 to apply the 100K internal pull-up connected between the ID pin and VDD33. Set the *idFloatRise* and *idFloatFall* bits in the Carkit Interrupt Enable register to enable the IdFloat comparator to generate an RXCMD to the Link when the state of the IdFloat changes. As described in Figure 6-3, the alt\_int bit of the RXCMD will be set. The values of IdGnd and IdFloat are shown for the three types cables that can attach to the USB Connector in Table 5-5.

TABLE 5-5: IDGND AND IDFLOAT VS. ID RESISTANCE TO GROUND

| ID Resistance | IDGND | IDFLOAT |
|---------------|-------|---------|
| Float         | 1     | 1       |
| 102K          | 1     | 0       |
| GND           | 0     | 0       |

**Note:** The ULPI register bits *IdPullUp*, *IdFloatRise*, and *IdFloatFall* should be enabled.

To save current when an A Plug is inserted, the internal  $102k\Omega$  pull-up resistor can be disabled by clearing the IdPullUp bit in the OTG Control register and the IdFloatRise and IdFloatFall bits in both the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. If the cable is removed the weak  $R_{IDW}$  will pull the ID pin high.

The *IdGnd* value can be read using the ULPI USB Interrupt Status register, bit 4. In host mode, it can be set to generate an interrupt when *IdGnd* changes by setting the appropriate bits in the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. The *IdFloat* value can be read by reading the ULPI Carkit Interrupt Status register bit 0.

**Note:** The IdGnd switch has been provided to ground the **ID** pin for future applications.

#### 5.7.2 VBUS MONITORING AND VBUS PULSING


The USB3340 includes all of the VBUS comparators required for OTG. The VBUSVId, SessVId, and SessEnd comparators shown in Figure 5-7 are fully integrated into the USB3340. These comparators are used to monitor changes in the VBUS voltage, and the state of each comparator can be read from the USB Interrupt Status register.

The VbusVld comparator is used by the Link, when configured as an A device, to ensure that the VBUS voltage on the cable is valid. The SessVld comparator is used by the Link when configured as both an A or B device to indicate a session is requested or valid. Finally the SessEnd comparator is used by the B-device to indicate a USB session has ended.

Also included in the VBUS Monitor and Pulsing block are the resistors used for VBUS pulsing in SRP. The resistors used for VBUS pulsing include a pull-down to ground and a pull-up to **VDD33**.

In some applications, voltages much greater than 5.5V may be present at the VBUS pin of the USB connector. The USB3340 includes an over voltage protection circuit that protects the **VBUS** pin of the USB3340 from excessive voltages as shown in Figure 5-7.

FIGURE 5-7: USB3340 OTG VBUS BLOCK

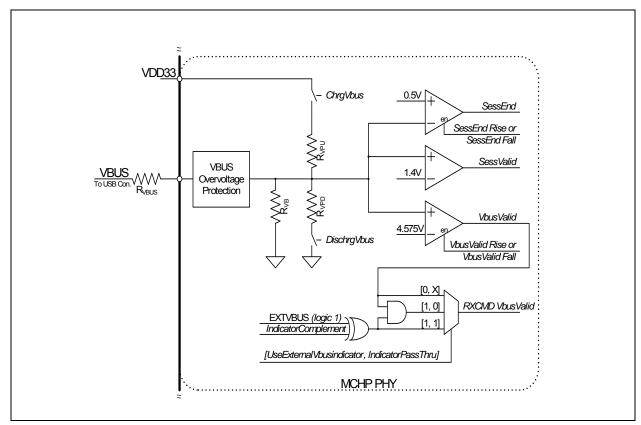

#### 5.7.2.1 SessEnd Comparator

The SessEnd comparator is used during the Session Request Protocol (SRP). The comparator is used by the B-device to detect when a USB session has ended and it is safe to start Vbus Pulsing to request a USB session from the A-device. When VBUS goes below the threshold in Table 4-7, the USB session is considered to be ended, and SessEnd will transition from 0 to 1. The SessEnd comparator can be disabled by clearing this bit in both the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. When disabled, the SessEnd bit in the USB Interrupt Status register will read 0.

## **USB3340**

The SessEnd Comparator is only used when configured as an OTG device. If the USB3340 is used as a Host or Device only the SessEnd Comparator should be disabled, using the method described above.

#### 5.7.2.2 SessVld Comparator

The SessVld comparator is used when the PHY is configured as both an A and B device. When configured as an A device, the SessVld is used to detect Session Request protocol (SRP). When configured as a B device, SessVld is used to detect the presence of VBUS. The SessVld comparator output can also be read from the USB Interrupt Status register. The SessVld comparator will also generate an RX CMD, as detailed in Section 6.3.1, "ULPI Receive Command (RX CMD)," on page 42, anytime the comparator changes state. The SessVld interrupts can be disabled by clearing this bit in both the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. When the interrupts are disabled, the SessVld comparator is still operational and will generate RX CMD's. The SessVld comparator trip point is detailed in Table 4-8.

**Note:** The OTG Supplement specifies a voltage range for A-Device Session Valid and B-Device Session Valid comparator. The USB3340 PHY combines the two comparators into one and uses the narrower threshold range.

#### 5.7.2.3 VbusVld Comparator

The VbusVld comparator is only used when the USB3340 is configured as a host that can supply less than 100mA VBUS current. In the USB protocol, the A-device supplies the VBUS voltage and is responsible to ensure it remains within a specified voltage range. The VbusVld comparator can be disabled by clearing this bit in both the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. When disabled, bit 1 of the USB Interrupt Status register will return a 0. The VbusVld comparator threshold values are detailed in Table 4-8.

If the USB3340 is used as a Device only the VbusValid Comparator should be disabled, using the method described above.

The USB3340 includes the external VbusVld indicator logic as detailed in the ULPI Specification. The external VbusVld indicator is tied to a logic one. The decoding of this logic is shown in Table 5-6 below. By default this logic is disabled.

TABLE 5-6: EXTERNAL VBUS INDICATOR LOGIC

| Typical<br>Application | Use External<br>Vbus<br>Indicator | Indicator<br>Pass Thru | Indicator<br>Complement | RXCMD Vbus Valid<br>Encoding Source  |
|------------------------|-----------------------------------|------------------------|-------------------------|--|
| OTG Device             | 0                                 | X                      | X                       | Internal VbusVld comparator (Default)  |
|                        | 1                                 | 1                      | 0                       | Fixed 1  |
|                        | 1                                 | 1                      | 1                       | Fixed 0  |
|                        | 1                                 | 0                      | 0                       | Internal VbusVld comparator.   |
|                        | 1                                 | 0                      | 1                       | Fixed 0  |
| Standard Host          | 1                                 | 1                      | 0                       | Fixed 1  |
|                        | 1                                 | 1                      | 1                       | Fixed 0  |
| Standard<br>Peripheral | 0                                 | Х                      | Х                       | Internal VbusVld comparator. This information should not be used by the Link. (Note 5-4) |

Note 5-4 A peripheral should not use VbusVld to begin operation. The peripheral should use SessVld to detect the presence of VBUS on the USB connector. VbusVld should only be used for USB Host and OTG A-device applications.

#### 5.7.2.4 VBUS Pulsing with Pull-up and Pull-down Resistors

In addition to the internal VBUS comparators, the USB3340 also includes the integrated VBUS pull-up and pull-down resistors used for VBUS Pulsing during OTG Session Request Protocol. To discharge the VBUS voltage so that a Session Request can begin, the USB3340 provides a pull-down resistor from **VBUS** to **GND**. This resistor is controlled by the *DischargeVbus* bit 3 of the OTG Control register. The pull-up resistor is connected between VBUS and VDD33. This resistor is used to pull VBUS above 2.1 volts so that the A-Device knows that a USB session has been requested. The state of the pull-up resistor is controlled by the bit 4 *ChargeVbus* of the OTG Control register. The Pull-Up and Pull-Down resistor values are detailed in Table 4-8.

The internal VBUS Pull-up and Pull-down resistors are designed to include the  $R_{VBUS}$  external resistor in series. This external resistor is used by the VBUS Over voltage protection described below.

#### 5.7.2.5 VBUS Input Impedance

The OTG Supplement requires an A-Device that supports Session Request Protocol to have a VBUS input impedance less than  $100k\Omega$  and greater the  $40k\Omega$  to ground. The USB3340 provides a  $75k\Omega$  resistance to ground,  $R_{VB}$  resistor tolerance is detailed in Table 4-8.

#### 5.7.2.6 VBUS Over Voltage Protection (OVP)

The USB3340 provides an integrated over voltage protection circuit to protect the **VBUS** pin from excessive voltages that may be present at the USB connector. The over voltage protection circuit works with an external resistor (R<sub>VBUS</sub>) by drawing current across the resistor to reduce the voltage at the **VBUS** pin.

When voltage at the **VBUS** pin exceeds 5.5V, the Over voltage Protection block will sink current to ground until VBUS is below 5.5V. The current drops the excess voltage across  $R_{VBUS}$  and protects the USB3340 **VBUS** pin. The required  $R_{VBUS}$  value is dependent on the operating mode of the USB3340 as shown in Table 5-7.

TABLE 5-7: REQUIRED R<sub>VBUS</sub> RESISTOR VALUE

| Operating Mode   | R <sub>VBUS</sub> |
|--|-------------------|
| Device only  | 20kΩ ±5%          |
| OTG Host Capable of less than 100mA of current on VBUS             | 1kΩ ±5%           |
| Host or OTG Host capable of >100mA<br>UseExternalVbusIndicator = 1 | 20kΩ ±5%          |

The Over voltage Protection circuit is designed to protect the USB3340 from continuous voltages up to 30V on the  $R_{VBUS}$  resistor.

The  $R_{VBUS}$  resistor must be sized to handle the power dissipated across the resistor. The resistor power can be found using the equation below:

$$P_{RVBUS} = \frac{(Vprotect - 5.0)^2}{R_{VBUS}}$$

#### Where:

- · Vprotect is the VBUS protection required.
- R<sub>VBUS</sub> is the resistor value, 1kΩ or 20kΩ.
- P<sub>RVBUS</sub> is the required power rating of R<sub>VBUS</sub>.

For example, protecting a peripheral or device only application to 15V would require a  $20k\Omega$  R<sub>VBUS</sub> resistor with a power rating of 0.05W. To protect an OTG product to 15V would require a  $1k\Omega$  R<sub>VBUS</sub> resistor with a power rating of 0.1W.

#### 5.7.3 DRIVING EXTERNAL VBUS

The USB3340 monitors VBUS as described in VBUS Monitoring and VBUS Pulsing. The USB3340 does not provide an external output for the *DrvVbusExternal* ULPI register. For OTG and Host applications, the external VBUS supply or power switch must be controlled by the Link.

The USB3340 monitors VBUS as described in VBUS Monitoring and VBUS Pulsing. For OTG and Host applications, the system is required to source 5 volts on VBUS. The USB3340 fully supports VBUS power control using an external VBUS switch as shown in Figure 8-3. The USB3340 provides an active high control signal, **CPEN**, that is dedicated to controlling the Vbus supply when configured as an A-Device.

**CPEN** is asserted by setting the *DrvVbus* or *DrvVbusExternal* bit of the OTG Control register. To be compatible with Link designs that support both internal and external Vbus supplies the *DrvVbus* and *DrvVbusExternal* bits in the OTG Control Register are or'd together. This enables the Link to set either bit to access the external Vbus enable (**CPEN**). This logic is shown in Figure 5-8. *DrvVbus* and *DrvVbusExternal* are set to 0 on Power On Reset (POR) as shown in Section 7.1.1.7, "OTG Control," on page 60.

VBUS Switch Drv/bus Drv/busExternal Link Controller

**CPEN Logic** 

VBUS

DM

DP

FIGURE 5-8: USB3340 DRIVES CONTROL SIGNAL (CPEN) TO EXTERNAL VBUS SWITCH

## 5.8 USB UART Support

+5V

**VBUS** 

Supply

The USB3340 provides support for the USB UART interface as detailed in the ULPI specification and the former CEA-936A specification. The USB3340 can be placed in UART Mode using the method described in Section 6.7, "Carkit Mode," on page 53, and the regulator output will automatically switch to the value configured by the *UART RegOutput bits in the* USB IO & Power Management register. While in UART mode, the Linestate signals cannot be monitored on the DATA[0] and DATA[1] pins.

## 5.9 USB Charger Detection Support

FN

USB Connector VBUS

DM

DP

OUT

<u>5V</u> IN

The following blocks allow the USB3340 to detect when a Battery Charger, Charging Host Port, or a USB Host is attached to the USB connector. The USB3340 can also be configured to appear as a Charging Host Port, all according to the USB-IF Battery Charging 1.2 specification. The charger detection circuitry should be disabled during USB operation.

**ULPI** 

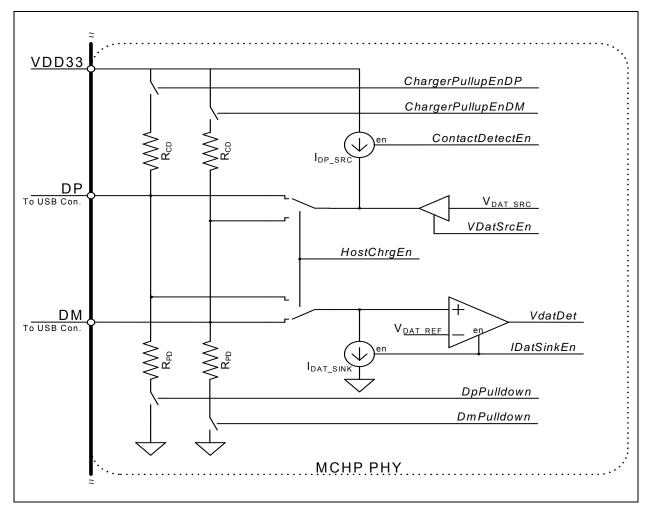


FIGURE 5-9: USB CHARGER DETECTION BLOCK DIAGRAM

**Note:** The *italic names* in the Figure 5-9 correspond to bits in the ULPI register set.

The charger detection circuitry runs from the **VDD33** supply and requires that the **VDD33** supply to be present to run the charger detection circuitry. The **VDD33** supply is present anytime the **RESETB** pin is pulled high and **VBAT** is present. The charger detection circuits are fully functional while in Low Power Mode (*Suspendm* = 0). The status of the *Vdat-Det* can be relayed back to the Link through the ULPI interrupts in both Synchronous mode and Low Power Mode.

#### 5.9.1 ACTIVE ANALOG CHARGER DETECTION (USB-IF BATTERY CHARGING 1.2)

The USB3340 includes the active analog charger detection specified in the USB-IF Battery Charging Specification. The additional analog circuitry will allow the USB3340 to:

- 1. Detect a Dedicated Charging Port (DCP) with the DP and DM pins shorted together.
- 2. Detect a Standard Downstream Port (SDP) which has no battery charging circuitry.
- Detect a Charging Downstream Port (CDP) which actively supplies voltage to the DM pin when connected to a USB-IF BC 1.2 compatible device.
- 4. Behave as a Charging Downstream Port by enabling the voltage source on the DM pin.

The charger detection circuitry is shown in Figure 5-9.

The *VdatDet* output is qualified with the Linestate[1:0] value. If the Linestate is not equal to 00 the *VdatDet* signal will not assert.

The proper detection process flows through different modes of detection and uses the linestate and VdatDet signals values to determine the connection. Table 5-8 describes the bit values that need to be set to enter each mode.

TABLE 5-8: USB CHARGER SETTING VS. MODES

| Charger Detection Modes  | VDATSRCEN | IDATSINKEN | CONTACTDETE<br>N | HOSTCHRGEN | DPPULLDOWN | DMPULLDOWN |
|--|-----------|------------|------------------|------------|------------|------------|
| Device Connect Detect (The Connect Detect setting in Table 5-1 must be followed) | 0         | 0          | 1                | 0          | 0          | 1          |
| Device Charger Detection   | 1         | 1          | 0                | 0          | 0          | 0          |
| Device Enhanced Charger Detection  | 1         | 1          | 0                | 1          | 0          | 0          |
| Device USB Operation   | 0         | 0          | 0                | 0          | 0          | 0          |
| Charging Host Port, no charging device attached and SE0 (VdatDet = 0)            | 0         | 1          | 0                | 1          | 1          | 1          |
| Charging Host Port, charging device attached (VdatDet = 1)                       | 1         | 1          | 0                | 1          | 1          | 1          |
| Charging Host Port USB Operation   | 0         | 0          | 0                | 1          | 1          | 1          |

#### 5.9.1.1 Example Charger Detection Flow - Dedicated Charging Port

The USB-IF Battery Charging 1.2 specification describes in detail the flow for each charger type, but below is an example of the flow used to detect a Dedicated Charger (DCP).

- Device detects Vbus voltage is present from RXCMD, (SESS VLD is 1)
- 2. Device enters the Device Connect Detect mode.

If the linestate still equals 10 after a specified timeout, the charger is an unknown charger and there will be no attempted USB enumeration.

If the linestate equals 00 or 11, the device will go to the next mode:

3. Device enters Device Charger Detection mode.

If the VdatDet bit is 0 then the host is a Standard Downstream Port (SDP) and the device will draw the standard 500mA of current and enter the *Device USB Operation* mode.

If the VdatDet bit is 1 then the host is a charger that can supply at least 1.5A of current, the device will go to the next mode.

4. Device enters Device Enhanced Charger Detection mode.

If the VdatDet bit is 0 then the device is connected to a Charging Downstream Port (CDP) and the device will enter the *Device USB Operation* mode.

If the VdatDet bit is 1 then the device is connected to a Dedicated Charging Port (DCP) and the device will not try to enumerate.

5. The charger detection is complete.

#### 5.9.2 RESISTIVE CHARGER DETECTION

**Note:** The Resistive Charger Detection has been superseded by the Active Analog Charger Detection (USB-IF Battery Charging 1.2) detailed above. It is recommended that new designs use the Active Analog Charger Detection (USB-IF Battery Charging 1.2).

To support the detection and identification of different types of USB chargers the USB3340 provides integrated pull-up resistors,  $R_{CD}$ , on both **DP** and **DM**. These pull-up resistors along with the single ended receivers can be used to determine the type of USB charger attached. Reference information on implementing charger detection is provided in Section 8.2.

TABLE 5-9: USB WEAK PULL-UP ENABLE

| RESETB | DP Pullup Enable      | DM Pullup Enable      |
|--------|-----------------------|-----------------------|
| 0      | 0                     | 0                     |
| 1      | ChargerPullupEnableDP | ChargerPullupEnableDM |

**Note:** ChargerPullupEnableDP and ChargerPullupEnableDM are enabled in the USB IO & Power Management register.

#### 5.10 USB Audio Support

**Note:** The USB3340 supports "USB Digital Audio" through the USB protocol in ULPI and USB Serial modes described in Section 6.0, "ULPI Operation," on page 36.

The USB3340 provides two low resistance analog switches that allow analog audio to be multiplexed over the DP and DM terminals of the USB connector. The audio switches are shown in . The electrical characteristics of the USB Audio Switches are provided in Table 4-10.

During normal USB operation the switches are off. When USB Audio is desired the switches can be turned "on" by enabling the *SpkLeftEn*, *SpkRightEn*, or *MicEn* bits in the Carkit Control register as described in Section 6.7.2, "USB Audio Mode," on page 55. These bits are disabled by default.

The **RESETB** pin must be high when using the analog switches so that the **VDD33** supply is present. If the **VDD33** supply is applied externally and **RESETB** is held low the switches will be off.

In addition to USB Audio support the switches could also be used to multiplex a second Full Speed USB transceiver to the USB connector. The signal quality will be degraded slightly due to the "on" resistance of the switches. The USB3340 single-ended receivers described in Section 5.2.1, "USB Transceiver," on page 18 are enabled while in synchronous mode and are disabled when Carkit Mode is entered.

The USB3340 does not provide the DC bias for the audio signals. The **SPK\_R** and **SPK\_L** pins should be biased to 1.65V when audio signals are routed through the USB3340. This DC bias is necessary to prevent the audio signal from swinging below ground and being clipped by ESD Diodes.

When the system is not using the USB Audio switches, the SPK\_R and SPK\_L switches should be disabled.

#### 6.0 ULPI OPERATION


#### 6.1 ULPI Introduction

The USB3340 uses the industry standard ULPI digital interface for communication between the transceiver and Link (device controller). The ULPI interface is designed to reduce the number of pins required to connect a discrete USB transceiver to an ASIC or digital controller. For example, a full UTMI+ Level 3 OTG interface requires 54 signals while a ULPI interface requires only 12 signals.

The ULPI interface is documented completely in the "UTMI+ Low Pin Interface (ULPI) Specification Revision 1.1". The following sections describe the operating modes of the USB3340 digital interface.

Figure 6-1 illustrates the block diagram of the ULPI digital functions. It should be noted that this USB3340 does not use a "ULPI wrapper" around a UTMI+ PHY core as the ULPI specification implies.

FIGURE 6-1: ULPI DIGITAL BLOCK DIAGRAM

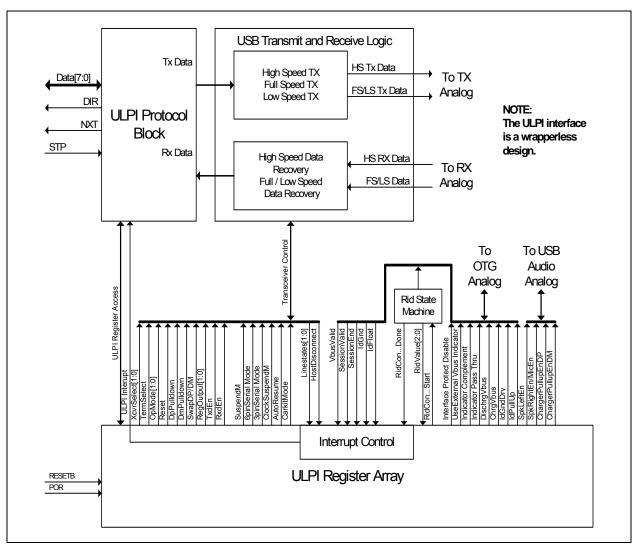

The advantage of a "wrapper-less" architecture is that the USB3340 has a lower USB latency than a design which must first register signals into the PHY's wrapper before the transfer to the transceiver core. A low latency PHY allows a wrapper around a UTMI Link to be used and still make the required USB turn-around timing required by the USB 2.0 specification.

RxEndDelay maximum allowed by the UTMI+/ULPI for 8-bit data is 63 Hi-Speed clocks. USB3340 uses a low latency Hi-Speed receiver path to lower the RxEndDelay to 43 Hi-Speed clocks. This low latency design gives the Link more cycles to make decisions and reduces the Link complexity. This is the result of the "wrapper less" architecture of the USB3340. This low RxEndDelay should allow legacy UTMI Links to use a "wrapper" to convert the UTMI+ interface to a ULPI interface.

In Figure 6-1, a single ULPI Protocol Block decodes the ULPI 8-bit bi-directional bus when the Link addresses the PHY. The Link must use the **DIR** output to determine direction of the ULPI data bus. The USB3340 is the "bus arbitrator". The ULPI Protocol Block will route data/commands to the transmitter or the ULPI register array.

### 6.1.1 ULPI INTERFACE SIGNALS

The UTMI+ Low Pin Interface (ULPI) uses a 12-pin interface to connect a USB Transceiver to an external Link. The reduction of external pins, relative to UTMI+, is accomplished implementing the relatively static configuration pins (i.e. xcvrselect[1:0], termselect, opmode[1:0], and DpPullDown DmPulldown) as an internal register array.

An 8-bit bi-directional data bus clocked at 60 MHz allows the Link to access this internal register array and transfer USB packets to and from the PHY. The remaining 3 pins function to control the data flow and arbitrate the data bus.

Direction of the 8-bit data bus is controlled by the **DIR** output from the PHY. Another output, **NXT**, is used to control data flow into and out of the device. Finally, **STP**, which is in input to the PHY, terminates transfers and is used to start up and resume from Low Power Mode.

The ULPI Interface signals are described below in Table 6-1.

TABLE 6-1: ULPI INTERFACE SIGNALS

| Signal    | Direction | Description   |  |  |
|-----------|-----------|---|--|--|
| CLK       | I/O       | 60 MHz ULPI clock. All ULPI signals are driven synchronous to the rising edge of this clock. This clock can be either driven by the PHY or the Link as described in Section 5.5.1, "REFCLK Frequency Selection," on page 21.  |  |  |
| DATA[7:0] | I/O       | 8-bit bi-directional data bus. Bus ownership is determined by DIR. The Link and PHY initiate data transfers by driving a non-zero pattern onto the data bus. ULPI defines interface timing for a single-edge data transfers with respect to rising edge of the ULPI clock.  |  |  |
| DIR       | OUT       | Controls the direction of the data bus. When the PHY has data to transfer to the Link, it drives <b>DIR</b> high to take ownership of the bus. When the PHY has no data to transfer it drives <b>DIR</b> low and monitors the bus for commands from the Link. The PHY will pull <b>DIR</b> high whenever the interface cannot accept data from the Link, such as during PLL start-up. |  |  |
| STP       | IN        | The Link asserts <b>STP</b> for one clock cycle to stop the data stream currently on the bus. If the Link is sending data to the PHY, <b>STP</b> indicates the last byte of data was on the bus in the previous cycle.  |  |  |
| NXT       | OUT       | The PHY asserts <b>NXT</b> to throttle the data. When the Link is sending data to the PHY, <b>NXT</b> indicates when the current byte has been accepted by the PHY. The Link places the next byte on the data bus in the following clock cycle.   |  |  |

USB3340 implements a Single Data Rate (SDR) ULPI interface with all data transfers happening on the rising edge of the 60 MHz ULPI Clock while operating in Synchronous Mode. The direction of the data bus is determined by the state of **DIR**. When **DIR** is high, the PHY is driving **DATA[7:0]**. When **DIR** is low, the Link is driving **DATA[7:0]**.

Each time DIR changes, a "turn-around" cycle occurs where neither the Link nor PHY drive the data bus for one clock cycle. During the "turn-around" cycle, the state of **DATA[7:0]** is unknown and the PHY will not read the data bus.

Because USB uses a bit-stuffing encoding, some means of allowing the PHY to throttle the USB transmit data is needed. The ULPI signal **NXT** is used to request the next byte to be placed on the data bus by the Link.

The ULPI interface supports the two basic modes of operation: Synchronous Mode and Asynchronous Mode. Asynchronous Mode includes Low Power Mode, the Serial Modes, and Carkit Mode. In Synchronous Mode, all signals change synchronously with the 60 MHz ULPI clock. In asynchronous modes the clock is off and the ULPI bus is redefined to bring out the signals required for that particular mode of operations. The description of synchronous Mode is described

# **USB3340**

in the following sections while the descriptions of the asynchronous modes are described in Section 6.5, "Low Power Mode," on page 49, Section 6.6, "Full Speed/Low Speed Serial Modes," on page 52, and Section 6.7, "Carkit Mode," on page 53.

### 6.1.2 ULPI INTERFACE TIMING IN SYNCHRONOUS MODE

The control and data timing relationships are given in Figure 6-2 and Table 4-3. All timing is relative to the rising clock edge of the 60 MHz ULPI Clock.

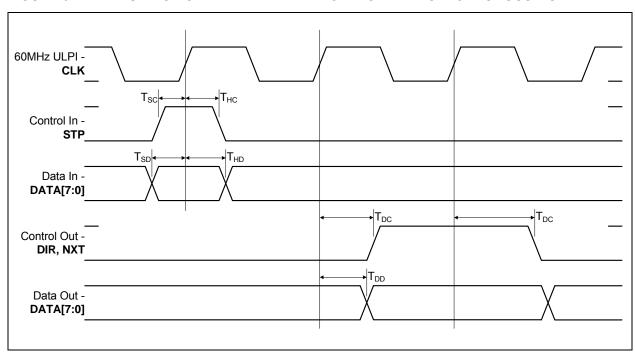


FIGURE 6-2: ULPI SINGLE DATA RATE TIMING DIAGRAM IN SYNCHRONOUS MODE

# 6.2 ULPI Register Access

The following section details the steps required to access registers through the ULPI interface. At any time **DIR** is low the Link may access the ULPI registers set using the Transmit Command byte. The ULPI registers retain their contents when the PHY is in Low Power Mode, Full Speed/Low Speed Serial Mode, or Carkit Mode.

### 6.2.1 TRANSMIT COMMAND BYTE (TX CMD)

A command from the Link begins a ULPI transfer from the Link to the USB3340. Before reading a ULPI register, the Link must wait until **DIR** is low, and then send a Transmit Command Byte (TX CMD) byte. The TX CMD byte informs the USB3340 of the type of data being sent. The TX CMD is followed by a data transfer to or from the USB3340. Table 6-2 gives the TX command byte (TX CMD) encoding for the USB3340. The upper two bits of the TX CMD instruct the PHY as to what type of packet the Link is transmitting.


TABLE 6-2: ULPI TX CMD BYTE ENCODING

| Command Name   | CMD Bits[7:6] | CMD Bits[5:0]  | Command Description  |
|----------------|---------------|--|--|
| ldle           | 00b           | 000000b  | ULPI Idle  |
| Transmit       | 01b           | 000000b USB Transmit Packet with No Packet Identifier (NOPID)                      |  |
|                |               | 00XXXXb  | USB Transmit Packet Identifier (PID) where DATA[3:0] is equal to the 4-bit PID. $P_3P_2P_1P_0$ where $P_3$ is the MSB. |
| Register Write | 10b           | XXXXXXb Immediate Register Write Command where: DATA[5:0] = 6-bit register address |  |
|                |               | 101111b  | Extended Register Write Command where the 8-bit register address is available on the next cycle.                       |
| Register Read  | 11b           | XXXXXXb Immediate Register Read Command where DATA[5:0] = 6-bit register address   |  |
|                |               | 101111b  | Extended Register Read Command where the 8-bit register address is available on the next cycle.                        |

### 6.2.2 ULPI REGISTER WRITE

A ULPI register write operation is given in Figure 6-3. The TX command with a register write **DATA[7:6]** = 10b is driven by the Link at T0. The register address is encoded into **DATA[5:0]** of the TX CMD byte.

FIGURE 6-3: ULPI REGISTER WRITE IN SYNCHRONOUS MODE

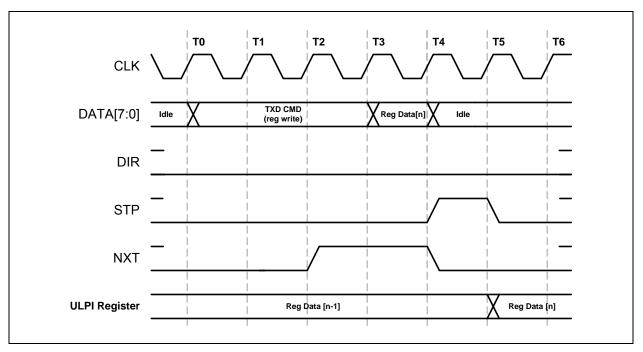


To write a register, the Link will wait until **DIR** is low, and at T0, drive the TX CMD on the data bus. At T2 the PHY will drive **NXT** high. On the next rising clock edge, T3, the Link will write the register data. At T4, the PHY will accept the register data and drive **NXT** low. The Link will drive an Idle on the bus and drive **STP** high to signal the end of the data packet. Finally, at T5, the PHY will latch the data into the register and the Link will pull **STP** low.

# **USB3340**

**NXT** is used to throttle when the Link drives the register data on the bus. **DIR** is low throughout this transaction since the PHY is receiving data from the Link. **STP** is used to end the transaction and data is registered after the de-assertion of **STP**. After the write operation completes, the Link must drive a ULPI Idle (00h) on the data bus. If the databus is not driven to idle the USB3340 may decode the non-zero bus value as an RX Command.

A ULPI extended register write operation is shown in Figure 6-4. To write an extended register, the Link will wait until **DIR** is low, and at T0, drive the TX CMD on the data bus. At T2 the PHY will drive **NXT** high. On the next clock T3 the Link will drive the extended address. On the next rising clock edge, T4, the Link will write the register data. At T5, the PHY will accept the register data and drive **NXT** low. The Link will drive an Idle on the bus and drive **STP** high to signal the end of the data packet. At T5, the PHY will latch the data into the register. Finally, at T6, the Link will drive **STP** low.

FIGURE 6-4: ULPI EXTENDED REGISTER WRITE IN SYNCHRONOUS MODE

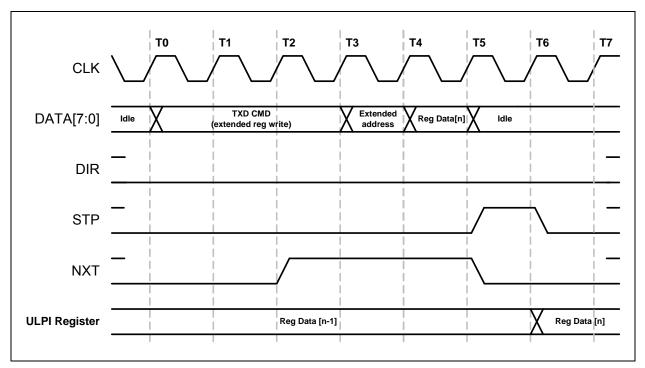

### 6.2.3 ULPI REGISTER READ

A ULPI register read operation is given in Figure 6-5. The Link drives a TX CMD byte with **DATA[7:6]** = 11h for a register read. **DATA[5:0]** of the ULPI TX command bye contain the register address.


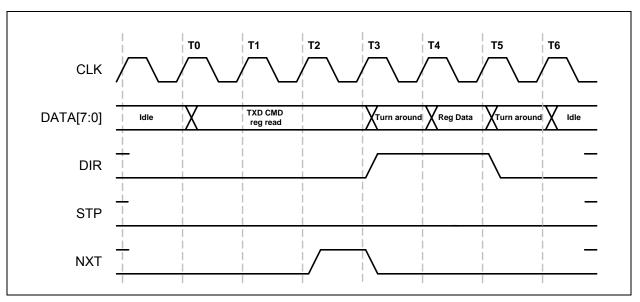


FIGURE 6-5: ULPI REGISTER READ IN SYNCHRONOUS MODE

At T0, the Link will place the TX CMD on the data bus. At T2, the PHY will bring **NXT** high, signaling the Link it is ready to accept the data transfer. At T3, the PHY reads the TX CMD, determines it is a register read, and asserts **DIR** to gain control of the bus. The PHY will also de-assert **NXT**. At T4, the bus ownership has transferred back to the PHY and the PHY drives the requested register onto the data bus. At T5, the Link will read the data bus and the PHY will drop **DIR** low returning control of the bus back to the Link. After the turn around cycle, the Link must drive a ULPI Idle command at T6.

A ULPI extended register read operation is shown in Figure 6-6.To read an extended register, the Link writes the TX CMD with the address set to 2Fh. At T2, the PHY will assert **NXT**, signaling the Link it is ready to accept the extended address. At T3, the Link places the extended register address on the bus. At T4, the PHY reads the extended address, and asserts **DIR** to gain control of the bus. The PHY will also de-assert **NXT**. At T5, the bus ownership has transferred back to the PHY and the PHY drives the requested register onto the data bus. At T6, the Link will read the data bus and the PHY will de-assert **DIR** returning control of the bus back to the Link. After the turn around cycle, the Link must drive a ULPI Idle command at T6.

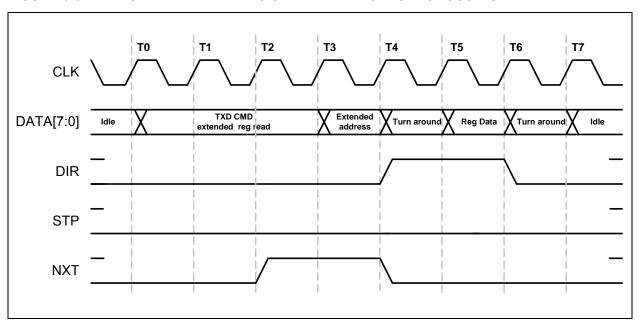

### FIGURE 6-6: ULPI EXTENDED REGISTER READ IN SYNCHRONOUS MODE

### 6.3 USB3340 Receiver


The following section describes how the USB3340 uses the ULPI interface to receive USB signaling and transfer status information to the Link. This information is communicated to the Link using RX Commands to relay bus status and received USB packets.

### 6.3.1 ULPI RECEIVE COMMAND (RX CMD)

The ULPI Link needs information which was provided by the following pins in a UTMI implementation: linestate[1:0], rxactive, rxvalid, rxerror, and VbusValid. When implementing the OTG functions, the **VBUS** and **ID** pin states must also be transferred to the Link. ULPI defines a Receive Command Byte (RXCMD) that contains this information.

An RXCMD can be sent a any time the bus is idle. The RXCMD is initiated when the USB3340 asserts **DIR** to take control of the bus. The timing of RXCMD is shown in the figure below. The USB3340 can send single or back to back RXCMD's as required. The Encoding of the RXCMD byte is given in the Table 6-3.

FIGURE 6-7: ULPI RXCMD TIMING

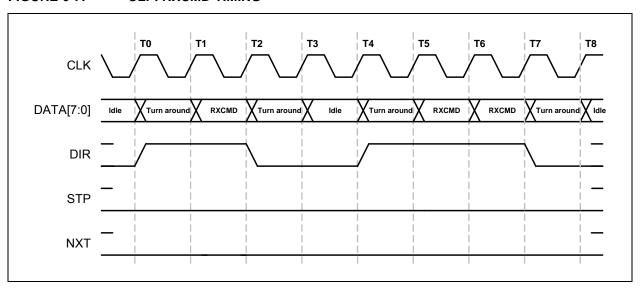

Transfer of the RXCMD byte occurs in Synchronous Mode when the PHY has control of the bus. The ULPI Protocol Block shown in Figure 6-1 determines when to send an RXCMD. A RXCMD will occur:

- · When a linestate change occurs.
- · When VBUS or ID comparators change state.
- · During a USB receive when NXT is low.
- · After the USB3340 deasserts DIR and STP is low during start-up
- After the USB3340 exits Low Power Mode, Serial Modes, or Carkit Mode after detecting that the Link has deasserted STP, and DIR is low.

When a USB Receive is occurring, RXCMD's are sent whenever **NXT** = 0 and **DIR** = 1. During a USB Transmit, the RXCMD's are returned to the Link after **STP** is asserted.

If an RXCMD event occurs during a Hi-Speed USB transmit, the RXCMD is blocked until **STP** de-asserts at the end of the transmit. The RXCMD contains the status that is current at the time the RXCMD is sent.

TABLE 6-3: ULPI RX CMD ENCODING

| Data [7:0] | Name                   | Description and Value  |  |         |         |                      |  |
|------------|------------------------|--|--|---------|---------|----------------------|--|
| [1:0]      | Linestate              | UTMI Line  | UTMI Linestate Signals. See Section 6.3.1.1, "Definition of Linestate," on page 44   |         |         |                      |  |
| [3:2]      | Encoded<br>VBUS        | ENCODED VBUS VOLTAGE STATES  |  |         |         |                      |  |
|            | State                  | VALUE  | VBUS VOLTAGE   | SESSEND | SESSVLD | VBUSVLD <sub>2</sub> |  |
|            |                        | 00   | V <sub>VBUS</sub> < V <sub>SESS_END</sub>  | 1       | 0       | 0                    |  |
|            |                        | 01   | V <sub>SESS_END</sub> < V <sub>VBUS</sub> < V <sub>SESS_VLD</sub>  | 0       | 0       | 0                    |  |
|            |                        | 10   | V <sub>SESS_VLD</sub> < V <sub>VBUS</sub> < V <sub>VBUS_VLD</sub>  | X       | 1       | 0                    |  |
|            |                        | 11   | V <sub>VBUS_VLD</sub> < V <sub>VBUS</sub>  | Х       | Х       | 1                    |  |
| [5:4]      | Rx Event<br>Encoding   | ENCODED  | UTMI EVENT SIGNALS   |         |         |                      |  |
|            |                        | VALUE  | RXACTIVE   | RXERROR | HOSTDIS | CONNECT              |  |
|            |                        | 00 0 0   |  |         |         | 0                    |  |
|            |                        | 01   | 1  | 0       |         | 0                    |  |
|            |                        | 11   | 1  | 1       |         | 0                    |  |
|            |                        | 10 X X 1   |  |         |         | 1                    |  |
| [6]        | State of <b>ID</b> pin | Set to the logic state of the <b>ID</b> pin. A logic low indicates an A device. A logic high indicates a B device. |  |         |         |                      |  |
| [7]        | alt_int                | occurs on Interrupt La Converter   | Asserted when a non-USB interrupt occurs. This bit is set when an unmasked event occurs on any bit in the Carkit Interrupt Latch register. The Link must read the Carkit Interrupt Latch register to determine the source of the interrupt. Section 6.8, "RID Converter Operation," on page 55 describes how an interrupt can be generated when the <i>RidConversionDone</i> bit is set. |         |         |                      |  |

Note 1: An 'X' is a do not care and can be either a logic 0 or 1.

2: The value of VbusValid is defined in Table 5-6.

# 6.3.1.1 Definition of Linestate

The Linestate information is used to relay information back to the Link on the current status of the USB data lines, **DP** and **DM**. The definition of Linestate changes as the USB3340 transitions between LS/FS mode, HS mode, and HS Chirp.

### 6.3.1.1.1 LS/FS Linestate Definitions

In LS and FS operating modes the Linestate is defined by the outputs of the LS/FS Single Ended Receivers (SE RX). The logic thresholds for single ended receivers,  $V_{ILSE}$  and  $V_{ILSE}$  are shown in Table 4-5.

TABLE 6-4: USB LINESTATE DECODING IN FS AND LS MODE

| Linestate[1:0] |             | DP SE RX | DM SE RX | State     |
|----------------|-------------|----------|----------|-----------|
| 00             | SE0         | 0        | 0        | USB Reset |
| 01             | J (FS idle) | 1        | 0        | J State   |
| 10             | K (LS Idle) | 0        | 1        | K State   |
| 11             | SE1         | 1        | 1        | SE1       |

Low Speed uses the same Linestate decoding threshold as Full Speed. Low Speed re-defines the Idle state as an inversion of the Full Speed idle to account for the inversion which occurs in the hub repeater path. Linestates are decoded exactly as in Table 6-4 with the idle as a K state.

### 6.3.1.1.2 HS Linestate Definition

In HS mode the data transmission is too fast for Linestate to be transmitted with each transition in the data packet. In HS operation the Linestate is redefined to indicate activity on the USB interface. The Linestate will signal the assertion and de-assertion of squelch in HS mode.

TABLE 6-5: USB LINESTATE DECODING IN HS MODE

|    | Linestate[1:0] | DP SE RX | DM SE RX | State                  |
|----|----------------|----------|----------|------------------------|
| 00 | SE0            | 0        | 0        | HS Squelch asserted    |
| 01 | J              | 1        | 0        | HS Squelch de-asserted |
| 10 | К              | 0        | 1        | Invalid State          |
| 11 | SE1            | 1        | 1        | Invalid State          |

### 6.3.1.1.3 HS CHIRP Linestate Definition

There is also a third use of Linestate in HS Chirp where when the Host and Peripheral negotiate the from FS mode to HS mode. While the transitions from K to J or SE0 are communicated to the Link through the Linestate information.

TABLE 6-6: USB LINESTATE DECODING IN HS CHIRP MODE

| Linestate[1:0] |     | DP SE RX | DM SE RX | State   |
|----------------|-----|----------|----------|---|
| 00             | SE0 | 0        | 0        | HS Squelch asserted                                   |
| 01             | J   | 1        | 0        | HS Squelch de-asserted & HS differential Receiver = 1 |
| 10             | К   | 0        | 1        | HS Squelch de-asserted & HS differential Receiver = 0 |
| 11             | SE1 | 1        | 1        | Invalid State   |

### 6.3.2 USB RECEIVER

The USB3340 ULPI receiver fully supports HS, FS, and LS transmit operations. In all three modes the receiver detects the start of packet and synchronizes to the incoming data packet. In the ULPI protocol, a received packet has the priority and will immediately follow register reads and RXCMD transfers. Figure 6-8 shows a basic USB packet received by the USB3340 over the ULPI interface.

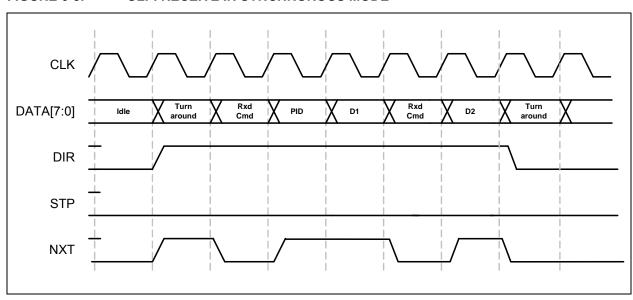


FIGURE 6-8: ULPI RECEIVE IN SYNCHRONOUS MODE

In Figure 6-8 the PHY asserts **DIR** to take control of the data bus from the Link. The assertion of **DIR** and **NXT** in the same cycle contains additional information that Rxactive has been asserted. When **NXT** is de-asserted and **DIR** is asserted, the RXCMD data is transferred to the Link. After the last byte of the USB receive packet is transferred to the PHY, the linestate will return to idle.

The ULPI Full Speed receiver operates according to the UTMI / ULPI specification. In the Full Speed case, the **NXT** signal will assert only when the Data bus has a valid received data byte. When **NXT** is low with **DIR** high, the RXCMD is driven on the data bus.

In Full Speed, the USB3340 will not issue a Rxactive de-assertion in the RXCMD until the DP/DM linestate transitions to idle. This prevents the Link from violating the two Full Speed bit times minimum turn around time.

### 6.3.2.1 Disconnect Detection

A Hi-Speed host must detect a disconnect by sampling the transmitter outputs during the long EOP transmitted during a SOF packet. The USB3340 only looks for a Hi-Speed disconnect during the long EOP where the period is long enough for the disconnect reflection to return to the host PHY. When a Hi-Speed disconnect occurs, the USB3340 will return a RXCMD and set the host disconnect bit in the USB Interrupt Status register.

When in FS or LS modes, the Link is expected to handle all disconnect detection.

### 6.3.2.2 Link Power Management (LPM) Token Receive

The USB3340 is fully capable of receiving the Extended PID in the LPM token. When the LPM 0000b PID is received, this information is passed to the Link as a normal receive packet. If the Link chooses to enter LPM suspend, the procedure detailed in Section 6.5.3, "Link Power Management (LPM)," on page 51 can be followed.

### 6.4 USB3340 Transmitter

The USB3340 ULPI transmitter fully supports HS, FS, and LS transmit operations. Figure 6-1 shows the Hi-Speed, Full Speed, and Low Speed transmitter block controlled by ULPI Protocol Block. Encoding of the USB packet follows the bit-stuffing and NRZI outlined in the USB 2.0 specification. Many of these functions are reused between the HS and FS/LS transmitters. When using the USB3340, Table 5-1 should always be used as a guideline on how to configure for various

modes of operation. The transmitter decodes the inputs of *XcvrSelect*[1:0], *TermSelect*, *OpMode*[1:0], *DpPulldown*, and *DmPulldown* to determine what operation is expected. Users must strictly adhere to the modes of operation given in Table 5-1.

Several important functions for a device and host are designed into the transmitter blocks.

The USB3340 transmitter will transmit a 32-bit long Hi-Speed sync before every Hi-Speed packet. In Full and Low Speed modes a 8-bit sync is transmitted.

When the device or host needs to chirp for Hi-Speed port negotiation, the *OpMode* = 10 setting will turn off the bit-stuffing and NRZI encoding in the transmitter. At the end of a chirp, the USB3340 *OpMode* register bits should be changed only after the RXCMD linestate encoding indicates that the transmitter has completed transmitting. Should the opmode be switched to normal bit-stuffing and NRZI encoding before the transmit pipeline is empty, the remaining data in the pipeline may be transmitted in an bit-stuff encoding format.

Please refer to the ULPI specification for a detailed discussion of USB reset and HS chirp.

### 6.4.1 USB3340 HOST FEATURES

The USB3340 can also support USB Host operation and includes the following features that are required for Host operation.

### 6.4.1.1 Hi-Speed Long EOP

When operating as a Hi-Speed host, the USB3340 will automatically generate a 40 bit long End of Packet (EOP) after a SOF PID (A5h). The USB3340 determines when to send the 40-bit long EOP by decoding the ULPI TX CMD bits [3:0] for the SOF. The 40-bit long EOP is only transmitted when the *DpPulldown* and *DmPulldown* bits in the OTG Control register are asserted. The Hi-Speed 40-bit long EOP is used to detect a disconnect in mode.

In device mode, the USB3340 will not send a long EOP after a SOF PID.

# 6.4.1.2 Low Speed Keep-Alive

Low Speed keep alive is supported by the USB3340. When in Low Speed mode, the USB3340 will send out two Low Speed bit times of SE0 when a SOF PID is received.

# 6.4.1.3 UTMI+ Level 3

Pre-amble is supported for UTMI+ Level 3 compatibility. When *XcvrSelect* is set to (11b) in host mode, (*DpPulldown* and *DmPulldown* both asserted) the USB3340 will pre-pend a Full Speed pre-amble before the Low Speed packet. Full Speed rise and fall times are used in this mode. The pre-amble consists of the following: Full Speed sync, the encoded pre-PID (C3h) and then Full Speed idle (DP=1 and DM = 0). A Low Speed packet follows with a sync, data and a LS EOP.

The USB3340 will only support UTMI+ Level 3 as a host. The USB3340 does not support UTMI+ Level 3 as a peripheral. A UTMI+ Level 3 peripheral is an upstream hub port. The USB3340 will not decode a pre-amble packet intended for a LS device when the USB3340 is configured as the upstream port of a FS hub, *XcvrSelect* = 11b, *DpPulldown* = 0b, *DmPulldown* = 0b.

### 6.4.1.4 Host Resume K

Resume K generation is supported by the USB3340. At the end of a USB Suspend the PHY will drive a K back to the downstream device. When the USB3340 exits from Low Power Mode, when operating as a host, it will automatically transmit a Resume K on DP/DM. The transmitters will end the K with SE0 for two Low Speed bit times. If the USB3340 was operating in Hi-Speed mode before the suspend, the host must change to Hi-Speed mode before the SE0 ends. SE0 is two Low Speed bit times which is about 1.2 us. For more details please see sections 7.1.77 and 7.9 of the USB Specification.

In device mode, the resume K will not append an SE0, but release the bus to the correct idle state, depending upon the operational mode as shown in Table 5-1.

The ULPI specification includes a detailed discussion of the resume sequence and the order of operations required. To support Host start-up of less than 1mS the USB3340 implements the ULPI *AutoResume* bit in the Interface Control register. The default *AutoResume* state is 0 and this bit should be enabled for Host applications.


### 6.4.1.5 No SYNC and EOP Generation (*OpMode* = 11)

UTMI+ defines OpMode = 11 where no sync and EOP generation occurs in Hi-Speed operation. This is an option to the ULPI specification and not implemented in the USB3340.

### 6.4.2 TYPICAL USB TRANSMIT WITH ULPI

Figure 6-9 shows a typical USB transmit sequence. A transmit sequence starts by the Link sending a TX CMD where **DATA[7:6]** = 01b, **DATA[5:4]** = 00b, and **Data[3:0]** = PID. The TX CMD with the PID is followed by transmit data.

FIGURE 6-9: ULPI TRANSMIT IN SYNCHRONOUS MODE

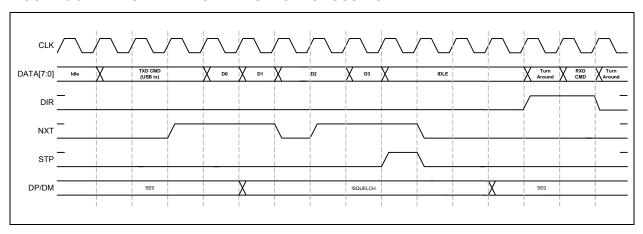

During transmit the PHY will use **NXT** to control the rate of data flow into the PHY. If the USB3340 pipeline is full or bit-stuffing causes the data pipeline to overfill **NXT** is de-asserted and the Link will hold the value on Data until **NXT** is asserted. The USB Transmit ends when the Link asserts **STP** while **NXT** is asserted.

**Note:** The Link cannot assert **STP** with **NXT** de-asserted since the USB3340 is expecting to fetch another byte from the Link.

After the USB3340 completes transmitting, the **DP** and **DM** lines return to idle and a RXCMD is returned to the Link so the inter-packet timers may be updated by linestate.

While operating in Full Speed or Low Speed, an End-of-Packet (EOP) is defined as SE0 for approximately two bit times, followed by J for one bit time. The transceiver drives a J state for one bit time following the SE0 to complete the EOP. The Link must wait for one bit time following line state indication of the SE0 to J transition to allow the transceiver to complete the one bit time J state. All bit times are relative to the speed of transmission.

In the case of Full Speed or Low Speed, after **STP** is asserted each FS/LS bit transition will generate a RXCMD since the bit times are relatively slow.

### 6.4.2.1 Link Power Management Token Transmit

A Host Link can send a LPM command using the USB3340. When sending the LPM token the normal transmit method is not used. Sending a LPM token requires the USB3340 to send a 0000b or 'F0' PID. When the ULPI specification was defined the 'F0' PID was not defined. The ULPI specification used the "Reserved" 'F0' PID to signal chirp and resume signaling while using *OpMode* 10b. While in *OpMode* 00b the USB3340 is able to generate the 'F0' PID as shown below.

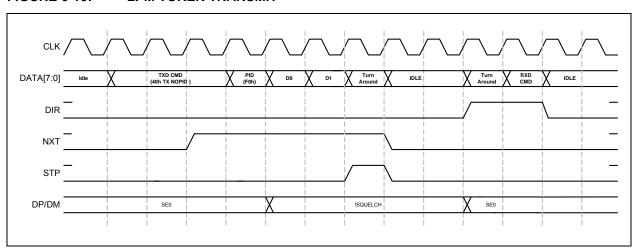


FIGURE 6-10: LPM TOKEN TRANSMIT

To send the 'F0' PID, the link will be required to use the TX CMD with NOPID to initiate the transmit and then follow up the TX CMD with the 'F0' PID. The data bytes follow as in a normal transmit, in *OpMode* 00b. The key difference is in that the link will have to send the PID the same as it would send a data packet. The USB3340 is able to recognize the LPM transmit and correctly send the PID information.

### 6.5 Low Power Mode

Low Power Mode is a power down state to save current when the USB session is suspended. The Link controls when the PHY is placed into or out of Low Power Mode. In Low Power Mode all of the circuits are powered down except the interface pins, Full Speed receiver, VBUS comparators, and IdGnd comparator. The VBUS and ID comparators can optionally be powered down to save current as shown in Section 6.5.5, "Minimizing Current in Low Power Mode," on page 52.

Before entering Low Power Mode, the USB3340 must be configured to set the desired state of the USB transceiver. The *XcvrSelect[1:0], TermSelect* and *OpMode[1:0]* bits in the Function Control register, and the *DpPulldown* and *DmPulldown* bits in the OTG Control register control the configuration as shown in Table 5-1. The **DP** and **DM** pins are configured to a high impedance state by configuring OpMode[1:0] = 01 as shown in the programming example in Table 6-8. Pull-down resistors with a value of approximately  $2M\Omega$  are present on the **DP** and **DM** pins to avoid false linestate indications that could result if the pins were allowed to float.

### 6.5.1 ENTERING LOW POWER/SUSPEND MODE

To enter Low Power Mode, the Link will write a 0 or clear the SuspendM bit in the Function Control register. After this write is complete, the PHY will assert **DIR** high and after a minimum of five rising edges of **CLKOUT**, drive the clock low. After the clock is stopped, the PHY will enter a low power state to conserve current. Placing the PHY in Suspend Mode is not related to USB Suspend. To clarify this point, USB Suspend is initiated when a USB host stops data transmissions and enters Full-Speed mode with  $15K\Omega$  pull-down resistors on **DP** and **DM**. The suspended device goes to Full-Speed mode with a pull-up on **DP**. Both the host and device remain in this state until one of them drives **DM** high (this is called a resume).

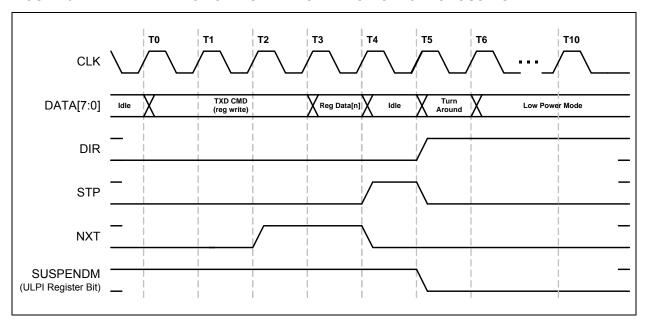


FIGURE 6-11: ENTERING LOW POWER MODE FROM SYNCHRONOUS MODE

While in Low Power Mode, the Data interface is redefined so that the Link can monitor Linestate and the VBUS voltage. In Low Power Mode **DATA[3:0]** are redefined as shown in Table 6-7. Linestate[1:0] is the combinational output of the Single-Ended Receivers. The "int" or interrupt signal indicates an unmasked interrupt has occurred. When an unmasked interrupt or linestate change has occurred, the Link is notified and can determine if it should wake-up the PHY.

TABLE 6-7: INTERFACE SIGNAL MAPPING DURING LOW POWER MODE

| Signal       | Maps to   | Direction | Description  |
|--------------|-----------|-----------|--|
| linestate[0] | DATA[0]   | OUT       | Combinatorial LineState[0] driven directly by the Full-Speed single ended receiver. Note 6-1 |
| linestate[1] | DATA[1]   | OUT       | Combinatorial LineState[1] driven directly by the Full-Speed single ended receiver. Note 6-1 |
| reserved     | DATA[2]   | OUT       | Driven Low   |
| int          | DATA[3]   | OUT       | Active high interrupt indication. Must be asserted whenever any unmasked interrupt occurs.   |
| reserved     | DATA[7:4] | OUT       | Driven Low   |

Note 6-1 LineState: These signals reflect the current state of the Full-Speed single ended receivers. LineState[0] directly reflects the current state of **DP**. LineState[1] directly reflects the current state of **DM**. When **DP=DM=**0 this is called "Single Ended Zero" (SE0). When **DP=DM=**1, this is called "Single Ended One" (SE1).

An unmasked interrupt can be caused by the following comparators changing state: VbusVld, SessVld, SessEnd, and ldGnd. If any of these signals change state during Low Power Mode and the bits are enabled in either the USB Interrupt Enable Rising or USB Interrupt Enable Falling registers, **DATA[3]** will assert. During Low Power Mode, the VbusVld and SessEnd comparators can have their interrupts masked to lower the suspend current as described in Section 6.5.5, "Minimizing Current in Low Power Mode," on page 52.

While in Low Power Mode, the Data bus is driven asynchronously because all of the PHY clocks are stopped during Low Power Mode.

### 6.5.2 EXITING LOW POWER MODE

To exit Low Power Mode, the Link will assert **STP**. Upon the assertion of **STP**, the USB3340 will begin its start-up procedure. After the PHY start-up is complete, the PHY will start the clock on **CLKOUT** and de-assert **DIR**. After **DIR** has been de-asserted, the Link can de-assert **STP** when ready and start operating in Synchronous Mode. The PHY will automatically set the *SuspendM* bit to a 1 in the Function Control register.

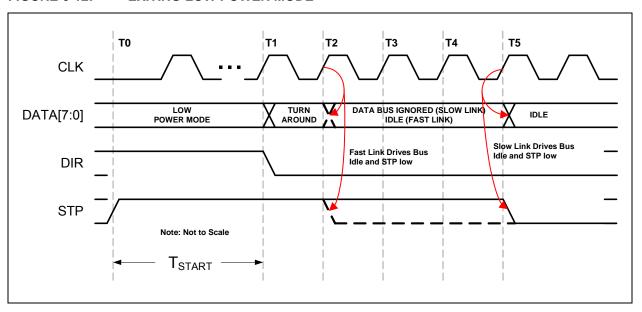


FIGURE 6-12: EXITING LOW POWER MODE

The value for  $T_{START}$  is given in Table 4-2.

Should the Link de-assert **STP** before **DIR** is de-asserted, the USB3340 will detect this as a false resume request and return to Low Power Mode. This is detailed in Section 3.9.4 of the UTMI+ Low Pin Interface (ULPI) Specification Revision 1.1.

### 6.5.3 LINK POWER MANAGEMENT (LPM)

When the USB3340 is operating with a Link capable of Link Power Management, the Link will place the USB3340 in and out of suspend rapidly to conserve power. The USB3340 provides a fast suspend recovery that allows the USB3340 to meet the suspend recovery time detailed in the Link Power Management ECN to the USB 2.0 specification.

When the Link places the USB3340 into suspend during Link Power Management, the *LPM Enable* bit of the HS Compensation Register must be set to 1. This allows the USB3340 to start-up in the time specified in Table 4-2.

### 6.5.4 INTERFACE PROTECTION

ULPI protocol assumes that both the Link and PHY will keep the ULPI data bus driven by either the Link when **DIR** is low or the PHY when **DIR** is high. The only exception is when **DIR** has changed state and a turn around cycle occurs for 1 clock period.

In the design of a USB system, there can be cases where the Link may not be driving the ULPI bus to a known state while **DIR** is low. Two examples where this can happen is because of a slow Link start-up or a hardware reset.

### 6.5.4.1 Start up Protection

Upon start-up, when the PHY de-asserts **DIR**, the Link must be ready to receive commands and drive Idle on the data bus. If the Link is not ready to receive commands or drive Idle, it must assert **STP** before **DIR** is de-asserted. The Link can then de-assert **STP** when it has completed its start-up. If the Link doesn't assert **STP** before it can receive commands, the **PHY** may interpret the data bus state as a TX CMD and transmit invalid data onto the **USB** bus, or make invalid register writes.

# **USB3340**

When the USB3340 sends a RXCMD the Link is required to drive the data bus back to idle at the end of the turn around cycle. If the Link does not drive the databus to idle the USB3340 may take the information on the data bus as a TXCMD and transmit data on **DP** and **DM** until the Link asserts stop. If the **ID** pin is floated the last RXCMD from the USB3340 will remain on the bus after **DIR** is de-asserted and the USB3340 will take this in as a TXCMD.

A Link should be designed to have the default POR state of the **STP** output high and the data bus tri-stated. The USB3340 has weak pull-downs on the data bus to prevent these inputs from floating when not driven. These resistors are only used to prevent the ULPI interface from floating during events when the link ULPI pins may be tri-stated. The strength of the pull down resistors can be found in Table 4-4. The pull downs are not strong enough to pull the data bus low after a ULPI RXCMD, the Link must drive the data bus to idle after **DIR** is de-asserted.

In some cases, a Link may be software configured and not have control of its **STP** pin until after the PHY has started. In this case, the USB3340 has in internal pull-up on the **STP** input pad which will pull **STP** high while the Link's **STP** output is tri-stated. The **STP** pull-up resistor is enabled on POR and can be disabled by setting the *InterfaceProtectDisable* bit 7 of the Interface Control register.

The **STP** pull-up resistor will pull-up the Link's **STP** input high until the Link configures and drives **STP** high. After the Link completes its start-up, **STP** can be synchronously driven low.

A Link design which drives **STP** high during POR can disable the pull-up resistor on **STP** by setting *InterfaceProtect-Disable* bit to 1. A motivation for this is to reduce the suspend current. In Low Power Mode, **STP** is held low, which would draw current through the pull-up resistor on **STP**.

### 6.5.4.2 Warm Reset

Designers should also consider the case of a warm restart of a Link with a PHY in Low Power Mode. After the PHY enters Low Power Mode, **DIR** is asserted and the clock is stopped. The USB3340 looks for **STP** to be asserted to restart the clock and then resume normal synchronous operation.

Should the USB3340 be suspended in Low Power Mode, and the Link receives a hardware reset, the PHY must be able to recover from Low Power Mode and start its clock. If the Link asserts **STP** on reset, the PHY will exit Low Power Mode and start its clock.

If the Link does not assert **STP** on reset, the interface protection pull-up can be used. When the Link is reset, its **STP** output will tri-state and the pull-up resistor will pull **STP** high, signaling the PHY to restart its clock.

### 6.5.5 MINIMIZING CURRENT IN LOW POWER MODE

In order to minimize the suspend current in Low Power Mode, the VBUS and ID comparators can be disabled to reduce suspend current. In Low Power Mode, the VbusVld and SessEnd comparators are not needed and can be disabled by clearing the associated bits in both the USB Interrupt Enable Rising and USB Interrupt Enable Falling registers. By disabling the interrupt in BOTH the rise and fall registers, the SessEnd and VbusVld comparators are turned off. The IdFloatRise and IdFloatFall bits in Carkit Interrupt Enable register should also be disabled if they were set. When exiting Low Power Mode, the Link should immediately re-enable the VbusVld and SessEnd comparators if host or OTG functionality is required.

In addition to disabling the OTG comparators in Low Power Mode, the Link may choose to disable the Interface Protect Circuit. By setting the *InterfaceProtectDisable* bit high in the *Interface Control* register, the Link can disable the pull-up resistor on **STP**. When **RESETB** is low the Interface Protect Circuit will be disabled.

### 6.6 Full Speed/Low Speed Serial Modes

The USB3340 includes two serial modes to support legacy Links which use either the 3pin or 6pin serial format. To enter either serial mode, the Link will need to write a 1 to the 6-pin FsLsSerialMode or the 3-pin FsLsSerialMode bits in the Interface control register. Serial Mode may be used to conserve power when attached to a device that is not capable of operating in Hi-Speed.

The serial modes are entered in the same manner as the entry into Low Power Mode. The Link writes the Interface Control register bit for the specific serial mode. The USB3340 will assert **DIR** and shut off the clock after at least five clock cycles. Then the data bus goes to the format of the serial mode selected. Before entering Serial Mode the Link must set the ULPI transceiver to the appropriate mode as defined in Table 5-1.

In ULPI Clock Output Mode, the PHY will shut off the 60 MHz clock to conserve power. Should the Link need the 60 MHz clock to continue during the serial mode of operation, the *ClockSuspendM* bit[3] of the Interface Control Register should be set before entering a serial mode. If set, the 60 MHz clock will be present during serial modes.

In serial mode, interrupts are possible from unmasked sources. The state of each interrupt source is sampled prior to the assertion of **DIR** and this is compared against the asynchronous level from interrupt source.

Exiting the serial modes is the same as exiting Low Power Mode. The Link must assert **STP** to signal the PHY to exit serial mode. When the PHY can accept a command, **DIR** is de-asserted and the PHY will wait until the Link de-asserts **STP** to resume synchronous ULPI operation. The **RESETB** pin can also be pulsed low to reset the USB3340 and return it to Synchronous Mode.

### 6.6.1 3-PIN FS/LS SERIAL MODE

Three pin serial mode utilizes the data bus pins for the serial functions shown in Table 6-8.

TABLE 6-8: PIN DEFINITIONS IN 3 PIN SERIAL MODE

| Signal    | Connected to | Direction | Description  |  |
|-----------|--------------|-----------|--|--|
| tx_enable | DATA[0]      | IN        | Active High transmit enable.   |  |
| data      | DATA[1]      | I/O       | TX differential data on DP/DM when tx_enable is high. RX differential data from DP/DM when tx_enable is low. |  |
| SE0       | DATA[2]      | I/O       | TX SE0 on DP/DM when tx_enable is high. RX SE0_b from DP/DM when tx_enable is low.                           |  |
| interrupt | DATA[3]      | OUT       | Asserted when any unmasked interrupt occurs. Active high.  |  |
| Reserved  | DATA[7:4]    | OUT       | Driven Low.  |  |

### 6.6.2 6-PIN FS/LS SERIAL MODE

Six pin serial mode utilizes the data bus pins for the serial functions shown in Table 6-9.

TABLE 6-9: PIN DEFINITIONS IN 6 PIN SERIAL MODE

| Signal    | Connected to | Direction | Description   |  |
|-----------|--------------|-----------|---|--|
| tx_enable | DATA[0]      | IN        | Active High transmit enable.                              |  |
| tx_data   | DATA[1]      | IN        | Tx differential data on DP/DM when tx_enable is high.     |  |
| tx_se0    | DATA[2]      | IN        | Tx SE0 on DP/DM when tx_enable is high.                   |  |
| interrupt | DATA[3]      | OUT       | Asserted when any unmasked interrupt occurs. Active high. |  |
| rx_dp     | DATA[4]      | OUT       | Single ended receive data on DP.                          |  |
| rx_dm     | DATA[5]      | OUT       | Single ended receive data on DM.                          |  |
| rx_rcv    | DATA[6]      | OUT       | Differential receive data from DP and DM.                 |  |
| Reserved  | DATA[7]      | OUT       | Driven Low.   |  |

### 6.7 Carkit Mode

The USB3340 includes Carkit Mode to support a USB UART and USB Audio Mode.

By entering Carkit Mode, the USB3340 current drain is minimized. The internal PLL is disabled and the 60 MHz ULPI **CLKOUT** will be stopped to conserve power by default. The Link may configure the 60 MHz clock to continue by setting the *ClockSuspendM* bit of the Interface Control register before entering Carkit Mode. If set, the 60 MHz clock will continue during the Carkit Mode of operation.

In Carkit Mode, interrupts are possible if they have been enabled in the Carkit Interrupt Enable register. The state of each interrupt source is sampled prior to the assertion of **DIR** and this is compared against the asynchronous level from interrupt source. In Carkit Mode, the Linestate signals are not available per the ULPI specification.

The ULPI interface is redefined to the following when Carkit Mode is entered.

TABLE 6-10: PIN DEFINITIONS IN CARKIT MODE

| Signal   | Connected to | Direction                                  | Description  |
|----------|--------------|--|--|
| txd      | DATA[0]      | IN   | UART TXD signal that is routed to the <b>DM</b> pin if the <i>TxdEn</i> is set in the Carkit Control register.     |
| rxd      | DATA[1]      | OUT  | UART RXD signal that is routed to the <b>DP</b> pin if the <i>RxdEn</i> bit is set in the Carkit Control register. |
| reserved | DATA[2]      | OUT Driven Low (CarkitDataMC = 0, default) |  |
|          |              | IN   | Tri-state (CarkitDataMC = 1)   |
| int      | DATA[3]      | OUT  | Asserted when any unmasked interrupt occurs. Active high.  |
| reserved | DATA[4:7]    | OUT  | Driven Low.  |

Exiting Carkit Mode is the same as exiting Low Power Mode as described in Section 6.5.2, "Exiting Low Power Mode," on page 51. The Link must assert **STP** to signal the PHY to exit serial mode. When the PHY can accept a command, **DIR** is de-asserted and the PHY will wait until the Link de-asserts **STP** to resume synchronous ULPI operation. The **RESETB** pin can also be pulsed low to reset the USB3340 and return it to Synchronous Mode.

### 6.7.1 ENTERING USB UART MODE

The USB3340 can be placed into UART Mode by first setting the *TxdEn* and *RxdEn* bits in the Carkit Control register. Then the Link can set the *CarkitMode* bit in the Interface Control register. The *TxdEn* and *RxdEn* bits must be written before the *CarkitMode* bit.

TABLE 6-11: ULPI REGISTER PROGRAMMING EXAMPLE TO ENTER UART MODE

| R/W | Address<br>(HEX) | Value<br>(HEX) | Description   | Result                                     |
|-----|------------------|----------------|---|--|
| W   | 04               | 49             | Configure Non-Driving mode<br>Select FS transmit edge rates | <i>OpMode</i> =01<br><i>XcvrSelect</i> =01 |
| W   | 39               | 00             | Set regulator to 3.3V                                       | UART RegOutput=00                          |
| W   | 19               | 0C             | Enable UART connections                                     | RxdEn=1<br>TxdEn=1                         |
| W   | 07               | 04             | Enable carkit mode  | CarkitMode=1                               |

After the *CarkitlMode* bit is set, the ULPI interface will become redefined as described in Table 6-10, and the USB3340 will transmit data through the **DATA[0]** to **DM** of the USB connector and receive data on **DP** and pass the information the Link on **DATA[1]**.

When entering UART mode, the regulator output will automatically switch to the value configured by the UART RegOutput bits in the USB IO & Power Management register and the  $R_{CD}$  pull-up resistors will be applied internally to DP and DM. This will hold the UART in its default operating state.

While in UART mode, the transmit edge rates can be set to either the Full Speed USB or Low Speed USB edge rates by using the *XcvrSelect[1:0]* bits in the Function Control register.

### 6.7.2 USB AUDIO MODE

When the USB3340 is powered in Synchronous Mode, the Audio switches can be enabled by asserting the *SpkLeftEn*, or *SpkRightEn* bits in the Carkit Control register. After the register write is complete, the USB3340 will immediately enable or disable the audio switch. Then the Link can set the *CarkitMode* bit in the Interface Control register. The *SpkLeftEn*, or *SpkRightEn* bits must be written before the *CarkitMode* bit.

TABLE 6-12: ULPI REGISTER PROGRAMMING EXAMPLE TO ENTER AUDIO MODE

| R/W | Address<br>(HEX) | Value<br>(HEX) | Description                | Result                      |
|-----|------------------|----------------|----------------------------|-----------------------------|
| W   | 04               | 48             | Configure Non-Driving mode | OpMode=01                   |
| W   | 19               | 30             | Enable Audio connections   | SpkrRightEn=1, SpkrLeftEn=1 |
| W   | 07               | 04             | Enable carkit mode         | CarkitMode=1                |

After the CarkitMode bit is set, the ULPI interface will become redefined as described in Table 6-10.

### 6.8 RID Converter Operation

The RID converter is designed to read the value of the ID resistance to ground and report back its value through the ULPI interface.

When a resistor to ground is applied to the **ID** pin the state of the IdGnd comparator will change from a 1 to a 0 as described in Section 5.7.1, "ID Resistor Detection," on page 26. If the USB3340 is in ULPI mode, an RXCMD will be generated with bit 6 low. If the USB3340 is in Low Power Mode (or one of the other non-ULPI modes), the DATA[3] interrupt signal will go high.

After the USB3340 has detected the change of state on the **ID** pin, the RID converter can be used to determine the value of ID resistance. To start a ID resistance measurement, the *RidConversionStart* bit is set in the Vendor Rid Conversion register.

The Link can use one of two methods to determine when the RID Conversion is complete. One method is polling the *RidConversionStart* bit as described in Section 7.1.3.4, "Vendor Rid Conversion," on page 68. The preferred method is to set the *RidIntEn* bit in the Vendor Rid Conversion register. When *RidIntEn* is set, an RXCMD will be generated after the RID conversion is complete. As described in Table 6-3, the alt int bit of the RXCMD will be set.

After the RID Conversion is complete, the Link can read RidValue from the Vendor Rid Conversion register.

### 6.8.1 HEADSET AUDIO MODE

This mode is designed to allow a user to view the status of several signals while using an analog Audio headset with a USB connector. This mode is provided as an alternate mode to the CarKit Mode defined in Section 6.7, "Carkit Mode," on page 53. In the CarKit mode the Link is unable to view the source of the interrupt on ID. For the Link to view the interrupt on ID the PHY must be returned to synchronous mode so the interrupt can be read. This will force the audio switches to be deactivated during the PHY start-up which may glitch the audio signals. In addition the Link can not change the resistance on the ID pin without starting up the PHY to access the ULPI registers.

The Headset Audio Mode is entered by writing to the Headset Audio Mode register, and allows the Link access to the state of the **VBUS** and **ID** pins during audio without having to break the audio connection. The Headset Audio mode also allows for the Link to change the resistance on the **ID** pin to change the audio device attached from mono to stereo.

# **USB3340**

TABLE 6-13: PIN DEFINITIONS IN HEADSET AUDIO MODE

| Signal      | Connected to | Direction | Description  |
|-------------|--------------|-----------|--|
| SessVld     | DATA[0]      | OUT       | Output of SessVld comparator   |
| VbusVld     | DATA[1]      | OUT       | Output of VbusVld Comparator (interrupt must be enabled)   |
| IdGndDrv    | DATA[2]      | IN        | Drives ID pin to ground when asserted 0b: Not connected 1b: Connects ID to ground.   |
|             | DATA[3]      | OUT       | Driven low   |
| IdGround    | DATA[4]      | OUT       | Asserted when the <b>ID</b> pin is grounded. 0b: <b>ID</b> pin is grounded 1b: <b>ID</b> pin is floating   |
| IdFloat     | DATA[5]      | OUT       | Asserted when the <b>ID</b> pin is floating. <i>IdPullup</i> or <i>Id_pullup330</i> must be enabled. <i>IdFloatRise</i> and <i>IdFloatFall</i> must be enabled.  |
| IdPullup330 | DATA[6]      | IN        | When enabled a $330 \text{k}\Omega$ pullup is applied to the <b>ID</b> pin. This bit will also change the trip point of the IdGnd comparator to the value shown in Table 4-8. 0b: Disables the pull-up resistor 1b: Enables the pull-up resistor |
| IdPullup    | DATA[7]      | IN        | Connects the 100kΩ pull-up resistor from the <b>ID</b> pin to <b>VDD3.3</b> 0b: Disables the pull-up resistor 1b: Enables the pull-up resistor   |

Exiting Headset Audio Mode is the same as exiting Low Power Mode as described in Section 6.5.2, "Exiting Low Power Mode," on page 51. The **RESETB** pin can also be pulsed low to reset the USB3340 and return to Synchronous Mode.

# 7.0 ULPI REGISTER MAP

# 7.1 ULPI Register Array

The USB3340 PHY implements all of the ULPI registers detailed in the ULPI revision 1.1 specification. The complete USB3340 ULPI register set is shown in Table 7-1. All registers are 8 bits. This table also includes the default state of each register upon POR or de-assertion of **RESETB**, as described in Section 5.6.2, "Power On Reset (POR)," on page 25. The RESET bit in the Function Control Register does not reset the bits of the ULPI register array. The Link should not read or write to any registers not listed in this table.

The USB3340 supports extended register access. The immediate register set (00-3Fh) can be accessed through either a immediate address or an extended register address.

TABLE 7-1: ULPI REGISTER MAP

| Dowleton Name                   | Default | Address (6bit) |        |     |       |
|---------------------------------|---------|----------------|--------|-----|-------|
| Register Name                   | State   | Read           | Write  | Set | Clear |
| Vendor ID Low                   | 24h     | 00h            | -      | -   | -     |
| Vendor ID High                  | 04h     | 01h            | -      | -   | -     |
| Product ID Low                  | 09h     | 02h            | -      | -   | -     |
| Product ID High                 | 00h     | 03h            | -      | -   | -     |
| Function Control                | 41h     | 04-06h         | 04h    | 05h | 06h   |
| Interface Control               | 00h     | 07-09h         | 07h    | 08h | 09h   |
| OTG Control                     | 06h     | 0A-0Ch         | 0Ah    | 0Bh | 0Ch   |
| USB Interrupt Enable Rising     | 1Fh     | 0D-0Fh         | 0Dh    | 0Eh | 0Fh   |
| USB Interrupt Enable Falling    | 1Fh     | 10-12h         | 10h    | 11h | 12h   |
| USB Interrupt Status (Note 7-1) | 00h     | 13h            | -      | -   | -     |
| USB Interrupt Latch             | 00h     | 14h            | -      | -   | -     |
| Debug                           | 00h     | 15h            | -      | -   | -     |
| Scratch Register                | 00h     | 16-18h         | 16h    | 17h | 18h   |
| Carkit Control                  | 00h     | 19-1Bh         | 19h    | 1Ah | 1Bh   |
| Reserved                        | 00h     |                | 10     | Ch  | 1     |
| Carkit Interrupt Enable         | 00h     | 1D-1Fh         | 1Dh    | 1Eh | 1Fh   |
| Carkit Interrupt Status         | 00h     | 20h            | -      | -   | -     |
| Carkit Interrupt Latch          | 00h     | 21h            | -      | -   | -     |
| Reserved                        | 00h     |                | 22-30h |     |       |
| HS Compensation Register        | 00h     | 31h            | 31h    | -   | -     |
| USB-IF Charger Detection        | 00h     | 32h            | 32h    | -   | -     |
| Headset Audio Mode              | 00      | 33             | 33     | -   | -     |
| Reserved                        | 00h     |                | 34-    | 35h | •     |

TABLE 7-1: ULPI REGISTER MAP (CONTINUED)

| Register Name             | Default | Address (6bit) |       |     |       |
|---------------------------|---------|----------------|-------|-----|-------|
| Register Name             | State   | Read           | Write | Set | Clear |
| Vendor Rid Conversion     | 00h     | 36-38h         | 36h   | 37h | 38h   |
| USB IO & Power Management | 04h     | 39-3Bh         | 39h   | 3Ah | 3Bh   |
| Reserved                  | 00h     |                | 3C-   | 3Fh |       |

Note 7-1 Dynamically updates to reflect current status of interrupt sources.

# 7.1.1 ULPI REGISTER SET

The following registers are used for the ULPI interface.

# 7.1.1.1 Vendor ID Low

Address = 00h (read only)

| Field Name    | Bit | Access | Default | Description         |
|---------------|-----|--------|---------|---------------------|
| Vendor ID Low | 7:0 | rd     | 24h     | Microchip Vendor ID |

# 7.1.1.2 Vendor ID High

Address = 01h (read only)

| Field Name     | Bit | Access | Default | Description         |
|----------------|-----|--------|---------|---------------------|
| Vendor ID High | 7:0 | rd     | 04h     | Microchip Vendor ID |

### 7.1.1.3 Product ID Low

Address = 02h (read only)

| Field Name     | Bit | Access | Default | Description          |
|----------------|-----|--------|---------|----------------------|
| Product ID Low | 7:0 | rd     | 09h     | Microchip Product ID |

# 7.1.1.4 Product ID High

Address = 03h (read only)

| Field Name      | Bit | Access | Default | Description          |
|-----------------|-----|--------|---------|----------------------|
| Product ID High | 7:0 | rd     | 00h     | Microchip Product ID |

# 7.1.1.5 Function Control

Address = 04-06h (read), 04h (write), 05h (set), 06h (clear)

| Field Name      | Bit | Access   | Default | Description   |
|-----------------|-----|----------|---------|---|
| XcvrSelect[1:0] | 1:0 | rd/w/s/c | 01b     | Selects the required transceiver speed. 00b: Enables HS transceiver 01b: Enables FS transceiver 10b: Enables LS transceiver 11b: Enables FS transceiver for LS packets (FS preamble automatically pre-pended) |
| TermSelect      | 2   | rd/w/s/c | 0b      | Controls the DP and DM termination depending on <i>XcvrSelect</i> , <i>OpMode</i> , <i>DpPulldown</i> , and <i>DmPulldown</i> . The DP and DM termination is detailed in Table 5-1.                           |
| OpMode          | 4:3 | rd/w/s/c | 00b     | Selects the required bit encoding style during transmit.  00b: Normal Operation 01b: Non-Driving 10b: Disable bit-stuff and NRZI encoding 11b: Reserved   |
| Reset           | 5   | rd/w/s/c | 0b      | Active high transceiver reset. This reset does not reset the ULPI interface or register set. Automatically clears after reset is complete.  |
| SuspendM        | 6   | rd/w/s/c | 1b      | Active low PHY suspend. When cleared the PHY will enter Low Power Mode as detailed in Section 6.5, "Low Power Mode," on page 49. Automatically set when exiting Low Power Mode.                               |
| LPM Enable      | 7   | rd/w/s/c | 0b      | When enabled the PLL start-up time is shortened to allow fast start-up for LPM. The reduced PLL start-up time is achieved by bypassing the VCO process compensation which was done on initial start-up.       |

# 7.1.1.6 Interface Control

Address = 07-09h (read), 07h (write), 08h (set), 09h (clear)

| Field Name           | Bit | Access   | Default | Description   |
|----------------------|-----|----------|---------|---|
| 6-pin FsLsSerialMode | 0   | rd/w/s/c | 0b      | When asserted the ULPI interface is redefined to the 6-pin Serial Mode. The PHY will automatically clear this bit when exiting serial mode. |
| 3-pin FsLsSerialMode | 1   | rd/w/s/c | 0b      | When asserted the ULPI interface is redefined to the 3-pin Serial Mode. The PHY will automatically clear this bit when exiting serial mode. |
| CarkitMode           | 2   | rd/w/s/c | 0b      | When asserted the ULPI interface is redefined to the Carkit interface. The PHY will automatically clear this bit when exiting Carkit Mode.  |

# **USB3340**

| Field Name              | Bit | Access   | Default | Description   |
|-------------------------|-----|----------|---------|---|
| ClockSuspendM           | 3   | rd/w/s/c | 0b      | Enables Link to turn on 60 MHz CLKOUT in Serial Mode or Carkit Mode. 0b: Disable clock in serial or Carkit Mode. 1b: Enable clock in serial or Carkit Mode.   |
| AutoResume              | 4   | rd/w/s/c | 0b      | Only applicable in Host mode. Enables the PHY to automatically transmit resume signaling. This function is detailed in Section 6.4.1.4, "Host Resume K," on page 47.  |
| IndicatorComplement     | 5   | rd/w/s/c | 0b      | Inverts the EXTVBUS signal. This function is detailed in Section 5.7.2, "VBUS Monitoring and VBUS Pulsing," on page 29.  Note: The EXTVBUS signal is always high on the USB3340.  |
| IndicatorPassThru       | 6   | rd/w/s/c | 0b      | Disables and ing the internal VBUS comparator with the EXTVBUS signal when asserted. This function is detailed in Section 5.7.2, "VBUS Monitoring and VBUS Pulsing," on page 29.  Note: The EXTVBUS signal is always high on the USB3340. |
| InterfaceProtectDisable | 7   | rd/w/s/c | 0b      | Used to disable the integrated <b>STP</b> pull-up resistor used for interface protection. This function is detailed in Section 6.5.4, "Interface Protection," on page 51.   |

# 7.1.1.7 OTG Control

Address = 0A-0Ch (read), 0Ah (write), 0Bh (set), 0Ch (clear)

| Field Name  | Bit | Access   | Default | Description   |
|-------------|-----|----------|---------|---|
| IdPullup    | 0   | rd/w/s/c | 0b      | Connects a 100 kΩ pull-up resistor from the <b>ID</b> pin to <b>VDD33</b> 0b: Disables the pull-up resistor 1b: Enables the pull-up resistor  |
| DpPulldown  | 1   | rd/w/s/c | 1b      | Enables the 15 k $\Omega$ pull-down resistor on <b>DP</b> . 0b: Pull-down resistor not connected 1b: Pull-down resistor connected   |
| DmPulldown  | 2   | rd/w/s/c | 1b      | Enables the 15 kΩ pull-down resistor on <b>DM</b> . 0b: Pull-down resistor not connected 1b: Pull-down resistor connected   |
| DischrgVbus | 3   | rd/w/s/c | 0b      | This bit is only used during SRP. Connects a resistor from VBUS to ground to discharge VBUS.  0b: disconnect resistor from VBUS to ground 1b: connect resistor from VBUS to ground                          |
| ChrgVbus    | 4   | rd/w/s/c | 0b      | This bit is only used during SRP. Connects a resistor from VBUS to VDD33 to charge VBUS above the SessValid threshold.  0b: disconnect resistor from VBUS to VDD33  1b: connect resistor from VBUS to VDD33 |

| Field Name                   | Bit | Access   | Default | Description   |
|------------------------------|-----|----------|---------|---|
| DrvVbus                      | 5   | rd/w/s/c | 0b      | Enables external 5 volt supply to drive 5 volts on VBUS. This signal is or'ed with <i>DrvVbusExternal</i> . 0b: Do not drive Vbus, <b>CPEN</b> driven low. 1b: Drive Vbus, <b>CPEN</b> driven high.   |
| DrvVbusExternal              | 6   | rd/w/s/c | 0b      | Enables external 5 volt supply to drive 5 volts on VBUS. This signal is or'ed with <i>DrvVbus</i> . 0b: Do not drive Vbus, <b>CPEN</b> driven low. 1b: Drive Vbus, <b>CPEN</b> driven high.   |
| UseExternalVbus<br>Indicator | 7   | rd/w/s/c | 0b      | Tells the PHY to use an external VBUS over-current or voltage indicator. This function is detailed in Section 5.7.2, "VBUS Monitoring and VBUS Pulsing," on page 29.  0b: Use the internal VbusValid comparator 1b: Use the EXTVBUS input as for VbusValid signal.  Note: The EXTVBUS signal is always high on the USB3340. |

# 7.1.1.8 USB Interrupt Enable Rising

Address = 0D-0Fh (read), 0Dh (write), 0Eh (set), 0Fh (clear)

| Field Name          | Bit | Access   | Default | Description  |
|---------------------|-----|----------|---------|--|
| HostDisconnect Rise | 0   | rd/w/s/c | 1b      | Generate an interrupt event notification when Hostdisconnect changes from low to high. Applicable only in host mode. |
| VbusValid Rise      | 1   | rd/w/s/c | 1b      | Generate an interrupt event notification when Vbusvalid changes from low to high.                                    |
| SessValid Rise      | 2   | rd/w/s/c | 1b      | Generate an interrupt event notification when SessValid changes from low to high.                                    |
| SessEnd Rise        | 3   | rd/w/s/c | 1b      | Generate an interrupt event notification when SessEnd changes from low to high.                                      |
| IdGnd Rise          | 4   | rd/w/s/c | 1b      | Generate an interrupt event notification when IdGnd changes from low to high.  |
| Reserved            | 7:5 | rd       | 0h      | Read only, 0.  |

# 7.1.1.9 USB Interrupt Enable Falling

Address = 10-12h (read), 10h (write), 11h (set), 12h (clear)

| Field Name          | Bit | Access   | Default | Description  |
|---------------------|-----|----------|---------|--|
| HostDisconnect Fall | 0   | rd/w/s/c | 1b      | Generate an interrupt event notification when Hostdisconnect changes from high to low. Applicable only in host mode. |
| VbusValid Fall      | 1   | rd/w/s/c | 1b      | Generate an interrupt event notification when Vbusvalid changes from high to low.                                    |
| SessValid Fall      | 2   | rd/w/s/c | 1b      | Generate an interrupt event notification when SessValid changes from high to low.                                    |

# **USB3340**

| Field Name   | Bit | Access   | Default | Description   |
|--------------|-----|----------|---------|---|
| SessEnd Fall | 3   | rd/w/s/c | 1b      | Generate an interrupt event notification when SessEnd changes from high to low. |
| IdGnd Fall   | 4   | rd/w/s/c | 1b      | Generate an interrupt event notification when IdGnd changes from high to low.   |
| Reserved     | 7:5 | rd       | 0h      | Read only, 0.   |

# 7.1.1.10 USB Interrupt Status

Address = 13h (read only)

This register dynamically updates to reflect current status of interrupt sources.

| Field Name     | Bit | Access               | Default | Description  |
|----------------|-----|----------------------|---------|--|
| HostDisconnect | 0   |                      | 0b      | Current value of the UTMI+ HS Hostdisconnect output. Applicable only in host mode.   |
| VbusValid      | 1   |                      | 0b      | Current value of the UTMI+ Vbusvalid output. If VbusValid Rise and VbusValid Fall are set this register will read 0.   |
| SessValid      | 2   | rd<br>(read<br>only) | 0b      | Current value of the UTMI+ SessValid output. This register will always read the current status of the Session Valid comparator regardless of the SessValid Rise and SessValid Fall settings. |
| SessEnd        | 3   |                      | 0b      | Current value of the UTMI+ SessEnd output. If SessEnd Rise and SessEnd Fall are set this register will read 0.   |
| IdGnd          | 4   |                      | 0b      | Current value of the UTMI+ IdGnd output.   |
| Reserved       | 7:5 |                      | 0h      | Read only, 0.  |

**Note:** The default value is only valid after POR. When the register is read it will match the current status of the comparators at the moment the register is read.

# 7.1.1.11 USB Interrupt Latch

Address = 14h (read only with auto clear)

| Field Name           | Bit | Access           | Default | Description   |
|----------------------|-----|------------------|---------|---|
| HostDisconnect Latch | 0   |                  | 0b      | Set to 1b by the PHY when an unmasked event occurs on Hostdisconnect. Cleared when this register is read. Applicable only in host mode. |
| VbusValid Latch      | 1   |                  | 0b      | Set to 1b by the PHY when an unmasked event occurs on VbusValid. Cleared when this register is read.                                    |
| SessValid Latch      | 2   | rd<br>(Note 7-2) | 0b      | Set to 1b by the PHY when an unmasked event occurs on SessValid. Cleared when this register is read.                                    |
| SessEnd Latch        | 3   |                  | 0b      | Set to 1b by the PHY when an unmasked event occurs on SessEnd. Cleared when this register is read.                                      |
| IdGnd Latch          | 4   |                  | 0b      | Set to 1b by the PHY when an unmasked event occurs on IdGnd. Cleared when this register is read.  |
| Reserved             | 7:5 | rd               | 0h      | Read only, 0.   |

Note 7-2 rd: Read Only with auto clear.

# 7.1.1.12 Debug

Address = 15h (read only)

| Field Name     | Bit | Access | Default | Description                                   |
|----------------|-----|--------|---------|---|
| Linestate[1:0] | 1:0 | rd     | 00b     | Contains the current value of Linestate[1:0]. |
| Reserved       | 7:2 | rd     | 000000b | Read only, 0.                                 |

# 7.1.1.13 Scratch Register

Address = 16-18h (read), 16h (write), 17h (set), 18h (clear)

| Field Name | Bit | Access   | Default | Description  |
|------------|-----|----------|---------|--|
| Scratch    | 7:0 | rd/w/s/c | 00h     | Empty register byte for testing purposes. Software can read, write, set, and clear this register and the PHY functionality will not be affected. |

### 7.1.2 CARKIT CONTROL REGISTERS

The following registers are used to set-up and enable the USB UART and USB Audio functions.

### 7.1.2.1 Carkit Control

Address = 19-1Bh (read), 19h (write), 1Ah (set), 1Bh (clear)

This register is used to program the USB3340 into and out of the Carkit Mode. When entering the UART mode the Link must first set the desired *TxdEn* and the *RxdEn* bits and then transition to Carkit Mode by setting the *CarkitMode* bit in the Interface Control Register. When *RxdEn* is not set then the **DATA[1]** pin is held to a logic high.

| Field Name   | Bit | Access   | Default | Description   |
|--------------|-----|----------|---------|---|
| CarkitPwr    | 0   | rd       | 0b      | Read only, 0.   |
| IdGndDrv     | 1   | rd/w/s/c | 0b      | Drives ID pin to ground   |
| TxdEn        | 2   | rd/w/s/c | 0b      | Connects UART TXD (DATA[0]) to DM   |
| RxdEn        | 3   | rd/w/s/c | 0b      | Connects UART RXD (DATA[1]) to DP   |
| SpkLeftEn    | 4   | rd/w/s/c | 0b      | Connects DM pin to SPK_L pin  |
| SpkRightEn   | 5   | rd/w/s/c | 0b      | Connects <b>DP</b> pin to <b>SPK_R</b> pin. See Note below.   |
| MicEn        | 6   | rd/w/s/c | 0b      | Connects <b>DP</b> pin to <b>SPK_R</b> pin. See Note below.   |
| CarkitDataMC | 7   | rd/w/s/c | 0b      | When set the UPLI DATA[2] pin is changed from a driven 0 to tri-state, when carkit mode is entered. |

**Note:** If *SpkRightEn* or *MicEn* are asserted the **DP** pin will be connected to **SPK\_R**. To disconnect the **DP** pin from the **SPK\_R** pin both *SpkrRightEn* and *MicEn* must be set to de-asserted.

If using USB UART mode, the UART data will appear at the **SPK\_L** and **SPK\_R** pins if the corresponding *SpkLeftEn*, *SpkRightEn*, or *MicEn* switches are enabled.

If using USB Audio the *TxdEn* and *RxdEn* bits should not be set when the *SpkLeftEn*, *SpkRightEn*, or *MicEn* switches are enabled. The USB single-ended receivers described in Section 5.2.1, "USB Transceiver," on page 18 are disabled when either *SpkLeftEn*, *SpkRightEn*, or *MicEn* are set.

### 7.1.2.2 Carkit Interrupt Enable

Address = 1D-1Fh (read), 1Dh (write), 1Eh (set), 1Fh (clear)

| Field Name   | Bit | Access   | Default | Description   |
|--------------|-----|----------|---------|---|
| IdFloatRise  | 0   | rd/w/s/c | 0b      | When enabled an interrupt will be generated on the alt_int of the RXCMD byte when the <b>ID</b> pin transitions from non-floating to floating. The <i>IdPullup</i> bit in the OTG Control register should be set. |
| IdFloatFall  | 1   | rd/w/s/c | 0b      | When enabled an interrupt will be generated on the alt_int of the RXCMD byte when the <b>ID</b> pin transitions from floating to non-floating. The <i>IdPullup</i> bit in the OTG Control register should be set. |
| VdatDetIntEn | 2   | rd/w/s/c | 0b      | When enabled an interrupt will be generated on the alt_int of the RXCMD byte when the V <sub>DAT_DET</sub> Comparator changes state.  |

| Field Name | Bit | Access   | Default | Description   |
|------------|-----|----------|---------|---|
| CarDpRise  | 3   | rd       | 0b      | Not Implemented. Reads as 0b.   |
| CarDpFall  | 4   | rd       | 0b      | Not Implemented. Reads as 0b.   |
| RidIntEn   | 5   | rd/w/s/c | 0b      | When enabled an interrupt will be generated on the alt_int of the RXCMD byte when <i>RidConversionDone</i> bit is asserted.  Note: This register bit is or'ed with the <i>RidIntEn</i> bit of the Vendor Rid Conversion register described in Section 7.1.3.4, "Vendor Rid Conversion," on page 68. |
| Reserved   | 6   | rd/w/s/c | 0b      | Read only, 0.   |
| Reserved   | 7   | rd       | 0b      | Read only, 0.   |

# 7.1.2.3 Carkit Interrupt Status

Address = 20h (read only)

| Field Name | Bit | Access | Default | Description   |
|------------|-----|--------|---------|---|
| IdFloat    | 0   | rd     | 0b      | Asserted when the <b>ID</b> pin is floating. <i>IdPullup</i> must be enabled.   |
| VdatDet    | 1   | rd     | 0b      | V <sub>DAT DET</sub> Comparator output 0b: No voltage is detected on <b>DP</b> 1b: Voltage detected on <b>DP</b> , <i>IdatSinkEn</i> must be set to 1.  |
|            |     |        |         | Note: VdatDet can also be read from the USB-IF Charger Detection register described in Section 7.1.3.3, "Headset Audio Mode," on page 68.   |
| CarDp      | 2   | rd     | 0b      | Not Implemented. Reads as 0b.   |
| RidValue   | 5:3 | rd     | 000ь    | Conversion value of Rid resistor $000: 0\Omega$ $001: 75\Omega$ $010: 102 \text{ K}\Omega$ $011: 200 \text{ K}\Omega$ $100: \text{Reserved}$ $101: \text{ID floating}$ $111: \text{Error}$ Note: RidValue can also be read from the Vendor Rid Conversion register described in Section 7.1.3.4, "Vendor Rid Conversion," |

| Field Name        | Bit | Access | Default | Description  |
|-------------------|-----|--------|---------|--|
| RidConversionDone | 6   | rd     | Ob      | Automatically asserted by the USB3340 when the Rid Conversion is finished. The conversion will take 282uS. This bit will auto clear when the <i>RidValue</i> is read from the Rid Conversion Register. Reading the <i>RidValue</i> from the Carkit Interrupt Status register will not clear either <i>RidConversionDone</i> status bit.  Note: RidConversionDone can also be read from the Vendor Rid Conversion register described in Section 7.1.3.4, "Vendor Rid Conversion," on page 68. |
| Reserved          | 7   | rd     | 0b      | Read only, 0.  |

### 7.1.2.4 Carkit Interrupt Latch

Address = 21h (read only with auto-clear)

| Field Name         | Bit | Access           | Default | Description  |
|--------------------|-----|------------------|---------|--|
| IdFloat Latch      | 0   | rd<br>(Note 7-3) | 0b      | Asserted if the state of the <b>ID</b> pin changes from non-floating to floating while the <i>IdFloatRise</i> bit is enabled or if the state of the <b>ID</b> pin changes from floating to non-floating while the <i>IdFloatFall</i> bit is enabled. |
| VdatDet Latch      | 1   | rd               | 0b      | If VdatDetIntEn is set and the VdatDet bit changes state, this bit will be asserted.   |
| CarDp Latch        | 2   | rd               | 0b      | Not Implemented. Reads as 0b.  |
| RidConversionLatch | 3   | rd<br>(Note 7-3) | 0b      | If <i>RidIntEn</i> is set and the state of the <i>RidConversionDone</i> bit changes from a 0 to 1 this bit will be asserted.   |
| Reserved           | 7:4 | rd               | 0000b   | Read only, 0.  |

Note 7-3 rd: Read Only with auto clear

# 7.1.3 VENDOR REGISTER ACCESS

The vendor specific registers include the range from 30h to 3Fh. These can be accessed by the ULPI immediate register read / write.

# 7.1.3.1 HS Compensation Register

Address = 31h (read / write)

The USB3340 is designed to meet the USB specifications and requirements when the DP and DM signals are properly designed on the PCB. The DP and DM trace impedance should be  $45\Omega$  single ended and  $90\Omega$  differential. In cases where the DP and DM traces are not able to meet these requirements the HS Compensation register can be used to compensate for the losses in signal amplitude.

| Field Name | Bit | Access | Default | Description  |
|------------|-----|--------|---------|--|
| VariSense  | 1:0 | rd/w   | 00b     | Used to lower the threshold of the squelch detector. 00: 100% (default) 01: 83% 10: 66.7% 11: 50%  |
| Reserved   | 2   | rd     | 0b      | Read only, 0.  |
| Reserved   | 3   | rd     | 0b      | Read only, 0.  |
| PHYBoost   | 6:4 | rd/w   | 000ь    | Used to change the output voltage of the Hi-Speed transmitter 000: Nominal 001: +3.7% 010: +7.4% 011: +11.0% 100: +14.7% 101: +18.3% 110: +22.0% 111: +25.7% |
| Reserved   | 7   | rd     | 0b      | Read only, 0.  |

# 7.1.3.2 USB-IF Charger Detection

Address = 32h (read / write)

| Field Name      | Bit | Access | Default | Description  |
|-----------------|-----|--------|---------|--|
| VDatSrcEn       | 0   | rd/w   | 0       | V <sub>DAT_SRC</sub> voltage enable<br>0b: Disabled<br>1b: Enabled   |
| IDatSinkEn      | 1   | rd/w   | 0       | I <sub>DAT SINK</sub> current sink and V <sub>DAT_DET</sub> comparator enable 0b: Disabled, V <sub>DAT_DET</sub> = 0. 1b: Enabled  |
| ContactDetectEn | 2   | rd/w   | 0       | I <sub>DP_SRC</sub> Enable<br>0b: Disabled<br>1b: Enabled  |
| HostChrgEn      | 3   | rd/w   | 0       | Enable Charging Host Port Mode.  0b: Portable Device  1b: Charging Host Port. When the charging host port bit is set the connections of V <sub>DAT_SRC</sub> , I <sub>DAT_SINK</sub> , I <sub>DP_SRC</sub> , and V <sub>DAT_DET</sub> are reversed between <b>DP</b> and <b>DM</b> . |

| Field Name | Bit | Access | Default | Description  |
|------------|-----|--------|---------|--|
| VdatDet    | 4   | rd     | 0       | V <sub>DAT_DET</sub> Comparator output. <i>IdatSinkEn</i> must be set to 1 fo enable the comparator.  0b: No voltage is detected on <b>DP</b> or <i>Linestate[1:0]</i> is not equal to 00b.  1b: Voltage detected on <b>DP</b> , and <i>Linestate[1:0]</i> = 00b.  Note: VdatDet can also be read from the Carkit Interrupt Status register described in Section 7.1.2.3, "Carkit Interrupt Status," on page 65. |
| Reserved   | 5-7 | rd     |         | Read only, 0.  |

**Note:** The charger detection should be turned off before beginning USB operation. USB-IF Charger Detection Bits 2:0 should be set to 000b.

### 7.1.3.3 Headset Audio Mode

Address = 33h (read / write)

| Field Name     | Bit | Access | Default | Description   |
|----------------|-----|--------|---------|---|
| HeadsetAudioEn | 3:0 | rd/w   | 0000b   | When this field is set to a value of '1010', the Head-<br>set Audio Mode is enabled as described in Section<br>6.8.1, "Headset Audio Mode," on page 55. |
| Reserved       | 7:4 | rd     | 0h      | Read only, 0.   |

### 7.1.3.4 Vendor Rid Conversion

Address = 36-38h (read), 36h (write), 37h (set), 38h (clear)

| Field Name        | Bit | Access           | Default | Description  |
|-------------------|-----|------------------|---------|--|
| RidValue          | 2:0 | rd/w             | 000ь    | Conversion value of Rid resistor 000: $0\Omega$ 001: $75\Omega$ 010: $100 \text{ K}\Omega$ 011: $200 \text{ K}\Omega$ 100: $440 \text{ K}\Omega$ 101: ID floating 111: Error Note: RidValue can also be read from the Carkit Interrupt Status Register.  |
| RidConversionDone | 3   | rd<br>(Note 7-4) | 0b      | Automatically asserted by the USB3340 when the Rid Conversion is finished. The conversion will take 282uS. This bit will auto clear when the <i>RidValue</i> is read from the Rid Conversion Register. Reading the <i>RidValue</i> from the Carkit Interrupt Status Register will not clear either <i>RidConversionDone</i> status bit.  Note: RidConversionDone can also be read from the Carkit Interrupt Status Register. |

| Field Name         | Bit | Access   | Default | Description  |
|--------------------|-----|----------|---------|--|
| RidConversionStart | 4   | rd/w/s/c | 0b      | When this bit is asserted either through a register write or set, the Rid converter will read the value of the ID resistor. When the conversion is complete this bit will auto clear.      |
| Reserved           | 5   | rd/w/s/c | 0b      | This bit must remain at 0.   |
| RidIntEn           | 6   | rd/w/s/c | 0b      | When enabled an interrupt will be generated on the alt_int of the RXCMD byte when <i>RidConversionDone</i> bit is asserted.  Note: This register bit is or'ed with the <i>RidIntEn</i> bit |
|                    |     |          |         | of the Carkit Interrupt Status register.   |
| Reserved           | 7   | rd       | 0b      | Read only, 0.  |

Note 7-4 rd: Read Only with auto clear.

# 7.1.3.5 USB IO & Power Management

Address = 39-3Bh (read), 39h (write), 3Ah (set), 3Bh (clear)

| Field Name        | Bit | Access   | Default | Description   |  |
|-------------------|-----|----------|---------|---|--|
| Reserved          | 0   | rd/w/s/c | 0b      | Read only, 0.   |  |
| SwapDP/DM         | 1   | rd/w/s/c | 0b      | When asserted, the <b>DP</b> and <b>DM</b> pins of the USB transceiver are swapped. This bit can be used to prevent crossing the DP/DM traces on the board. In UART mode, it swaps the routing to the <b>DP</b> and <b>DM</b> pins. In USB Audio Mode, it does not affect the <b>SPK_L</b> and <b>SPK_R</b> pins. |  |
| UART RegOutput    | 3:2 | rd/w/s/c | 01b     | Controls the output voltage of the <b>VBAT</b> to <b>VDD33</b> regulator in UART mode. When the PHY is switched from USB mode to UART mode regulator output will automatically change to the value specified in this register when <i>TxdEn</i> is asserted.  00: 3.3V 01: 3.0V (default) 10: 2.75V 11: 2.5V      |  |
|                   |     |          |         | Note: When in USB Audio Mode the regulator will remain at 3.3V. When using this register it is recommended that the Link exit UART mode by using the RESETB pin.  |  |
| ChargerPullupEnDP | 4   | rd/w/s/c | 0b      | Enables the R <sub>CD</sub> Pull-up resistor on the <b>DP</b> pin. (The pull-up is automatically enabled in UART mode)  |  |
| ChargerPullupEnDM | 5   | rd/w/s/c | 0b      | Enables the $R_{CD}$ Pull-up resistor on the <b>DM</b> pin. (The pull-up is automatically enabled in UART mode)   |  |

# **USB3340**

| Field Name    | Bit | Access   | Default | Description   |
|---------------|-----|----------|---------|---|
| USB RegOutput | 7:6 | rd/w/s/c | 00b     | Controls the output voltage of the VBAT to VDD33 regulator in USB mode. When the PHY is in Synchronous Mode, Serial Mode, or Low Power Mode, the regulator output will be the value specified in this register.  00: 3.3V (default) 01: 3.0V 10: 2.75V 11: 2.5V |

# 8.0 APPLICATION NOTES

# 8.1 Application Diagram

The USB3340 requires few external components as shown in the application diagrams. The USB 2.0 Specification restricts the voltage at the VBUS pin to a maximum value of 5.25V. In some applications, the voltage will exceed this limit, so the USB3340 provides an integrated over voltage protection circuit. The over voltage protection circuit works with an external resistor ( $R_{VBUS}$ ) to lower the voltage at the **VBUS** pin.

TABLE 8-1: COMPONENT VALUES IN APPLICATION DIAGRAMS

| REFERENCE<br>DESIGNATOR | VALUE                             | DESCRIPTION  | NOTES  |
|-------------------------|-----------------------------------|--|--|
| C <sub>OUT</sub>        | See Table 4-11                    | Bypass capacitor to ground (<1 $\Omega$ ESR) for regulator stability.                | Place as close as possible to the PHY.   |
| C <sub>VBUS</sub>       | See Table 8-2                     | Capacitor to ground required by the USB Specification. Microchip recommends <1Ω ESR. | Place near the USB connector.  |
| C <sub>BYP</sub>        | System dependent.                 | Bypass capacitor to ground. Typical values used are 0.1 or 0.01 µF.                  | Place as close as possible to the PHY.   |
| C <sub>DC_LOAD</sub>    | System dependent.                 | The USB connector housing may be AC-coupled to the device ground.                    | Industry convention is to ground only the host side of the cable shield.   |
| R <sub>VBUS</sub>       | $1$ k $\Omega$ or $20$ k $\Omega$ | Series resistor to work with internal over voltage protection.                       | See Section 5.7.2.6, "VBUS Over Voltage Protection (OVP)," on page 31 for information regarding power dissipation. |
| R <sub>BIAS</sub>       | 8.06kΩ (±1%)                      | Series resistor to establish reference voltage.                                      | See Section 5.3, "Bias<br>Generator," on page 21 for<br>information regarding power<br>dissipation.                |

TABLE 8-2: CAPACITANCE VALUES AT VBUS OF USB CONNECTOR

| MODE   | MIN VALUE | MAX VALUE |
|--------|-----------|-----------|
| Host   | 120µF     |           |
| Device | 1μF       | 10μF      |
| OTG    | 1μF       | 6.5µF     |

FIGURE 8-1: USB3340 APPLICATION DIAGRAM (DEVICE CONFIGURED FOR ULPI CLOCK OUTPUT MODE, 24 MHZ)

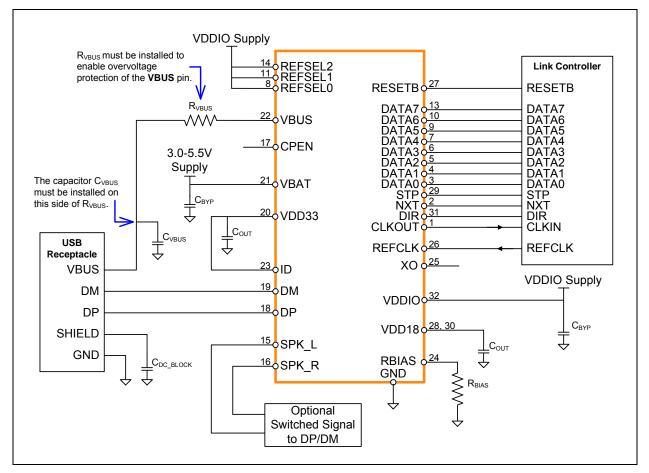


FIGURE 8-2: USB3340 APPLICATION DIAGRAM (DEVICE CONFIGURED FOR ULPI CLOCK INPUT MODE, 60 MHZ)


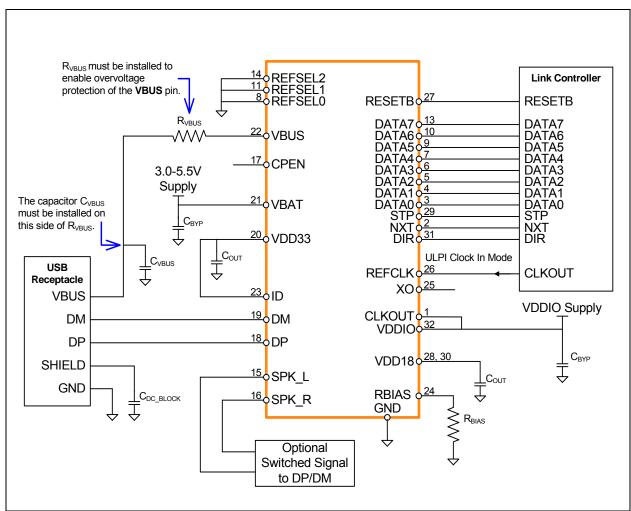


FIGURE 8-3: USB3340 APPLICATION DIAGRAM (HOST OR OTG CONFIGURED FOR ULPI CLOCK OUTPUT MODE, 24 MHZ)

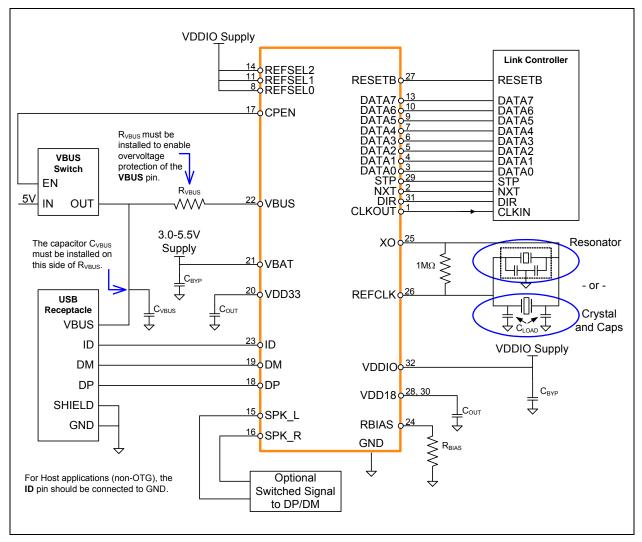

### 8.2 USB Charger Detection

The USB3340 provides the hardware described in the USB Battery Charging Specification. Microchip provides an Application Note which describes how to use the USB3340 in a battery charging application.

### 8.3 Reference Designs

Microchip has generated reference designs for connecting the USB3340 to SoCs with a ULPI port. Please contact the Microchip sales office for more details.

### 8.4 ESD Performance

The USB3340 is protected from ESD strikes. By eliminating the requirement for external ESD protection devices, board space is conserved, and the board manufacturer is enabled to reduce cost. The advanced ESD structures integrated into the USB3340 protect the device whether or not it is powered up.

### 8.4.1 HUMAN BODY MODEL (HBM) PERFORMANCE

HBM testing verifies the ability to withstand the ESD strikes like those that occur during handling and manufacturing, and is done without power applied to the IC. To pass the test, the device must have no change in operation or performance due to the event. The USB3340 HBM performance is detailed in Table 4-13.

### 8.4.2 EN/IEC 61000-4-2 PERFORMANCE

The EN/IEC 61000-4-2 ESD specification is an international standard that addresses system-level immunity to ESD strikes while the end equipment is operational. In contrast, the HBM ESD tests are performed at the device level with the device powered down.

Microchip contracts with Independent laboratories to test the USB3340 to EN/IEC 61000-4-2 in a working system. Reports are available upon request. Please contact your Microchip representative, and request information on 3rd party ESD test results. The reports show that systems designed with the USB3340 can safely provide the ESD performance shown in Table 4-13 without additional board level protection.

In addition to defining the ESD tests, EN/IEC 61000-4-2 also categorizes the impact to equipment operation when the strike occurs (ESD Result Classification). The USB3340 maintains an ESD Result Classification 1 or 2 when subjected to an EN/IEC 61000-4-2 (level 4) ESD strike.

Both air discharge and contact discharge test techniques for applying stress conditions are defined by the EN/IEC 61000-4-2 ESD document.

### 8.4.2.1 Air Discharge

To perform this test, a charged electrode is moved close to the system being tested until a spark is generated. This test is difficult to reproduce because the discharge is influenced by such factors as humidity, the speed of approach of the electrode, and construction of the test equipment.

### 8.4.2.2 Contact Discharge

The uncharged electrode first contacts the USB connector to prepare this test, and then the probe tip is energized. This yields more repeatable results, and is the preferred test method. The independent test laboratories contracted by Microchip provide test results for both types of discharge methods.

### 9.0 PACKAGE OUTLINE

# FIGURE 9-1: USB3340 32-PIN QFN, 5X5MM BODY, 0.5MM PITCH


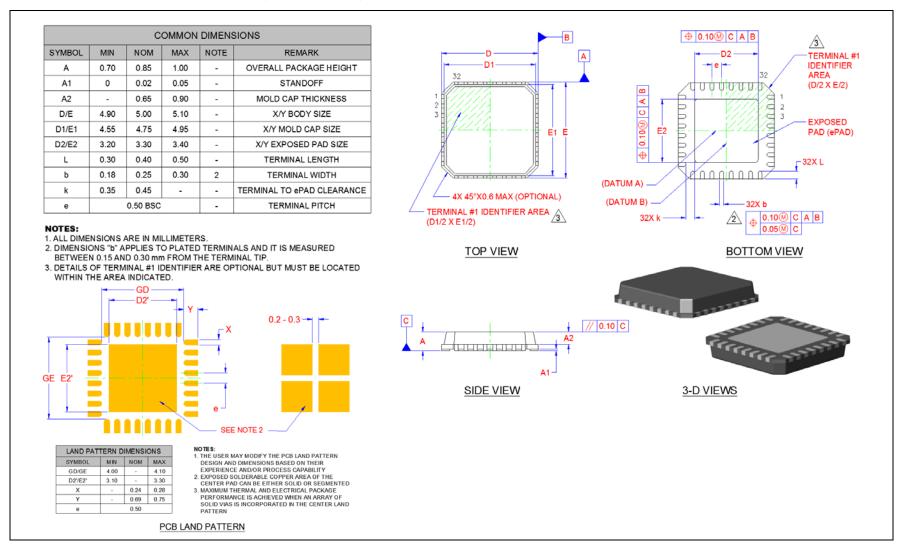


FIGURE 9-3: 32QFN, 5X5 PACKAGE MARKING

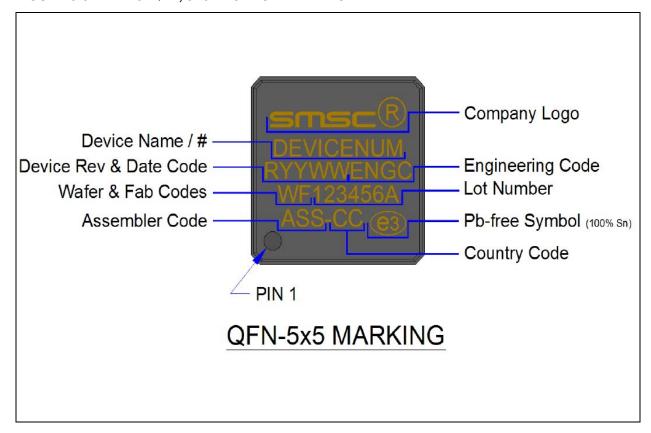

# **USB3340**

# APPENDIX A: DATA SHEET REVISION HISTORY

| Revision Level & Date  | Section/Figure/Entry   | Correction  |  |  |
|------------------------|--|---|--|--|
| DS00001678C (06-19-19) | Product Information System   | Updated temperature range to "-40 degrees C to<br>+85 degrees C (Industrial)" |  |  |
| DS00001678B (05-23-17) | All  | Converted from SMSC co-branded template to complete Microchip template.       |  |  |
|                        |  | Various editorial improvements throughout document.                           |  |  |
|                        | Figure 2-1   | Updated diagram - pin 30 changed from VDD18 to NC.                            |  |  |
|                        | Table 2-1  | Updated description for pin 28 and pin 30.                                    |  |  |
|                        | Figure 5-2, Figure 5-3, Figure 5-7, and Figure 5-9   | Updated images to display "MCHP" instead of "SMSC."                           |  |  |
| DS00001678A (02-18-14) | REV A replaces previous SM   | ISC version Rev. 1.1 (08-15-11).  |  |  |
|                        | <ul> <li>Document is Microchip branded; mention of SMSC removed, mention of "lead-free" removed, SMSC and vendor logos removed.</li> </ul> |   |  |  |
|                        | Tape & Reel diagrams removed.  |   |  |  |
| Rev. 1.1 (08-15-11)    | Table 3-1, Table 3-2   | Removed requirement that VDD18 be active while VDDIO is active.               |  |  |
|                        | Table 2-1  | Modified VDDIO Description  |  |  |
|                        | Table 4-1  | Updated power specifications  |  |  |
|                        | Table 4-4  | Changed CPEN VOH specification.   |  |  |
|                        | Section 7.1.3.1, "HS Compensation Register"  | Removed "and LPM" from section title.   |  |  |
|                        | Figure 5-2   | Removed connection to VDD18.  |  |  |
|                        | Throughout Document  | Updated support for Battery Charging v1.2.                                    |  |  |
|                        | Throughout Document  | Various editorial improvements.   |  |  |
| Rev. 1.0 (01-20-11)    | Initial datasheet release  |   |  |  |

### THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at <a href="www.microchip.com">www.microchip.com</a>. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's
  guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

### CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

### **CUSTOMER SUPPORT**

Users of Microchip products can receive assistance through several channels:

- · Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- · Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://microchip.com/support

# PRODUCT IDENTIFICATION SYSTEM

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

| PART NO.<br> <br>Device  | Temperature Package Tape and Reel Range Option                      |
|--------------------------|---|
| Device:                  | USB3340   |
| Temperature<br>Range:    | Blank = -40°C to +85°C (Industrial)                                 |
| Package:                 | EZK = 32-pin QFN  |
| Tape and Reel<br>Option: | Blank = Standard packaging (tray) TR = Tape and Reel <sup>(3)</sup> |

### Example:

USB3340-EZK-TR
 Industrial temp., 32-pin, QFN RoHS Compliant
 Package (tape and reel)
 REFCLK Frequency (Note 1) Selectable (see
 Table 5-1)

Note 1: All versions support ULPI Clock In Mode (60 MHz input at REFCLK)

- 2: This product meets the halogen maximum concentration values per IEC61249-2-21
- 3: Tape and Reel identifier only appears in the catalog part number description. This identifier is used for ordering purposes and is not printed on the device package. Check with your Microchip Sales Office for package availability with the Tape and Reel option. Reel size is 4,000.

#### Note the following details of the code protection feature on Microchip devices:

- · Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our
  knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data
  Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

#### **Trademarks**

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackeTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTrackr, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2009-2019, Microchip Technology Incorporated, All Rights Reserved.

ISBN: 9781522446873

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.



# Worldwide Sales and Service

#### **AMERICAS**

**Corporate Office** 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277

Technical Support:

http://www.microchip.com/ support

Web Address:

www.microchip.com

**Atlanta** Duluth, GA

Tel: 678-957-9614 Fax: 678-957-1455

Austin, TX Tel: 512-257-3370

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

**Detroit** Novi, MI

Tel: 248-848-4000

Houston, TX

Tel: 281-894-5983 Indianapolis

Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608 Tel: 951-273-7800

Raleigh, NC Tel: 919-844-7510

New York, NY Tel: 631-435-6000

**San Jose, CA** Tel: 408-735-9110 Tel: 408-436-4270

**Canada - Toronto** Tel: 905-695-1980 Fax: 905-695-2078

### ASIA/PACIFIC

Australia - Sydney Tel: 61-2-9868-6733

**China - Beijing** Tel: 86-10-8569-7000

China - Chengdu Tel: 86-28-8665-5511

**China - Chongqing** Tel: 86-23-8980-9588

**China - Dongguan** Tel: 86-769-8702-9880

**China - Guangzhou** Tel: 86-20-8755-8029

China - Hangzhou Tel: 86-571-8792-8115

China - Hong Kong SAR Tel: 852-2943-5100

**China - Nanjing** Tel: 86-25-8473-2460

China - Qingdao Tel: 86-532-8502-7355

**China - Shanghai** Tel: 86-21-3326-8000

China - Shenyang Tel: 86-24-2334-2829

**China - Shenzhen** Tel: 86-755-8864-2200

China - Suzhou Tel: 86-186-6233-1526

**China - Wuhan** Tel: 86-27-5980-5300

**China - Xian** Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

**China - Zhuhai** Tel: 86-756-3210040

### ASIA/PACIFIC

India - Bangalore Tel: 91-80-3090-4444

India - New Delhi Tel: 91-11-4160-8631

India - Pune Tel: 91-20-4121-0141

**Japan - Osaka** Tel: 81-6-6152-7160

Japan - Tokyo

Tel: 81-3-6880- 3770

Korea - Daegu Tel: 82-53-744-4301

Korea - Seoul Tel: 82-2-554-7200

Malaysia - Kuala Lumpur Tel: 60-3-7651-7906

Malaysia - Penang Tel: 60-4-227-8870

Philippines - Manila Tel: 63-2-634-9065

**Singapore** Tel: 65-6334-8870

**Taiwan - Hsin Chu** Tel: 886-3-577-8366

Taiwan - Kaohsiung Tel: 886-7-213-7830

**Taiwan - Taipei** Tel: 886-2-2508-8600

Thailand - Bangkok Tel: 66-2-694-1351

Vietnam - Ho Chi Minh Tel: 84-28-5448-2100

#### **EUROPE**

**Austria - Wels** Tel: 43-7242-2244-39 Fax: 43-7242-2244-393

**Denmark - Copenhagen** Tel: 45-4450-2828 Fax: 45-4485-2829

Finland - Espoo Tel: 358-9-4520-820

France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Garching Tel: 49-8931-9700

**Germany - Haan** Tel: 49-2129-3766400

Germany - Heilbronn Tel: 49-7131-72400

Germany - Karlsruhe Tel: 49-721-625370

**Germany - Munich** Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Germany - Rosenheim Tel: 49-8031-354-560

Israel - Ra'anana Tel: 972-9-744-7705

Italy - Milan Tel: 39-0331-742611

Fax: 39-0331-466781

Tel: 39-049-7625286 **Netherlands - Drunen** Tel: 31-416-690399

Fax: 31-416-690340

Norway - Trondheim

Tel: 47-7288-4388

Poland - Warsaw

Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50

**Spain - Madrid** Tel: 34-91-708-08-90

Fax: 34-91-708-08-91

Sweden - Gothenberg

Tel: 46-31-704-60-40 **Sweden - Stockholm** Tel: 46-8-5090-4654

**UK - Wokingham** Tel: 44-118-921-5800 Fax: 44-118-921-5820