



ATWILC1000-MR110xB

IEEE® 802.11 b/g/n Link Controller Module

Introduction

The ATWILC1000-MR110xB module is a low-power consumption IEEE 802.11 b/g/n IoT (Internet of Things) module, which is specifically optimized for low-power IoT applications. The ATWILC1000-MR110xB modules feature small form factor (21.7 mm x 14.7 mm x 2.1 mm) while fully integrating Power Amplifier (PA), Low Noise Amplifier (LNA), Transmit/Receive (T/R), switch and power management. The ATWILC1000-MR110PB includes a PCB antenna, whereas the ATWILC1000-MR110UB module includes a U.FL connector to use with an external antenna. With advanced security, it is interoperable with various vendors using IEEE 802.11b/g/n Access Points in wireless LAN. The module provides Serial Peripheral Interface (SPI) and Secure Digital Input Output (SDIO) to interface with the host controller.

Notes: All references to the ATWILC1000-MR110xB module include all the modules listed below unless otherwise noted:

- ATWILC1000-MR110PB
- ATWILC1000-MR110UB

Features

- Compliant with IEEE 802.11 b/g/n 20 MHz (1 x 1) Solution
- Supports Single Spatial Stream in 2.4 GHz ISM Band
- Integrated Power Amplifier (PA) and Transmit/Receive (T/R) Switch
- Superior Sensitivity and Range through Advanced PHY Signal Processing
- Advanced Equalization and Channel Estimation
- Advanced Carrier and Timing Synchronization
- Wi-Fi Direct® and Soft-AP Support
- Supports IEEE 802.11 WEP, WPA, WPA2 and WPA2-Enterprise Security
- Superior Medium Access Control (MAC) Throughput through Hardware Accelerated Two-Level A-MSDU/A-MPDU Frame Aggregation and Block Acknowledgement
- On-Chip Memory Management Engine to Reduce the Host Load
- SPI and SDIO Host Interfaces
- Operating Temperature Ranges from -40°C to +85°C
- Input/Output Operating Voltage (VDDIO) of 1.62V to 3.6V
- Power supply for DC/DC Convertor (VBAT) has a range of 3.0V to 4.2V
- Built-In 26 MHz Crystal
- Power-Save Modes:
 - <1 µA Power-Down mode typical at 3.3V I/O
 - 380 µA Doze mode with chip settings preserved (used for beacon monitoring)
 - On-chip low-power Sleep oscillator
 - Fast host wake up from Doze mode by a pin or the host I/O transaction
- Wi-Fi Alliance® certified for connectivity and optimizations
 - ID: [WFA65340](#)

Table of Contents

Introduction.....	1
Features.....	1
1. Ordering Information and Module Marking.....	4
2. Functional Overview.....	5
3. Pinout and Package Information.....	6
4. Electrical Specifications.....	9
4.1. Absolute Ratings.....	9
4.2. Recommended Operating Conditions.....	9
4.3. DC Electrical Characteristics.....	9
4.4. Receiver Performance.....	11
4.5. Transmitter Performance.....	12
4.6. Timing Characteristics.....	14
5. Power Management.....	17
5.1. Current Consumption in Various Device States.....	17
5.2. Restrictions for Power States.....	18
5.3. Power-Up/Down Sequence.....	18
5.4. Digital I/O Pin Behavior During Power-Up Sequences.....	19
6. CPU and Memory Subsystems.....	20
6.1. Processor.....	20
6.2. Memory Subsystem.....	20
6.3. Nonvolatile Memory (eFuse).....	20
7. WLAN Subsystem.....	22
7.1. MAC.....	22
7.2. PHY.....	23
7.3. Radio.....	23
8. External Interfaces.....	25
8.1. Interfacing with the Host Microcontroller.....	25
8.2. SPI Slave Interface.....	26
8.3. SDIO Slave Interface.....	27
8.4. UART Debug Interface.....	28
8.5. I ² C Slave Interface.....	28
9. Notes on Interfacing with the ATWILC1000-MR110xB.....	30
10. Reference Design.....	31
11. Module Outline Drawings.....	33
12. Design Consideration.....	36
12.1. ATWILC1000-MR110PB Placement and Routing Guidelines.....	36
12.2. Printed PCB Antenna Performance of ATWILC1000-MR110PB.....	37

12.3. ATWILC1000-MR110UB Placement and Routing Guidelines.....	40
12.4. Recommended External Antennas	41
12.5. Reflow Profile Information.....	42
12.6. Module Assembly Considerations.....	42
12.7. Conformal Coating.....	42
13. Regulatory Approval.....	43
13.1. United States.....	43
13.2. Canada.....	45
13.3. Europe.....	46
13.4. Japan.....	47
13.5. Korea.....	48
13.6. Taiwan.....	49
13.7. China.....	49
13.8. Other Regulatory Information.....	50
14. Reference Documentation.....	51
15. Document Revision History.....	52
The Microchip Website.....	55
Product Change Notification Service.....	55
Customer Support.....	55
Microchip Devices Code Protection Feature.....	55
Legal Notice.....	56
Trademarks.....	56
Quality Management System.....	57
Worldwide Sales and Service.....	58

1. Ordering Information and Module Marking


The following table provides the ordering information of the ATWILC1000-MR110xB module.

Table 1-1. Ordering Information

Model Number	Ordering Code	Package	No. of Pins	Description	Regulatory Certification
ATWILC1000-MR110PB	ATWILC1000-MR110PB	21.7x14.7x2.1 mm	28	Certified module with ATWILC1000B-MU chip and PCB antenna	FCC, ISED, CE, MIC, KCC, NCC, SRRC
ATWILC1000-MR110UB	ATWILC1000-MR110UB	21.7x14.7x2.1 mm	28	Certified module with ATWILC1000B-MU chip and uFL connector	FCC, ISED, CE

The following figure provides the marking information of the ATWILC1000-MR110xB module.


Figure 1-1. Marking Information

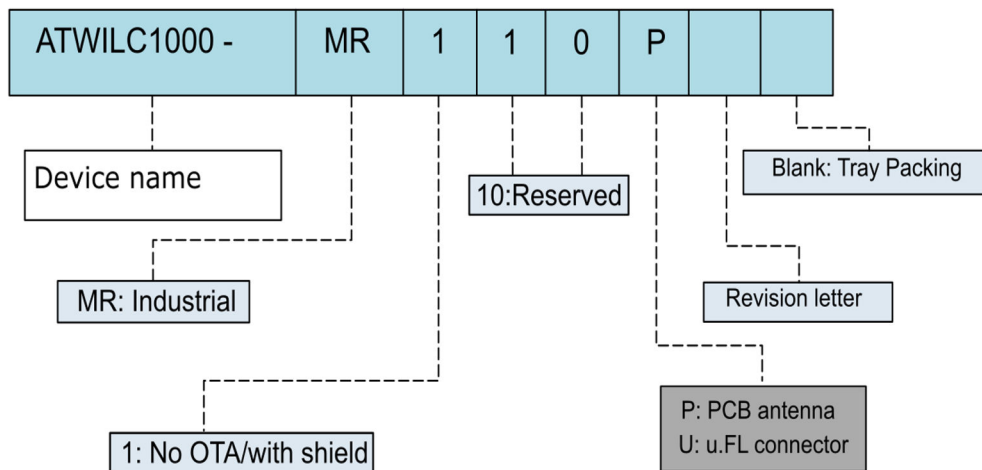

2. Functional Overview

The ATWILC1000-MR110xB module block diagram is shown in the following figure.


Figure 2-1. ATWILC1000-MR110xB Module Block Diagram

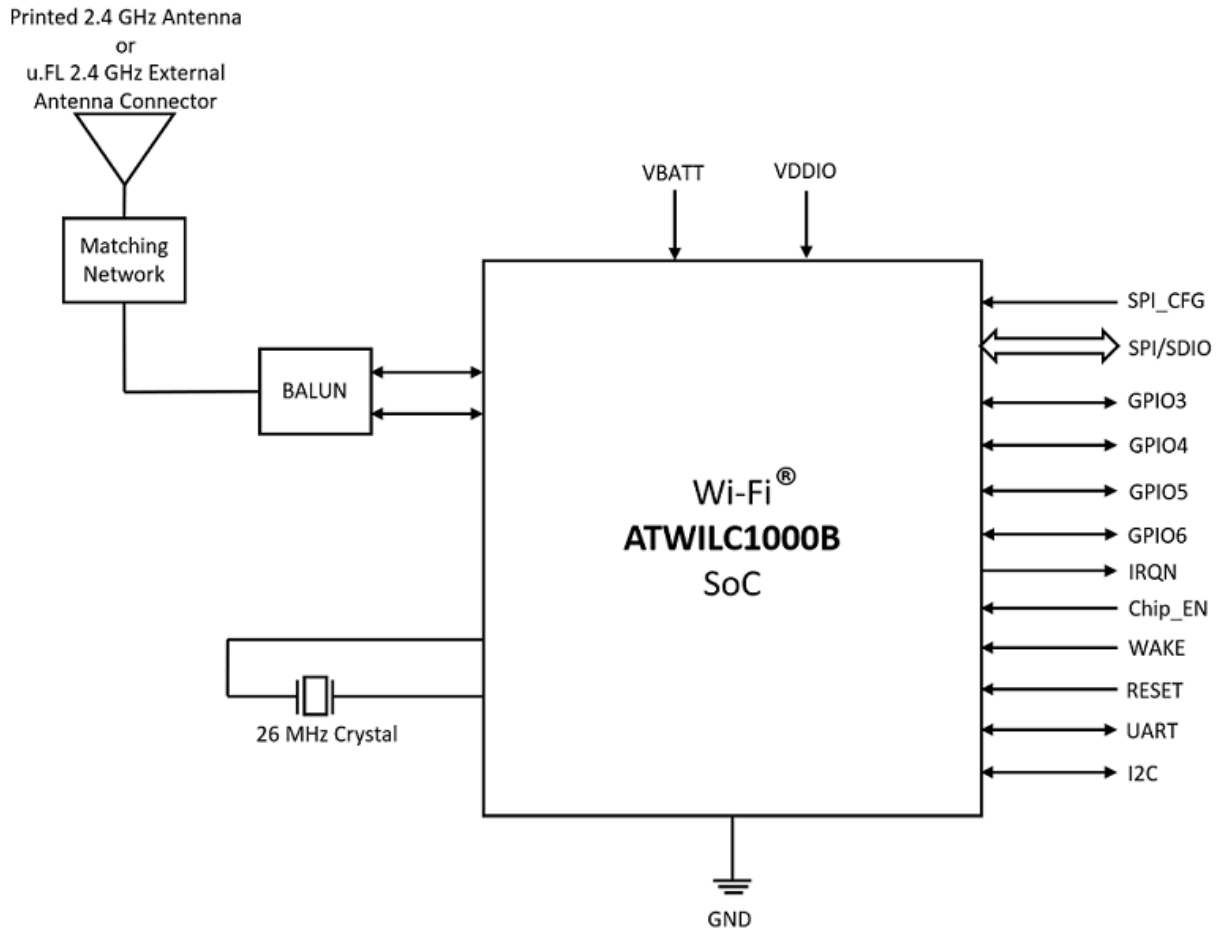

3. Pinout and Package Information

The ATWILC1000-MR110xB package has an exposed paddle that must be connected to the system board ground. The module pin assignment is shown in the following figure.

Figure 3-1. Pin Assignment

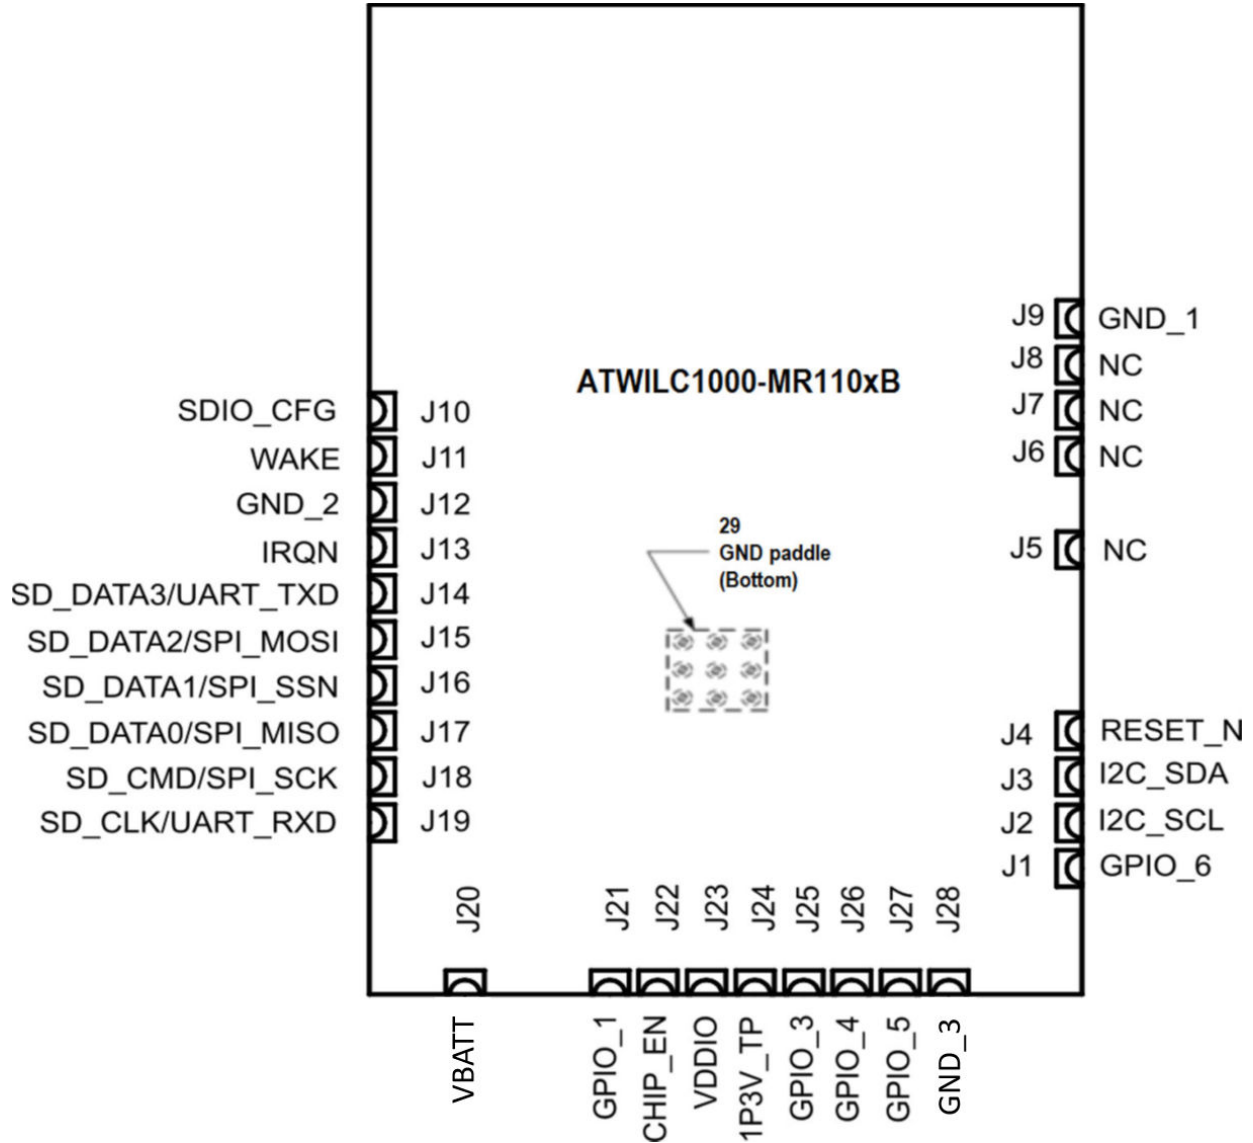

Note: This pin assignment is applicable for both the ATWILC1000-MR110PB and ATWILC1000-MR110UB modules. The following table shows the pin description of this module.

Table 3-1. Pin Details

Pin No.	Name	Type	Description	Programmable Pull-Up Resistor
1	GPIO_6 ¹	I/O	General purpose I/O.	—
2	I ² C_SCL	I/O	I ² C slave clock. Used only for development debugging purposes. It is recommended to add a test point for this pin.	—

ATWILC1000-MR110xB

Pinout and Package Information

.....continued				
Pin No.	Name	Type	Description	Programmable Pull-Up Resistor
3	I ² C_SDA	I/O	I ² C slave data. Used only for development debugging purposes. It is recommended to add a test point for this pin.	Yes
4	RESET_N	I	Active-low hard reset. When this pin is asserted low, the module is placed in the Reset state. When this pin is asserted high, the module is out of reset and functions normally. Connect to a host output that defaults low at power-up. If the host output is tri-stated, add a 1 MΩ pull-down resistor to ensure a low level at power-up.	Yes
5	NC	—	No connection.	—
6	NC	—	No connection.	—
7	NC	—	No connection.	—
8	NC	—	No connection.	—
9	GND_1	Ground	Ground.	—
10	SDIO_SPI_CFG	I	Connect to VDDIO through a 1 MΩ resistor to enable the SPI interface. Connect to the ground to enable the SDIO interface.	No
11	WAKE	I	Host wake control. Can be used to wake up the module from Doze mode. Current FW implementation makes use of the IRQ/SDIO interface to wake up the host.	Yes
12	GND_2	Ground	—	—
13	IRQN	O	The ATWILC1000-MR110xB device interrupt output. Connect to a host interrupt pin.	Yes
14	SD_DAT3	SDIO=I/O UART=O	SDIO Data Line 3 from the ATWILC1000-MR110xB when the module is configured for SDIO.	Yes
15	SD_DAT2/SPI_RXD	SDIO=I/O SPI=I	SDIO Data Line 2 signal from ATWILC1000-MR110xB when the module is configured for SDIO. SPI MOSI (Master Out Slave In) pin when the module is configured for SPI.	Yes
16	SD_DAT1/SPI_SSN	SDIO=I/O SPI=I	SDIO Data Line 1 from ATWILC1000-MR110xB when the module is configured for SDIO. Active low SPI slave select from the ATWILC1000 when the module is configured for SPI.	Yes
17	SD_DAT0/SPI_TXD	SDIO=I/O SPI=O	SDIO Data Line 0 from the ATWILC1000-MR110xB when the module is configured for SDIO. SPI MISO (Master In Slave Out) pin from ATWILC1000 when the module is configured for SPI.	Yes
18	SD_CMD/SPI_CLK	SDIO=I/O SPI=I	SDIO CMD line from ATWILC1000-MR110xB when the module is configured for SDIO. SPI Clock from ATWILC1000 when the module is configured for SPI.	Yes

ATWILC1000-MR110xB

Pinout and Package Information

.....continued				
Pin No.	Name	Type	Description	Programmable Pull-Up Resistor
19	SD_CLK	SDIO=I UART=I	SDIO clock line for the ATWILC1000-MR110xB when the module is configured for SDIO.	Yes
20	VBATT	Power supply	Power supply pin for the DC/DC convertor.	Yes
21	GPIO_1 ¹	I/O	General purpose I/O.	Yes
22	CHIP_EN	I	Module enable. High level enables the module, low level places the module in Power-Down mode. Connect to a host Output that defaults low at power-up. If the host output is tri-stated, add a 1 MΩ pull-down resistor if necessary to ensure a low level at power-up.	No
23	VDDIO	Power supply	I/O power supply. Must match host I/O voltage.	—
24	1P3V_TP	—	1.3V VDD Core Test Point. Decouple with 10 uF and 0.01 uF to the GND close to pin 24.	—
25	GPIO_3 ¹	I/O	General purpose I/O. By default, UART receives input from the ATWILC1000-MR110xB. Used only for development debugging purposes. It is recommended to add a test point for this pin.	Yes
26	GPIO_4 ¹	I/O	General purpose I/O.	Yes
27	GPIO_5 ¹	I/O	General purpose I/O. By default, UART transmits output to the ATWILC1000-MR110xB. Used only for development debugging purposes. It is recommended to add a test point for this pin.	Yes
28	GND_3	Ground	—	—
29	Paddle	Ground	Exposed paddle GND. This pad must be soldered to the system ground.	—

Note:

1. Use of the GPIO functionality is not supported by the WILC1000 FW. The data sheet will be updated once the support for this feature is added.

The following table provides the ATWILC1000-MR110xB module package dimensions.

Table 3-2. ATWILC1000-MR110xB Module Package Information

Parameter	Value	Units
Package Size	21.7 x 14.7 x 2.1	mm
Pad Count	28	—
Total Thickness	2.11	mm
Pad Pitch	1.016	
Pad Width	0.82	
Exposed Pad size	3.7 x 3.7	

4. Electrical Specifications

4.1 Absolute Ratings

The absolute maximum ratings for this module are listed in the following table.

Table 4-1. ATWILC1000-MR110xB Module Absolute Maximum Ratings

Symbol	Description	Min.	Max.	Unit
VBATT	Input supply voltage	-0.3	5.0	V
VDDIO	I/O voltage	-0.3	5.0	V



Stresses beyond those listed under "Absolute Maximum Ratings" cause permanent damage to the device. This is a stress rating only. The functional operation of the device at those or any other conditions above those indicated in the operation listings of this specification is not implied. Exposure to the maximum rating conditions for extended periods affects the device's reliability.

4.2 Recommended Operating Conditions

The recommended operating conditions for this module are listed in the following table.

Table 4-2. ATWILC1000-MR110xB Module Recommended Operating Conditions

Characteristics	Symbol	Min.	Typ.	Max.	Unit
I/O Supply Voltage Low Range	VDDIO _L	1.62	1.80	2.00	V
I/O Supply Voltage Mid Range	VDDIO _M	2.00	2.50	3.00	V
I/O Supply Voltage High Range	VDDIO _H	3.00	3.30	3.60	V
Battery voltage	VBATT	3.00	3.30	4.20	V
Operating temperature	—	-40	—	+85	°C

Notes:

1. VBATT must be equal to or greater than VDDIO.
2. The voltage of VDDIO is dependent on the system I/O voltage.
3. Test Conditions: -40°C to +85°C

4.3 DC Electrical Characteristics

The following table provides the DC characteristics for the ATWILC1000-MR110xB digital pads.

ATWILC1000-MR110xB

Electrical Specifications

Table 4-3. DC Electrical Characteristics

VDDIO Condition	Characteristic	Min.	Typ.	Max.	Unit
VDDIO _L	Input Low Voltage (V _{IL})	-0.30	—	0.60	V
	Input High Voltage (V _{IH})	VDDIO-0.60	—	VDDIO+0.30	
	Output Low Voltage (V _{OL})	—	—	0.45	
	Output High Voltage (V _{OH})	VDDIO-0.50	—	—	
VDDIO _M	Input Low Voltage (V _{IL})	-0.30	—	0.63	
	Input High Voltage (V _{IH})	VDDIO-0.60	—	VDDIO+0.30	
	Output Low Voltage (V _{OL})	—	—	0.45	
	Output High Voltage (V _{OH})	VDDIO-0.50	—	—	
VDDIO _H	Input Low Voltage (V _{IL})	-0.30	—	0.65	
	Input High Voltage (V _{IH})	VDDIO-0.60	—	VDDIO+0.30 (up to 3.60)	
	Output Low Voltage (V _{OL})	—	—	0.45	
	Output High Voltage (V _{OH})	VDDIO-0.50	—	—	
All	Output Loading	—	—	20	pF
All	Digital Input Load	—	—	6	

.....continued

VDDIO Condition	Characteristic	Min.	Typ.	Max.	Unit
VDDIO _L	Pad Drive Strength (regular pads ⁽¹⁾)	1.7	2.4	—	mA
VDDIO _M	Pad Drive Strength (regular pads ⁽¹⁾)	3.4	6.5	—	
VDDIO _H	Pad Drive Strength (regular pads ⁽¹⁾)	10.6	13.5	—	
VDDIO _L	Pad Drive Strength (high-drive pads ⁽¹⁾)	3.4	4.8	—	
VDDIO _M	Pad Drive Strength (high-drive pads ⁽¹⁾)	6.8	13	—	
VDDIO _H	Pad Drive Strength (high-drive pads ⁽¹⁾)	21.2	27	—	

Note:

1. The following are high-drive pads: I2C_SCL, I2C_SDA; all other pads are regular.

4.4 Receiver Performance

The following are the typical conditions for radio receiver performance:

VBATT at 3.3V, VDDIO at 3.3V, temperature at 25°C and WLAN Channel 6 (2437 MHz).

The following table provides the receiver performance characteristics for the module.

Table 4-4. Receiver Performance

Parameter	Description	Min.	Typ.	Max.	Unit
Frequency	—	2,412	—	2,484	MHz
Sensitivity 802.11b	1 Mbps DSSS	—	-94	—	dBm
	2 Mbps DSSS	—	-91	—	
	5.5 Mbps DSSS	—	-89	—	
	11 Mbps DSSS	—	-86	—	

.....continued

Parameter	Description	Min.	Typ.	Max.	Unit
Sensitivity 802.11g	6 Mbps OFDM	—	-88	—	dBm
	9 Mbps OFDM	—	-87	—	
	12 Mbps OFDM	—	-86	—	
	18 Mbps OFDM	—	-84	—	
	24 Mbps OFDM	—	-82	—	
	36 Mbps OFDM	—	-78	—	
	48 Mbps OFDM	—	-74	—	
	54 Mbps OFDM	—	-73	—	
Sensitivity 802.11n (BW at 20 MHz)	MCS 0	—	-87	—	dBm
	MCS 1	—	-85	—	
	MCS 2	—	-83	—	
	MCS 3	—	-80	—	
	MCS 4	—	-76	—	
	MCS 5	—	-73	—	
	MCS 6	—	-71	—	
	MCS 7	—	-69	—	
Maximum Receive Signal Level	1-11 Mbps DSSS	—	0	—	dBm
	6-54 Mbps OFDM	—	-5	—	
	MCS 0 – 7	—	-5	—	
Adjacent Channel Rejection	1 Mbps DSSS (30 MHz offset)	—	50	—	dB
	11 Mbps DSSS (25 MHz offset)	—	43	—	
	6 Mbps OFDM (25 MHz offset)	—	40	—	
	54 Mbps OFDM (25 MHz offset)	—	25	—	
	MCS 0 – 20 MHz BW (25 MHz offset)	—	40	—	
	MCS 7 – 20 MHz BW (25 MHz offset)	—	20	—	
Cellular Blocker Immunity	776-794 MHz CDMA	—	-14	—	dBm
	824-849 MHz GSM	—	-10	—	
	880-915 MHz GSM	—	-10	—	
	1710-1785 MHz GSM	—	-15	—	
	1850-1910 MHz GSM	—	-15	—	
	1850-1910 MHz WCDMA	—	-24	—	
	1920-1980 MHz WCDMA	—	-24	—	

4.5 Transmitter Performance

The following are the typical conditions for radio transmitter performance:

ATWILC1000-MR110xB

Electrical Specifications

VBATT at 3.3V, VDDIO at 3.3V, temperature at 25°C and WLAN Channel 6 (2437 MHz).

The following table provides the transmitter performance characteristics for the module.

Table 4-5. Transmitter Performance^(3, 5, 6, 7)

Parameter	Description	Unit	Minimum	Typical	Maximum
Frequency	—	MHz	2,412	—	2,484
Output Power ^(1, 2) , ON_Transmit	802.11b 1 Mbps	dBm	—	13.6	—
	802.11b 11 Mbps	dBm	—	15.3	—
	802.11g 6 Mbps	dBm	—	18.9	—
	802.11g 54 Mbps	dBm	—	14.3	—
	802.11n MCS 0	dBm	—	18.9	—
	802.11n MCS 7	dBm	—	12.2	—
TX Power Accuracy	—	dB	—	±1.5 ⁽²⁾	—
Carrier Suppression	802.11b mode	dBc	—	-19.4	—
	802.11g mode	dBc	—	-27.5	—
	802.11n mode	dBc	—	-21.1	—
Out of Band Transmit Power	76-108	dBm/Hz	—	-125	—
	776-794	dBm/Hz	—	-125	—
	869-960	dBm/Hz	—	-125	—
	925-960	dBm/Hz	—	-125	—
	1570-1580	dBm/Hz	—	-125	—
	1805-1880	dBm/Hz	—	-125	—
	1930-1990	dBm/Hz	—	-125	—
	2110-2170	dBm/Hz	—	-125	—
Harmonic Output Power ⁽⁴⁾	2 nd	dBm/MHz	—	-28	—
	3 rd	dBm/MHz	—	-33	—
	4 th	dBm/MHz	—	-40	—
	5 th	dBm/MHz	—	-28	—

Notes:


1. Measured at 802.11 spec compliant EVM/Spectral Mask.
2. Measured at RF balun output.
3. Operating temperature range is -40°C to +85°C. RF performance is assured at room temperature of 25°C with a 2-3 dB change at boundary conditions.
4. Measured at 11 Mbps, DG (Digital Gain) = -7, WLAN Channel 6 (2437 MHz).
5. With respect to TX power, different (higher/lower) RF output power settings may be used for specific antennas and/or enclosures, in which case recertification may be required.
6. The availability of some specific channels and/or operational frequency bands are country dependent and must be programmed at the host product factory to match the intended destination. Regulatory bodies prohibit exposing the settings to the end user. This requirement needs to be taken care of via host implementation.
7. The RF parameters for the ATWILC1000-MR110UB will be approximately 1 dB less than the values in the table. This insertion loss accounts for PCB trace losses and the filter network loss to the U.FL connector.

4.6 Timing Characteristics

4.6.1 SPI Timing

The SPI timing is shown in the following figure.

Figure 4-1. SPI Timing Diagram (SPI MODE CPOL = 0, CPHA = 0)

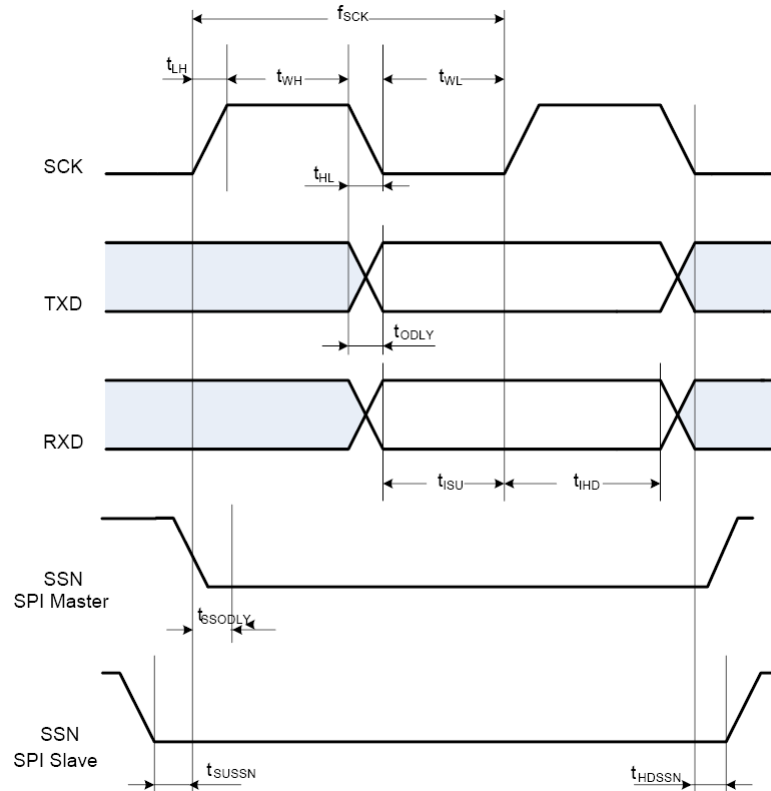

The SPI timing parameters are provided in the following table.

Table 4-6. SPI Slave Timing Parameters⁽¹⁾

Parameter	Symbol	Min.	Max.	Units
Clock Input Frequency ⁽²⁾	f_{SCK}	—	48	MHz
Clock Low Pulse Width	t_{WL}	4	—	ns
Clock High Pulse Width	t_{WH}	5	—	
Clock Rise Time	t_{LH}	0	7	
Clock Fall Time	t_{HL}	0	7	
TXD Output Delay ⁽³⁾	t_{ODLY}	4	9 from SCK fall	
RXD Input Setup Time	t_{ISU}	1	—	
RXD Input Hold Time	t_{IHD}	5	—	
SSN Input Setup Time	t_{SUSSN}	3	—	
SSN Input Hold Time	t_{HDSSN}	5.5	—	


Notes:

1. Timing is applicable to all of the SPI modes.
2. Maximum clock frequency specified is limited by the SPI slave interface internal design; the actual maximum clock frequency can be lower and depends on the specific PCB layout.
3. Timing is based on 15 pF output loading. Under all conditions, $t_{LH} + t_{WH} + t_{HL} + t_{WL}$ must be less than or equal to $1/f_{SCK}$.

4.6.2 SDIO Timing

The SDIO Slave interface timing is shown in the following figure.

Figure 4-2. SDIO Timing Diagram

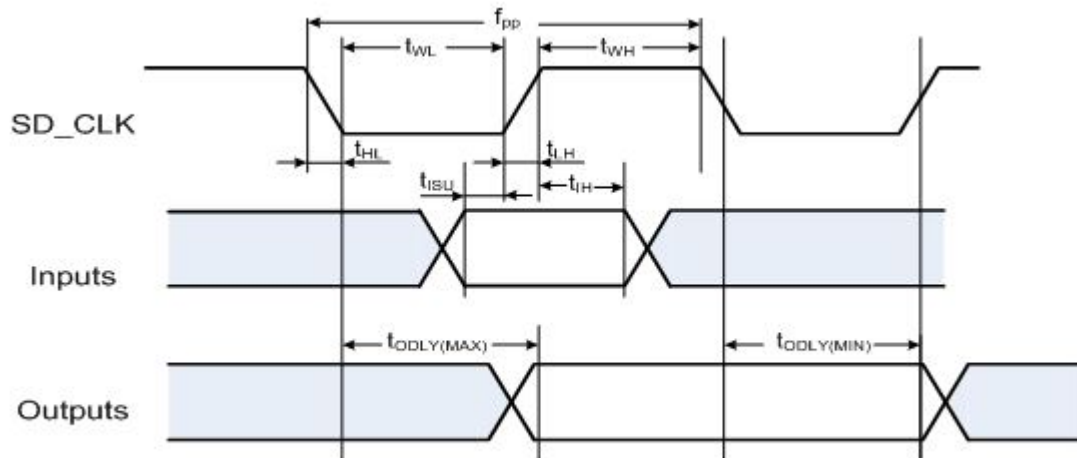

Slave timing parameters are provided in the following table.

Table 4-7. SDIO Timing Parameters


Parameter	Symbol	Min	Max	Units
Clock Input Frequency ⁽¹⁾	f_{PP}	0	50	MHz
Clock Low Pulse Width	t_{WL}	9	—	ns
Clock High Pulse Width	t_{WH}	4.5	—	
Clock Rise Time	t_{LH}	0	5	
Clock Fall Time	t_{HL}	0	5	
Input Setup Time	t_{ISU}	6	—	
Input Hold Time	t_{IH}	4	—	
Output Delay ⁽²⁾	t_{ODLY}	3	11	

1. Maximum clock frequency specified is limited by the SDIO Slave interface internal design; the actual maximum clock frequency can be lower and depends on the specific PCB layout.
2. Timing is based on 15 pF output loading.

4.6.3 I²C Timing

The following figure illustrates the I²C Slave timing.

Figure 4-3. I²C Timing Diagram

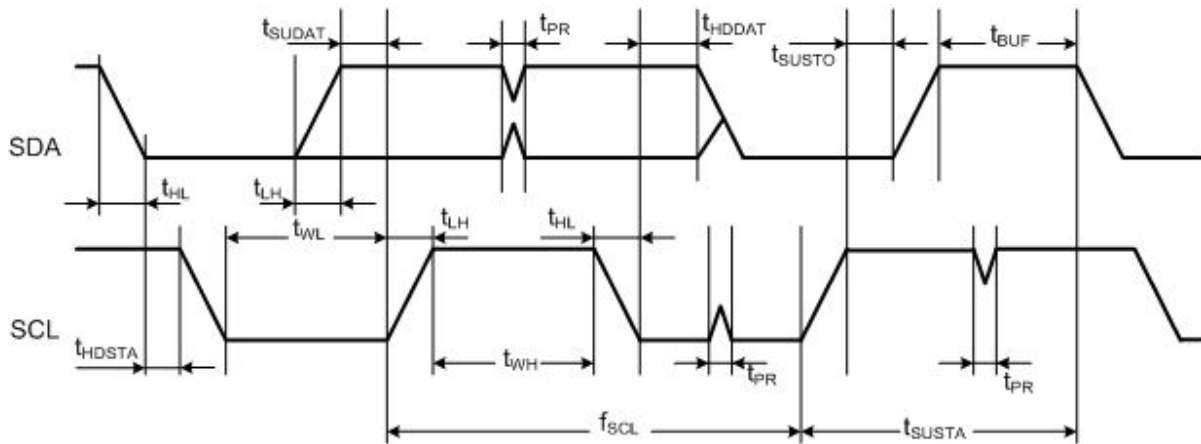

The following table provides I²C Slave timing parameters.

Table 4-8. I²C Timing Parameters

Parameter	Symbol	Min	Max	Units	Remarks
SCL Clock Frequency	f_{SCL}	0	400	KHZ	—
SCL Low Pulse Width	t_{WL}	1.3	—	μ s	—
SCL High Pulse Width	t_{WH}	0.6	—	μ s	—
SCL, SDA Fall Time	t_{HL}	—	300	ns	—
SCL, SDA Rise Time	t_{LH}	—	300	ns	This is dictated by external components
START Setup Time	t_{SUSTA}	0.6	—	μ s	—
START Hold Time	t_{HDSTA}	0.6	—	μ s	—
SDA Setup Time	t_{SUDAT}	100	—	ns	—
SDA Hold Time	t_{HDDAT}	0	—	ns	Slave and Master Default
		40	—	ns	Master Programming Option
STOP Setup time	t_{SUSTO}	0.6	—	μ s	—
Bus Free Time Between STOP and START	t_{BUF}	1.3	—	μ s	—
Glitch Pulse Reject	t_{PR}	0	50	ns	—

5. Power Management

The ATWILC1000-MR110xB module has several device states:

- On states:
 - ON_Transmit – Device actively transmits an 802.11 signal. Highest output power and nominal current consumption.
 - ON_Receive – Device actively receives an 802.11 signal. Lowest sensitivity and nominal current consumption.
 - ON_Doze – Device is powered on but it does not actively transmit or receive the data.
 - Power_Down – Device core supply is powered off.

The following pins are used to switch between the ON and Power_Down states:

- CHIP_EN – This pin (pin 22) enables or disables the DC/DC converter.
- VDDIO – I/O supply voltage from external supply.

In the ON states, VDDIO is ON and CHIP_EN is high (at VDDIO voltage level). To change from the ON states to Power_Down state, connect the RESETN and CHIP_EN pin to logic low (GND) by following the power-down sequence mentioned in [Section 5.3 Power-Up/Down Sequence](#). When VDDIO is off and CHIP_EN is low, the chip is powered off with no leakage (also see [Section 5.2 Restrictions for Power States](#)).

5.1 Current Consumption in Various Device States

The following table provides this module's current consumption in various device states.

Table 5-1. Current Consumption

Device State	Code Rate	Output Power (dBm)	Current Consumption ^(1, 2)	
			I _{VBATT}	I _{VDDIO}
ON_Transmit	802.11b 1 Mbps	17.6	266 mA	22 mA
	802.11b 11 Mbps	18.5	239 mA	22 mA
	802.11g 6 Mbps	18.6	249 mA	22 mA
	802.11g 54 Mbps	16.9	173 mA	22 mA
	802.11n MCS 0	17.7	253 mA	22 mA
	802.11n MCS 7	14.0	164 mA	22 mA
ON_Receive	802.11b 1 Mbps	N/A	63 mA	22 mA
	802.11b 11 Mbps	N/A	63 mA	22 mA
	802.11g 6 Mbps	N/A	63 mA	22 mA
	802.11g 54 Mbps	N/A	63 mA	22 mA
	802.11n MCS 0	N/A	63 mA	22 mA
	802.11n MCS 7	N/A	63 mA	22 mA
ON_Doze	N/A	N/A	380 µA	<10 µA
Power_Down	N/A	N/A	1.25 µA ⁽³⁾	

Notes:

1. The power consumption values are measured when VBAT is 3.3V and VDDIO is 3.3V at 25°C.
2. Current consumption in Active TX state is done with a Duty cycle configuration - 5.
3. Current consumption mentioned for these states is the sum of current consumed in the VDDIO and VBATT voltage rails.

5.2 Restrictions for Power States

When no power is supplied to the device, the DC/DC converter output and VDDIO are both turned off (at ground potential). In this case, a voltage cannot be applied to the device pins because each pin contains an ESD diode from the pin to supply. This diode will turn on when voltage higher than one diode-drop is supplied to the pin.


If a voltage must be applied to the signal pads while the chip is in a low power state, the VDDIO supply must be on, so the Sleep mode or power-down state must be used.

Similarly, to prevent the pin-to-ground diode from turning on, do not apply a voltage that is more than one diode-drop below ground to any pin.

5.3 Power-Up/Down Sequence

The following figure illustrates the power-up/down sequence for the ATWILC1000-MR110xB.

Figure 5-1. Power-Up/Down Sequence

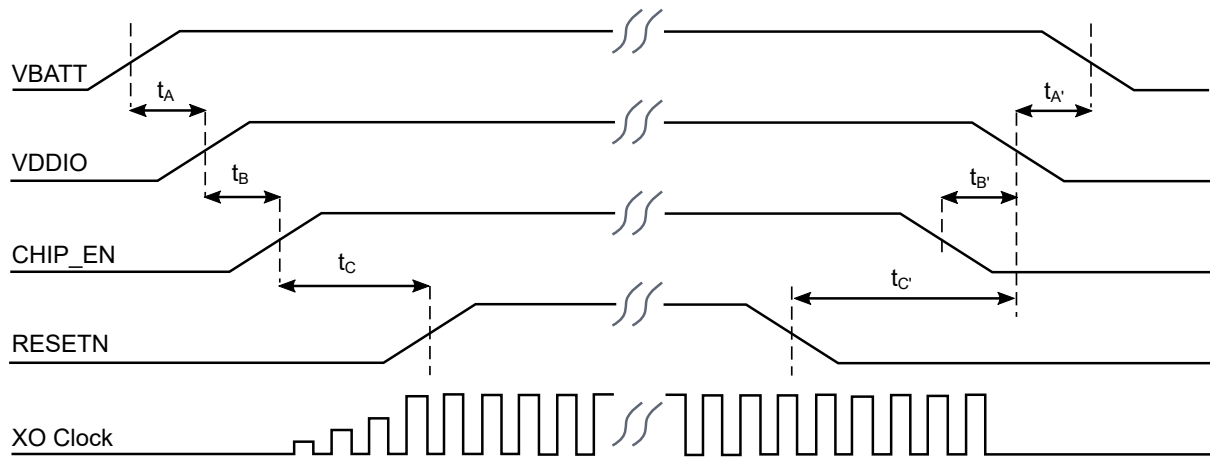

The following table provides power-up/down sequence timing parameters.

Table 5-2. Power-Up/Down Sequence Timing

Parameter	Min.	Max.	Units	Description	Notes
t_A	0	—	ms	VBAT rise to VDDIO rise	VBAT and VDDIO can rise simultaneously or connected together. VDDIO must not rise before VBAT.
t_B	0	—	ms	VDDIO rise to CHIP_EN rise	CHIP_EN must not rise before VDDIO. CHIP_EN must be driven high or low and must not be left floating.
t_C	5	—	ms	CHIP_EN rise to RESETN rise	This delay is required to stabilize the XO clock before RESETN removal. RESETN must be driven high or low and must not be left floating.
$t_{A'}$	0	—	ms	VDDIO fall to VBAT fall	VBAT and VDDIO must fall simultaneously or be connected together. VBAT must not fall before VDDIO.
$t_{B'}$	0	—	ms	CHIP_EN fall to VDDIO fall	VDDIO must not fall before CHIP_EN. CHIP_EN and RESETN must fall simultaneously.
$t_{C'}$	0	—	ms	RESETN fall to VDDIO fall	VDDIO must not fall before RESETN. RESETN and CHIP_EN fall simultaneously.

5.4 Digital I/O Pin Behavior During Power-Up Sequences

The following table represents the digital I/O pin states corresponding to the device power modes.

Table 5-3. Digital I/O Pin Behavior in Different Device States

Device State	VDDIO	CHIP_EN	RESETN	Output Driver	Input Driver	Pull-Up/Down Resistor (96 kΩ)
Power_Down: Core Supply Off	High	Low	Low	Disabled (High-Z)	Disabled	Disabled
Power-on Reset: Core Supply and Hard Reset On	High	High	Low	Disabled (High-Z)	Disabled	Enabled
Power-on Default: Core Supply On, Device Out of Reset and Not Programmed	High	High	High	Disabled (High-Z)	Enabled	Enabled
On_Doze/On_Transmit/On_Receive: Core Supply On, Device Programmed by Firmware	High	High	High	Programmed by Firmware for Each Pin: Enabled or Disabled	Opposite of Output Driver State	Programmed by Firmware for Each Pin: Enabled or Disabled

6. CPU and Memory Subsystems

6.1 Processor

This ATWILC1000-MR110xB module has a Cortus APS3 32-bit processor. This processor performs many of the MAC functions including but not limited to association, authentication, power management, security key management and MSDU aggregation/deaggregation. In addition, the processor provides flexibility for various modes of operation, such as the STA and AP modes.

6.2 Memory Subsystem

The APS3 core uses a 128 KB instruction/boot ROM along with a 160 KB instruction RAM and a 64 KB data RAM. In addition, the device uses a 128 KB shared RAM, accessible by the processor and MAC, which allows the APS3 core to perform various data management tasks on the TX and RX data packets.

6.3 Nonvolatile Memory (eFuse)

The ATWILC1000-MR110xB modules have 768 bits of nonvolatile eFuse memory that is read by the CPU after device reset. The eFuse is partitioned into six 128-bit banks (Bank 0 – Bank 5). Each bank has the same bit map (see the following figure). The purpose of the first 108 bits in each bank is fixed and the remaining 20 bits are general-purpose, software-dependent bits or reserved for future use.

Note: If IQ Amp Used, IQ Amp Correction, IQ Pha Used, and IQ Pha Correction bit fields are programmed, Bank 2 must not be programmed with any values, and only the Bank Invalid bit must be programmed.

This nonvolatile one-time-programmable (OTP) memory can be used for storing the following customer-specific parameters:


- MAC address
- Calibration information (crystal frequency offset and so on)
- Other software-specific configuration parameters

Each bank can be programmed independently, which allows for several updates of the device parameters following the initial programming. For example, if the MAC address is currently programmed in Bank 1, and to update the new MAC address, perform the following steps:

1. Invalidate the contents of Bank 1 by programming the Bank Invalid bit field of Bank 1.
2. If the IQ Amp Used, IQ Amp Correction, IQ Pha Used, and IQ Pha Correction bit fields are programmed, skip Bank 2 by programming only the Bank Invalid bit of Bank 2 (see above note).
3. Program Bank 3 with the new MAC address along with the values of ADC Calib (if used in Bank 1), Frequency Offset (from Bank 1), IQ Amp Correction (from Bank 1) and IQ Pha Correction (from Bank 1). The Used bit field for each corresponding value bit field should also be programmed.
4. Validate the contents of Bank 3 by programming the Bank Used bit field of Bank 3.

Each bit field (i.e., MAC Address, ADC Calibration, Frequency Offset, IQ Amp Correction, and IQ Pha Correction) has its corresponding Used bit field. Each Used bit field indicates the firmware that the value in the related bit field is valid. A value of '0' in the Used bit field indicates that the following bit field is invalid and a value of '1' programmed to the Used bit field indicates that the corresponding bit field is valid and can be used by firmware. By default, ATWILC1000-MR110xB modules are programmed with the MAC Address, Frequency Offset, IQ Amp, and IQ Phase fields of Bank 1.

Figure 6-1. Bit Map for ATWILC1000-MR110xB eFuse Bank

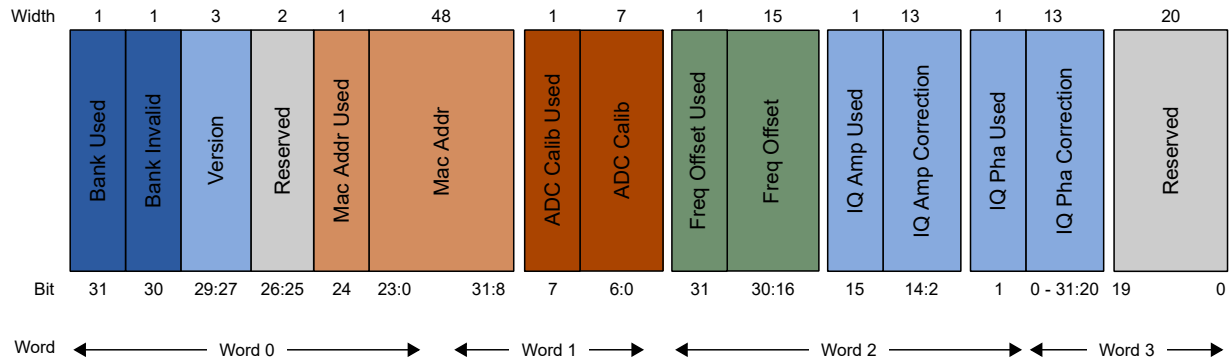

Note: The bit map has been updated with the IQ Amp Correction and IQ Pha Correction fields from firmware version 15.3 for WILC Linux, and 4.5 for WILC RTOS onwards. Earlier these bit fields were reserved for future use. For customers using a firmware older than 15.3 for WILC Linux and 4.5 for WILC RTOS, the IQ Amp Correction and IQ Pha Correction bit fields must not be used by the firmware. The matrix table below provides details on how different versions of the firmware handle the IQ Amp Used, IQ Amp Correction, IQ Pha Used, and IQ Pha Correction bit fields during Initialization.

Firmware Version	IQ Amp Used and IQ Pha Used Bit Status	
	Device with IQ Amp Used and IQ Pha Used Bit Fields with Value as '1'	Device with IQ Amp Used and IQ Pha Used Bit Fields with Value as '0'
15.3 or later for WILC Linux 4.5 or later for WILC RTOS	The firmware loads the IQ calibration values from the IQ Amp Correction and IQ Pha Correction bit fields of the corresponding eFuse bank and proceeds with Initialization.	The firmware ignores the values in the IQ Amp Correction and IQ Pha Correction bit fields and proceeds with Initialization.
Prior to 15.3 for WILC Linux Prior to 4.5 for WILC RTOS	The firmware does not check for the IQ Amp Used and IQ Pha Used bit fields and proceeds with Initialization.	

7. WLAN Subsystem

The WLAN subsystem is composed of the Media Access Controller (MAC), Physical Layer (PHY) and the radio.

7.1 MAC

7.1.1 Description

This module is designed to operate at low power, while providing high data throughput. The IEEE 802.11 MAC functions are implemented with a combination of dedicated datapath engines, hardwired control logic and a low-power, high-efficiency microprocessor. The combination of dedicated logic with a programmable processor provides optimal power efficiency and real-time response while providing the flexibility to accommodate evolving standards and future feature enhancements.

The dedicated datapath engines are used to implement datapath functions with heavy computational requirements. For example, a Frame Check Sequence (FCS) engine checks the Cyclic Redundancy Check (CRC) of the transmitting and receiving packets, and a cipher engine performs all the required encryption and decryption operations for the WEP, WPA-TKIP, WPA2 CCMP-AES and WPA2 Enterprise security requirements.

Control functions, which have real-time requirements, are implemented using hardwired control-logic modules. These logic modules offer real-time response while maintaining configurability through the processor. Examples of hardwired control-logic modules are the channel access control module (implements EDCA/HCCA, Beacon TX control, interframe spacing and so on), protocol timer module (responsible for the Network Access vector, back-off timing, timing synchronization function and slot management), MAC Protocol Data Unit (MPDU) handling module, aggregation/deaggregation module, block ACK controller (implements the protocol requirements for burst block communication) and TX/RX control Finite State Machine (FSM) (coordinate data movement between PHY and MAC interface, cipher engine and the Direct Memory Access (DMA) interface to the TX/RX FIFOs).

The following are the characteristics of the MAC functions implemented solely in the software on the microprocessor:

- Functions with high-memory requirements or complex data structures. Examples are: association table management and power save queuing.
- Functions with low computational load or without critical real-time requirements. Examples are: authentication and association.
- Functions that require flexibility and upgradeability. Examples are: beacon frame processing and QoS scheduling.

7.1.2 Features

The ATWILC1000-MR110xB IEEE 802.11 MAC supports the following functions:

- IEEE 802.11b/g/n
- IEEE 802.11e WMM QoS EDCA/PCF multiple access categories traffic scheduling
- Advanced IEEE 802.11n features:
 - Transmission and reception of aggregated MPDUs (A-MPDU)
 - Transmission and reception of aggregated MSDUs (A-MSDU)
 - Immediate block acknowledgment
 - Reduced Interframe Spacing (RIFS)
- IEEE 802.11i and WPA security with key management
 - WEP 64/128
 - WPA-TKIP
 - 128-bit WPA2 CCMP (AES)
 - WPA2 Enterprise
- Advanced power management
 - Standard IEEE 802.11 Power save mode
 - Wi-Fi Alliance WMM-PS (U-APSD)

- RTS-CTS and CTS self support
- Either STA or AP mode in the infrastructure basic service set mode
- Concurrent mode of operation
- Independent Basic Service Set (IBSS)

7.2 PHY

The ATWILC1000-MR110xB module WLAN PHY is designed to achieve the reliable and power-efficient physical layer communication specified by IEEE 802.11 b/g/n in single-stream mode with 20 MHz bandwidth. The advanced algorithms are used to achieve maximum throughput in a real-world communication environment with impairments and interference. The PHY implements all the required functions, such as Fast Fourier Transform (FFT), filtering, Forward Error Correction (FEC) that is a Viterbi decoder, frequency, timing acquisition and tracking, channel estimation and equalization, carrier sensing, clear channel assessment and automatic gain control.

7.2.1 Features

The IEEE 802.11 PHY supports the following functions:

- Single antenna 1x1 stream in 20 MHz channels
- IEEE 802.11b DSSS-CCK modulation: 1, 2, 5.5 and 11 Mbps
- IEEE 802.11g OFDM modulation: 6, 9, 12, 18, 24, 36, 48 and 54 Mbps
- IEEE 802.11n HT modulations MCS0-7, 20 MHz, 800 and 400 ns guard interval: 6.5, 7.2, 13.0, 14.4, 19.5, 21.7, 26.0, 28.9, 39.0, 43.3, 52.0, 57.8, 58.5, 65.0 and 72.2 Mbps⁽¹⁾
- IEEE 802.11n mixed mode operation
- Per packet TX power control
- Advanced channel estimation/equalization, automatic gain control, CCA, carrier/symbol recovery and frame detection

Note:

1. Short GI is currently not supported by Firmware. The data sheet will be updated when the feature is supported.

7.3 Radio

This section describes the properties and characteristics of the ATWILC1000- MR110xB and Wi-Fi[®] radio transmit and receive performance capabilities of the device. The performance measurements are taken at the RF pin assuming 50Ω impedance and the RF performance is assured at room temperature of 25°C with a derating of 2-3 dB at boundary conditions.

The measurements were taken under typical conditions: VBATT at 3.3V, VDDIO at 3.3V and temperature at 25°C.

Table 7-1. Features and Properties

Feature	Description
Module Part Number	ATWILC1000-MR110xB
WLAN Standard	IEEE 802.11b/g/n, Wi-Fi compliant
Host Interface	SPI, SDIO
Dimension	L x W x H: 21.7 x 14.7 x 2.1 (typical) mm
Frequency range	2.412 GHz ~ 2.484 GHz (2.4 GHz ISM band)
Number of channels	11 for North America, 13 for Europe
Modulation	802.11b: DQPSK, DBPSK, CCK 802.11g/n: OFDM/64-QAM, 16-QAM, QPSK, BPSK

ATWILC1000-MR110xB

WLAN Subsystem

.....continued	
Feature	Description
Data rate	802.11b: 1, 2, 5.5, 11 Mbps 802.11g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
Data rate (20 MHz, short GI, 400 ns) ⁽²⁾	802.11n: 7.2, 14.4, 21.7, 28.9, 43.3, 57.8, 65, 72.2 Mbps
Operating temperature ⁽¹⁾	-40°C to 85°C
Storage temperature	-40°C to 125°C
Humidity	Operating humidity: 10% to 95% non-condensing Storage humidity: 5% to 95% non-condensing

Notes:

1. RF performance is assured at a room temperature of 25°C with a 2-3 dB change at the boundary conditions.
2. Short GI is currently not supported by Firmware. The data sheet will be updated when the feature is supported.

8. External Interfaces

This section describes the various host and debug interfaces of the ATWILC1000-MR110xB module.

The ATWILC1000-MR110xB external interfaces include:

- I²C for debug
- SPI/SDIO for control and data transfer
- UART for debug
- General purpose Input/Output GPIO pins⁽¹⁾

Note:

1. Usage of the GPIO functionality is not supported by the WILC1000 FW. The datasheet will be updated once the support for this feature is added.

8.1 Interfacing with the Host Microcontroller

This section describes how to interface the ATWILC1000-MR110xB module with the host microcontroller. The interface is comprised of a slave SPI/SDIO and additional control signals, as shown in the following figure. Additional control signals are connected to the GPIO/IRQ interface of the microcontroller.

Figure 8-1. Interfacing with the Host Microcontroller

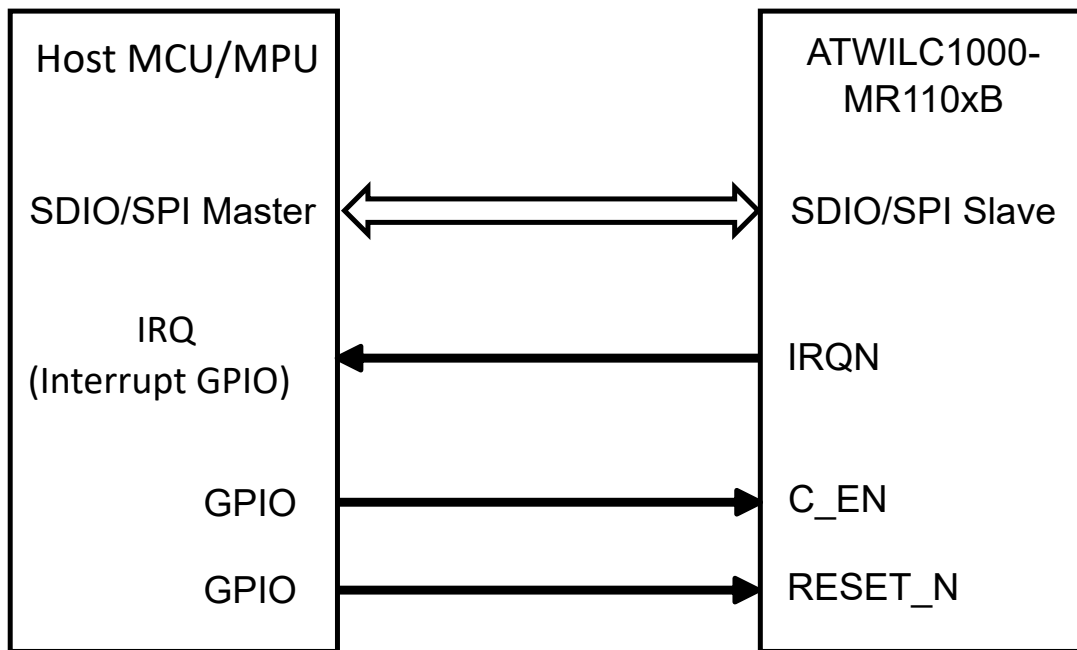


Table 8-1. Host Microcontroller Interface Pins⁽²⁾

Module Pin	Function ⁽¹⁾
4	RESET_N
13	IRQ_N
22	CHIP_EN
16	SPI_SSN/SD_DATA1
15	SPI_MOSI/SD_DATA2

.....continued	
Module Pin	Function ⁽¹⁾
17	SPI_MISO/SD_DATA0
18	SPI_SCK/SD_CMD
14	SD_DATA3
19	SD_CLK

Notes:

1. Logic input for module pin SDIO_SPI_CFG(10) determines whether SDIO or SPI slave interface is enabled. Connect SDIO_SPI_CFG to VDDIO through a 1 MΩ resistor to enable the SPI interface. Connect SDIO_SPI_CFG to ground to enable SDIO interface.
2. It is recommended to place test points for pins I2C_SDA(3), I2C_SCL(2), GPIO_3(25) and GPIO_5(27) in the design.

8.2 SPI Slave Interface

The SPI slave interface can be enabled by connecting the SDIO_SPI_CFG pin to VDDIO. This SPI interface is used to exchange the control and 802.11 data. The SPI is a full duplex slave-synchronous serial interface that is available following reset when pin 10 (SDIO_SPI_CFG) is connected to VDDIO.

The SPI interface pin mapping configuration is provided in the following table.

Table 8-2. SPI Interface Pin Mapping

Pin Number	SPI Function
10	SDIO_SPI_CFG: Must be connected to VDDIO
16	SSN: Active-Low Slave Select
15	MOSI: Serial Data Receive
18	SCK: Serial Clock
17	MISO: Serial Data Transmit

When the SPI is not selected, i.e., when SSN is high, the SPI interface will not interfere with data transfers between the serial master and other serial slave devices. When the serial slave is not selected, its transmitted data output is buffered, resulting in a high impedance drive onto the MISO line.

The SPI interface responds to a protocol that allows an external host to read or write any register in the chip and also initiate DMA transfers.

The SPI SSN, MOSI, MISO and SCK pins of this module have internal programmable pull-up resistors. These resistors are programmed to be disabled. Otherwise, if any of the SPI pins are driven to a low level while this module is in the Low-Power Sleep state, current will flow from the VDDIO supply through the pull-up resistors, increasing the current consumption of the module.

The SPI slave interface supports four standard modes as determined by the Clock Polarity (CPOL) and Clock Phase (CPHA) settings. These modes are illustrated in the following table. See also: Table 4-5, SPI Slave Modes in the datasheet: ww1.microchip.com/downloads/en/DeviceDoc/70005326B.pdf

Table 8-3. SPI Slave Modes

Mode	CPOL	CPHA
0	0	0
1	0	1


.....continued

Mode	CPOL	CPHA
2	1	0
3	1	1

Note: The ATWILC1000 firmware uses "SPI Mode 0" to communicate with the host.

The red lines in the following figure correspond to clock phase at 0 and the blue lines correspond to clock phase at 1.

Figure 8-2. SPI Slave Clock Polarity and Clock Phase Timing

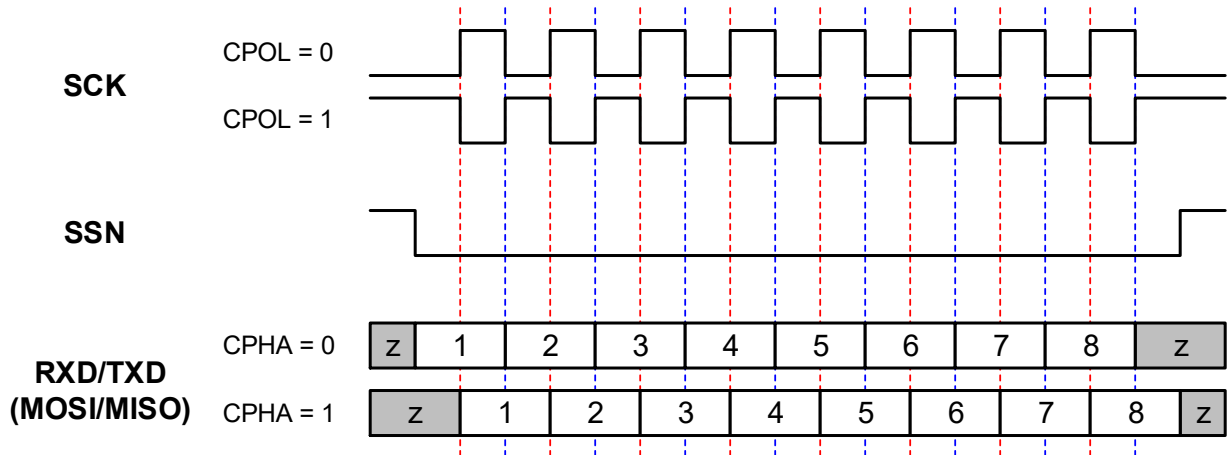

8.3 SDIO Slave Interface

The SDIO interface is enabled by connecting the SDIO_SPI_CFG pin to the ground. This SDIO interface is used to exchange the control and 802.11 data. The SDIO interface is available after reset when pin 10 (SDIO_SPI_CFG) is connected to the ground.

This SDIO is a full-speed interface. The interface supports the 1-bit/4-bit SD transfer mode at the clock range of 0-50 MHz. The host uses this interface to read and write from any register within the chip and also configures this module for DMA data transfer.

The SDIO interface pin mapping configuration is provided in the following table.

Table 8-4. ATWILC1000 SDIO Interface Pin Mapping

Pin #	SDIO Function
10	SDIO_SPI_CFG: Must be connected to the ground
14	DAT3: Data 3
15	DAT2: Data 2
16	DAT1: Data 1
17	DAT0: Data 0
18	CMD: Command
19	CLK: Clock

The SDIO card is detected when it is inserted into an SDIO host. During the normal initialization and interrogation of the card by the host, the card identifies itself as an SDIO device. The host software obtains the card information in a tuple (linked list) format and determines if that card's I/O function(s) are acceptable to activate. If the card is acceptable, it is allowed to power up fully and start the I/O function(s) built into the card.

The SD memory card communication is based on an advanced 9-pin interface (clock, command, four data and three power lines) designed to operate at a maximum operating frequency of 50 MHz.

8.3.1 Features

- Compliant with SDIO card specification version 2.0
- Host clock rate variable between 0 and 50 MHz
- Supports 1-bit/4-bit SD bus modes
- Allows card to interrupt host
- Responds to direct read/write (IO52) and extended read/write (IO53) transactions
- Supports suspend/resume operation

8.4 UART Debug Interface

This module has a Universal Asynchronous Receiver/Transmitter (UART) interface on the J25 (RXD) and J27 (TXD) pins. This interface is intended to be used only for debugging purposes. The UART is compatible with the RS-232 standard, where ATWILC1000-MR110xB operates as Data Terminal Equipment (DTE). It has a two-pin RXD/TXD interface.


The following is the default configuration for the UART interface of ATWILC1000-MR110xB:

- Baud rate: 115200
- Data: 8 bit
- Parity: None
- Stop bit: 1 bit
- Flow control: None

It also has RX and TX FIFOs, which ensure reliable high-speed reception and low software overhead transmission. FIFO size is 4 x 8 for both RX and TX direction. The UART has status registers that show the number of received characters available in the FIFO and various error conditions; in addition, it has the ability to generate interrupts based on these status bits.

An example of UART receiving or transmitting a single packet is shown in the following figure. This example shows 7-bit data (0x45), odd parity and two stop bits.

Figure 8-3. Example of UART RX or TX Packet

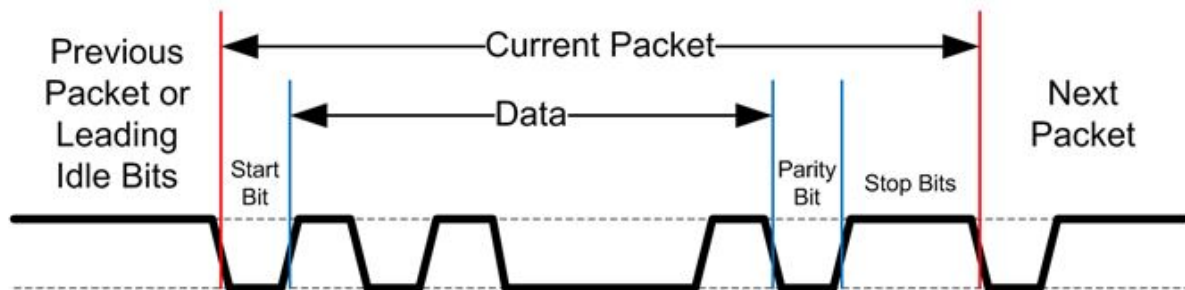

8.5 I²C Slave Interface

This module provides an I²C bus slave that allows for easy debugging of the ATWILC1000-MR110xB devices. It supports I²C bus Version 2.1 – 2000.

The I²C interface is used only for debug. This interface is a two-wire serial interface consisting of a serial data line (SDA, Pin 17) and a serial clock (SCL, Pin 18). It responds to the seven-bit address value 0x60. This module I²C interface operates in standard mode (with data rates up to 100 Kbps) and fast mode (with data rates up to 400 Kbps).

The I²C is a synchronous serial interface. The SDA line is a bidirectional signal and changes only when the SCL line is low, except for STOP, START and RESTART conditions. The output drivers are open-drain to perform wire AND

functions on the bus. The devices on the bus are limited to the 400 pF capacitance. Data is transmitted in byte packages.

For specific information, refer to the Philips Specification entitled "The I2C -Bus Specification, Version 2.1."

9. Notes on Interfacing with the ATWILC1000-MR110xB


Programmable Pull-Up Resistors

The ATWILC1000-MR110xB module provides programmable pull-up resistors on various pins. The purpose of these resistors is to keep any unused input pins from floating, which causes excess current to flow through the input buffer from the VDDIO supply. Any unused pin on the device must leave these pull-up resistors enabled, so that the pin will not float. The default state at power-up is for the pull-up resistor to be enabled; however, any pin that is used must have the pull-up resistor disabled. This is so if any pins are driven to a low level while the device is in the low-power sleep state, the current flows from the VDDIO supply through the pull-up resistors, increasing the current consumption of the module. The current through any pull-up resistor that is being driven low is $VDDIO/100K$ because the value of the pull-up resistor is approximately 100kOhm. For $VDDIO = 3.3V$, the current is approximately 33 μA . The pins that are used and have the pull-up resistor disabled must always be actively driven to either a high or low level and not be allowed to float.

10. Reference Design

This section provides the reference schematic for the ATWILC1000-MR110xB module with SPI and SDIO host interfaces.

Figure 10-1. Reference Schematic - SDIO Host Interface

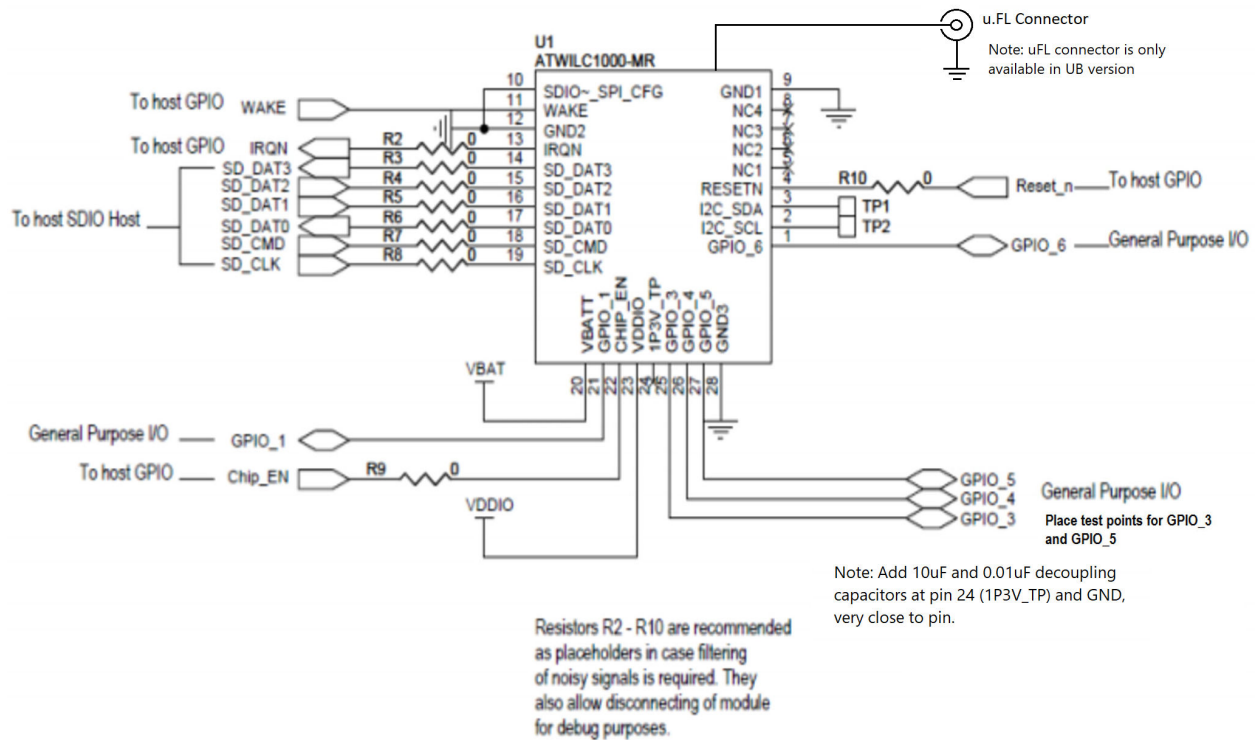


Notes:

1. Add 10 uF and 0.01 uF decoupling capacitors very close to pin 24 (1P3V_TP) and GND.
2. Add test points for pins 2, 3, 25 and 27.

Table 10-1. Bill of Materials - SDIO Host Interface Reference Schematic

Item	Qty.	Reference	Value	Description	Manufacturer	Part Number	Footprint
1	9	R2, R3, R4, R5, R6, R7, R8, R9, R10	0R	RESISTOR, Thick Film, 0 Ohm, 0402	Yageo Corporation	RC0402JR-070RL	0402
2	1	U1	ATWILC1000-MR110xB	Wi-Fi Module	Microchip Technology Inc.	ATWILC1000-MR110xB	—

Figure 10-2. Reference Schematic - SPI Host Interface

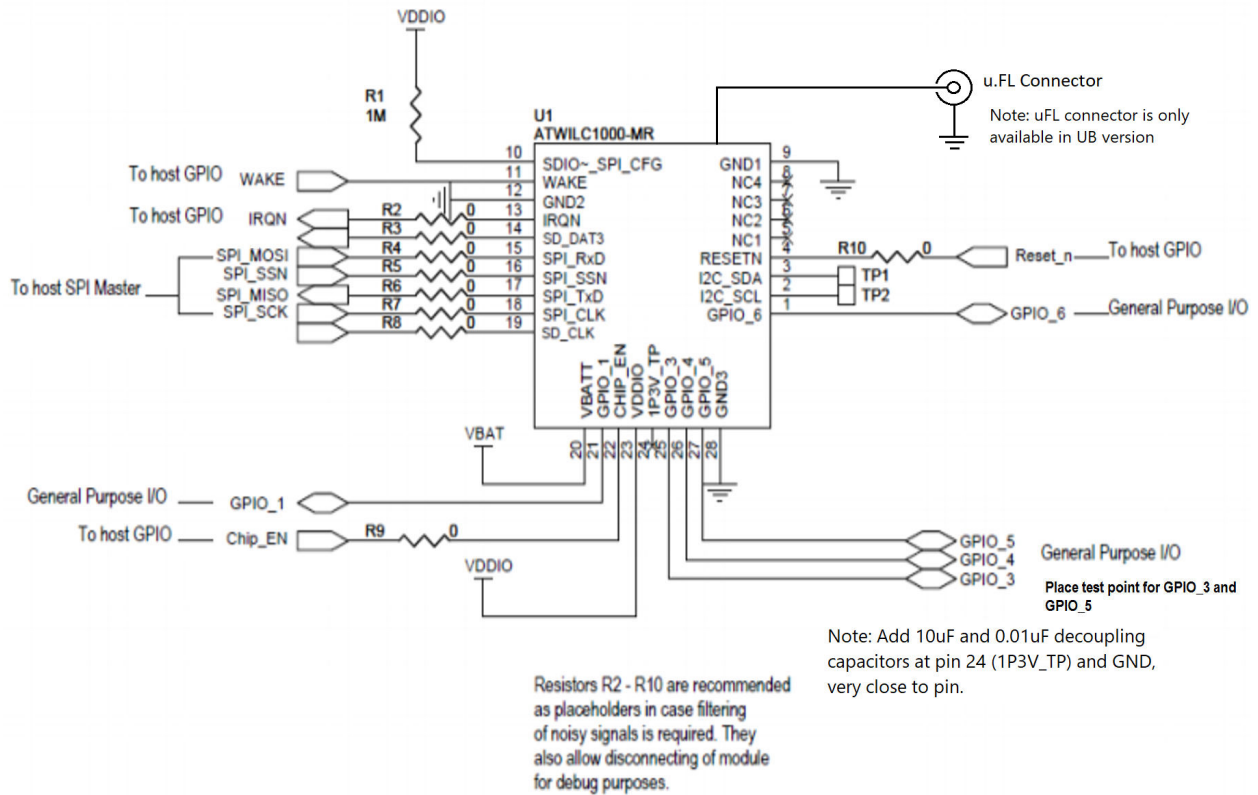

Notes:

1. Add 10 uF and 0.01 uF decoupling capacitors very close to pin 24 (1P3V_TP) and GND.
2. Add test points for pins 2, 3, 25 and 27.

Table 10-2. Bill of Materials - SPI Host Interface Reference Schematic

Item	Qty.	Reference	Value	Description	Manufacturer	Part Number	Footprint
1	1	R1	1M	RESISTOR, Thick Film, 1M Ohm, 0402	Yageo Corporation	RC0100FR-071ML	0402
2	9	R2, R3, R4, R5, R6, R7, R8, R9, R10	0R	RESISTOR, Thick Film, 0 Ohm, 0402	Yageo Corporation	RC0402JR-070RL	0402
3	1	U1	ATWILC1000-MR110xB	Wi-Fi Module	Microchip Technology Inc.	ATWILC1000-MR110xB	—


11. Module Outline Drawings

The ATWILC1000-MR110PB module package details are outlined in the following figure. Dimensions are in mm.

Tolerance details for the mechanical dimensions:

- L: 21.72 mm $\pm$ 0.15 mm
- W: 14.73 mm $\pm$ 0.15 mm
- H: 2.113 mm $\pm$ 0.15 mm

Figure 11-1. Module Drawings – ATWILC1000-MR110PB - Top, Bottom and Side Views

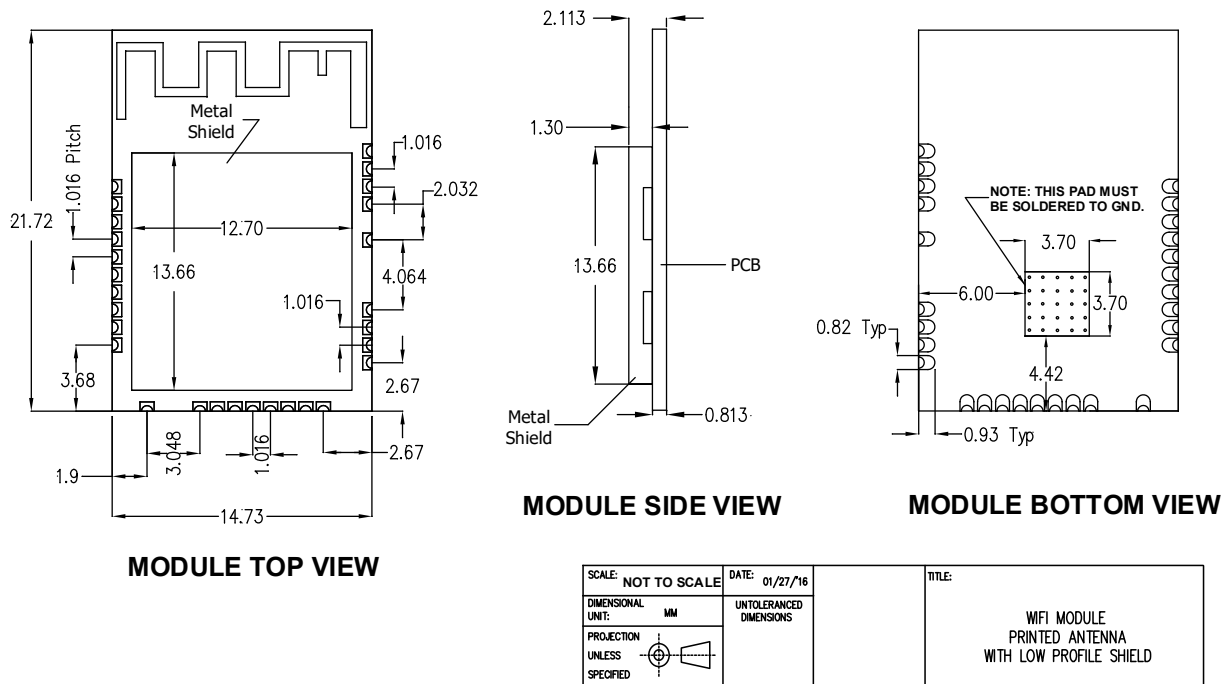


The ATWILC1000-MR110UB module package details are outlined in the following figure. Dimensions are in mm.

Tolerance details for the mechanical dimensions:

- L: 21.72 mm $\pm$ 0.15 mm
- W: 14.73 mm $\pm$ 0.15 mm
- H: 2.113 mm $\pm$ 0.15 mm


ATWILC1000-MR110xB **Module Outline Drawings**

Figure 11-2. Module Drawings – ATWILC1000-MR110UB - Top, Bottom and Side Views

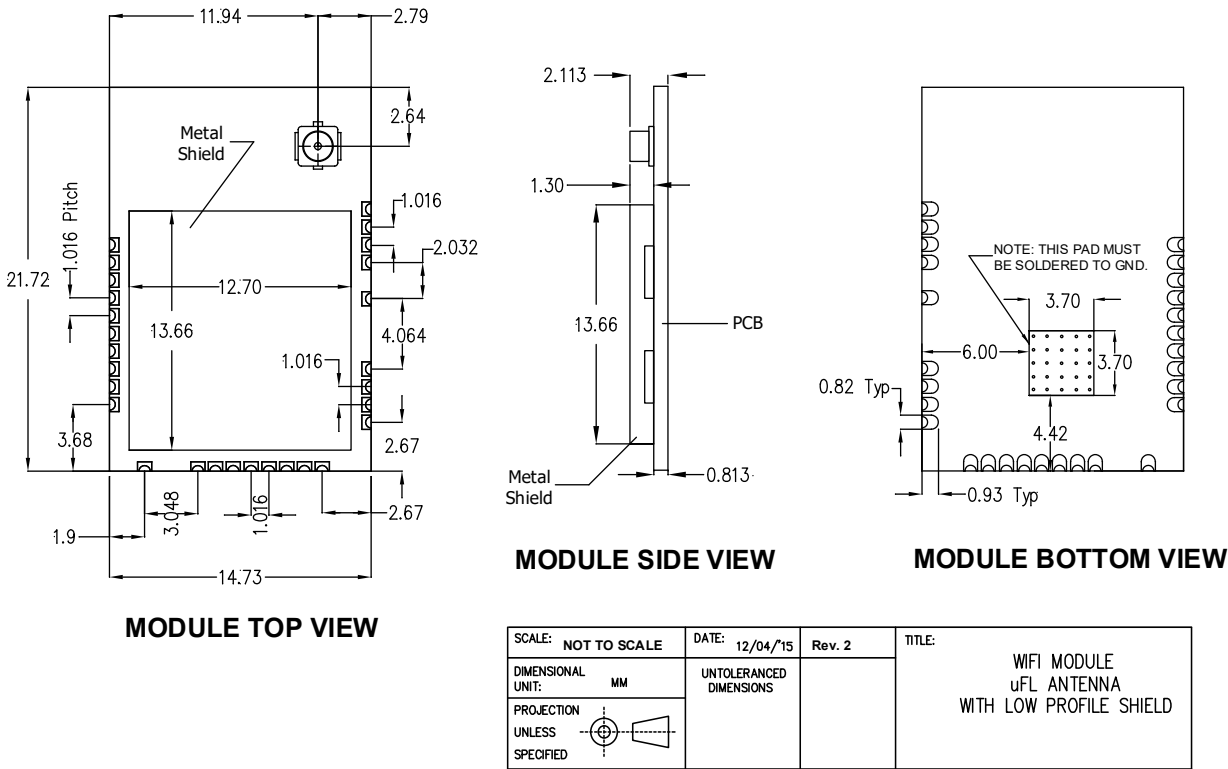

This section provides the outline drawing for the recommended footprint for the ATWILC1000-MR110xB module. It is imperative that the center Ground Pad is provided, with an array of GND vias to provide a good ground and act as a thermal sink for the ATWILC1000-MR110xB module.

Figure 11-3. Recommended Solder Pad Footprint

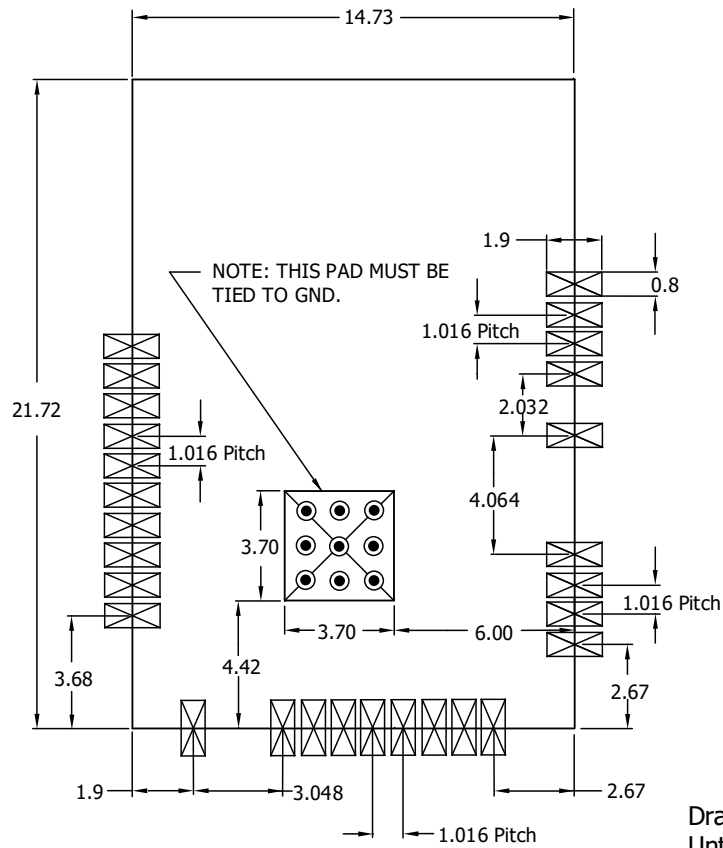

SOLDER PAD FOOTPRINT

Drawing not to scale.
Untoleranced dimensions.
Units=mm.

12. Design Consideration

This section provides the guidelines on placement and routing to achieve the best performance.

12.1 ATWILC1000-MR110PB Placement and Routing Guidelines

It is critical to follow the recommendations listed below to achieve the best RF performance:

- The module must be placed on a host board and the printed antenna area must overlap with the carrier board. The portion of the module containing the antenna must not stick out over the edge of the host board. The antenna is designed to work properly when it is sitting directly on top of a 1.5 mm thick printed circuit board. [Figure 12-2](#) shows the best, poor and worst case module placements in a host board.
- If the module is placed at the edge of the host board, a minimum 22 mm by 5 mm area directly under the antenna must be clear of all metal on all layers of the board. "In-land" placement is acceptable; however, the depth of the keep-out area must groove to: the module edge to the host board edge plus 5 mm.
Note: Do not place the module in the middle of the host board or far away from the host board edge.
- Follow the module placement, keepout and host PCB cutout recommendation, as shown in [Figure 12-1](#).
 - Avoid routing any traces in the highlighted region on the top layer of the host board, which is directly below the module area.
 - Follow the electrical keep-out layer recommendation, as shown in [Figure 12-1](#). There must not be any copper in any of the layers of the host board in this region. Avoid placing any components (like mechanical spacers, bump, etc.) in the recommended electrical keep-out area.
 - Place GND polygon pour below the module with the recommended boundary in the top layer of the host board, as shown in [Figure 12-1](#). Do not have any breaks in this GND plane.
 - Place sufficient GND vias in the highlighted area below the module for better RF performance.
 - It is recommended to have a 3 x 3 grid of GND vias solidly connecting the exposed GND paddle of the module to the inner layer ground plane. This will act as a good ground and thermal conduction for the ATWILC1000-MR110PB module. The GND vias must have a minimum via hole size of 0.3 mm.
 - Follow the mechanical boundary of the host PCB, as shown in [Figure 12-1](#).
- Keep large metal objects away from the antenna to avoid electromagnetic field blocking.
- Do not enclose the antenna within a metal shield.
- Keep any components that may radiate noise or signals within the 2.4 GHz – 2.5 GHz frequency band away from the antenna and if possible, shield those components. Any noise radiated from the host board in this frequency band will degrade the sensitivity of the module.
- Make sure the width of the traces routed to the GND, VDDIO and VBAT rails are sufficiently larger for handling the peak TX current consumption.

Figure 12-1. ATWILC1000-MR110PB Placement Reference


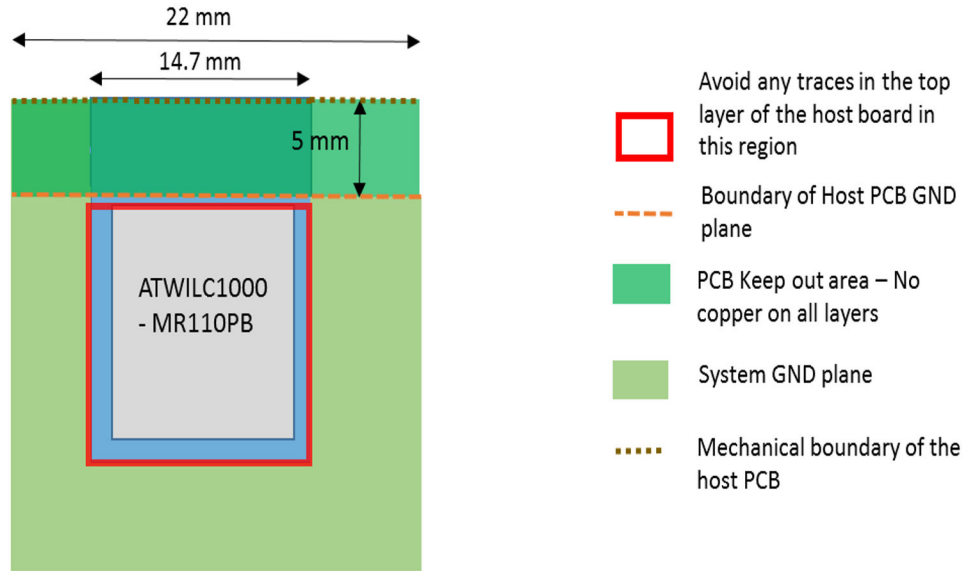


Figure 12-2. ATWILC1000-MR110PB Placement Example

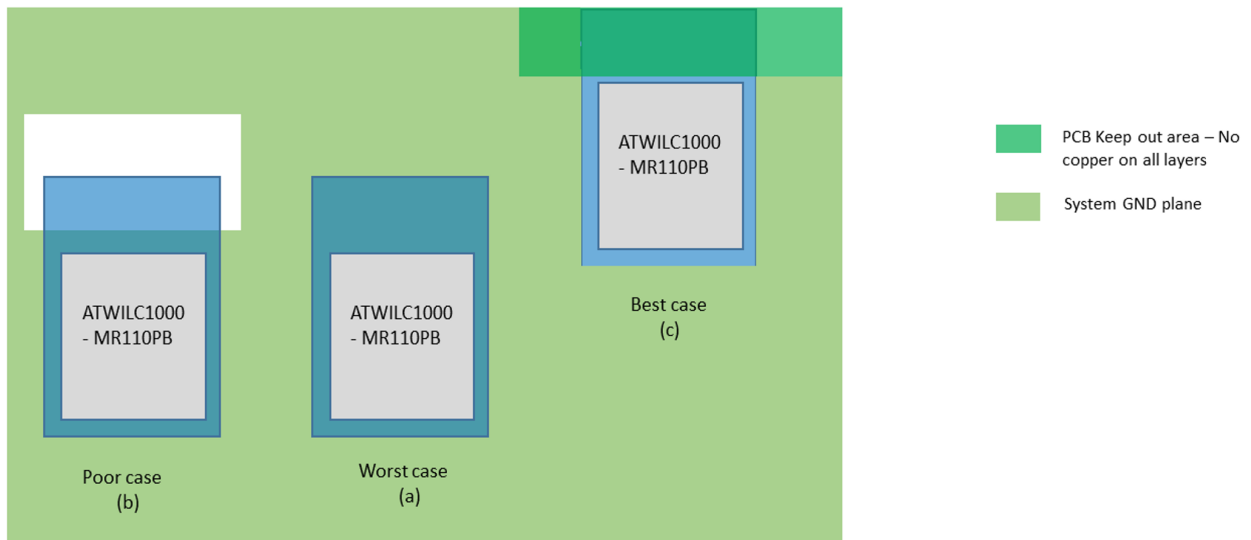

12.2 Printed PCB Antenna Performance of ATWILC1000-MR110PB

The printed PCB antenna on the ATWILC1000-MR110PB is a meandered Inverted F Antenna (IFA). The antenna is fed via matching network, which is matched for the module installed on 1.5 mm thick main board. Main board thickness deviation by ± 1 mm changes RX/TX performance by ± 1 dB maximum referring to the RX/TX performance with the default antenna-matching network and installed on 1.5 mm thick main board (FR-4 substrate).

Measured antenna gain is -0.3 dBi.

Antenna Radiation Pattern

The following figures illustrate the antenna radiation pattern. During the measurement, the printed antenna is placed in the XZ plane with the Y axis being perpendicular to the module and pointing to the back of the module.

Figure 12-3. Antenna Radiation Pattern when Phi = 0 Degree

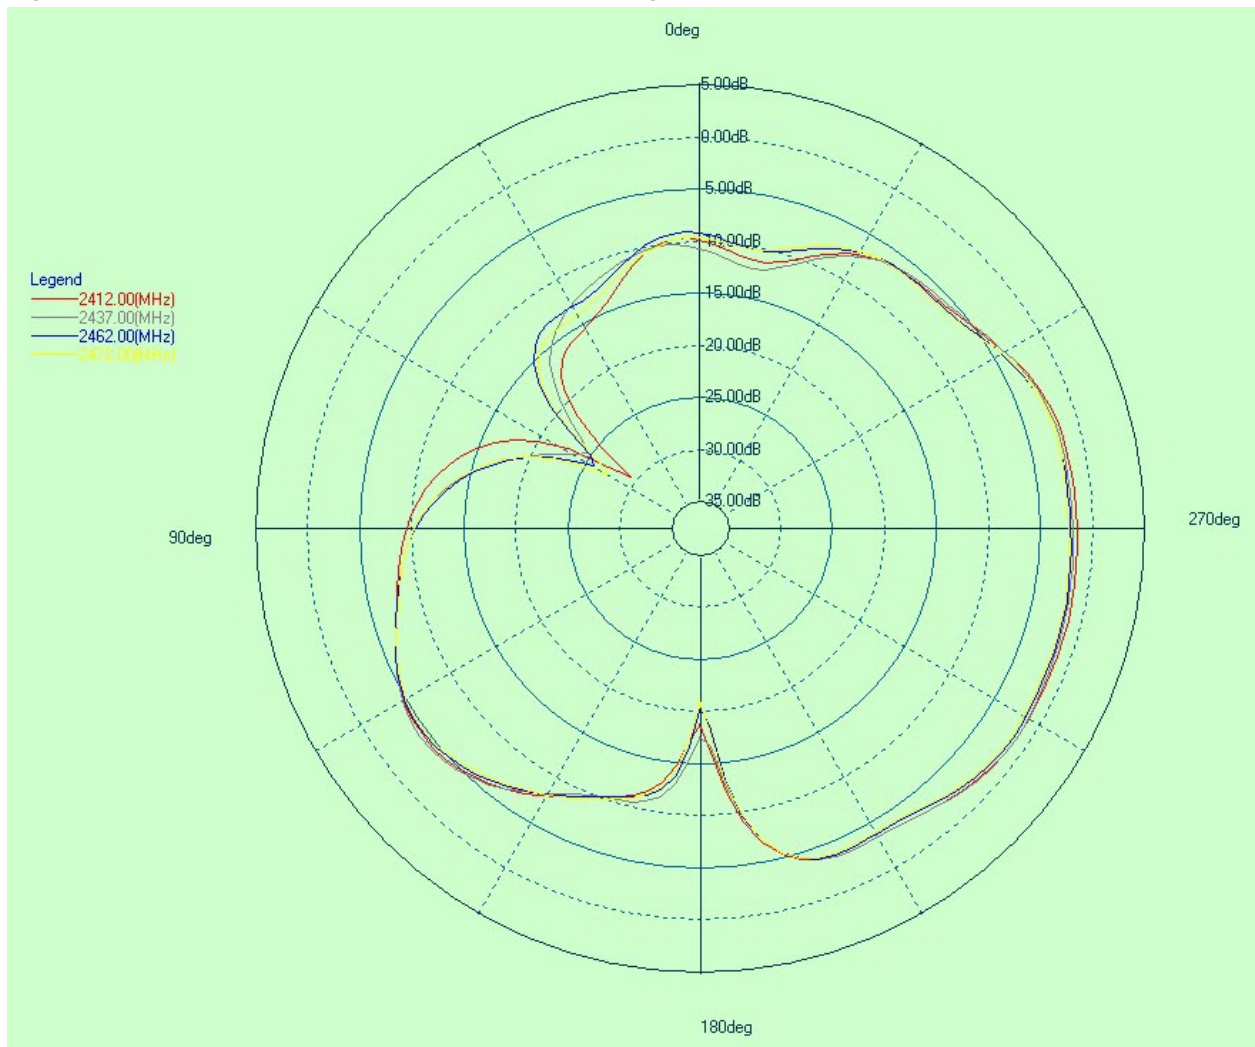


Figure 12-4. Antenna Radiation Pattern when Phi = 90 Degree


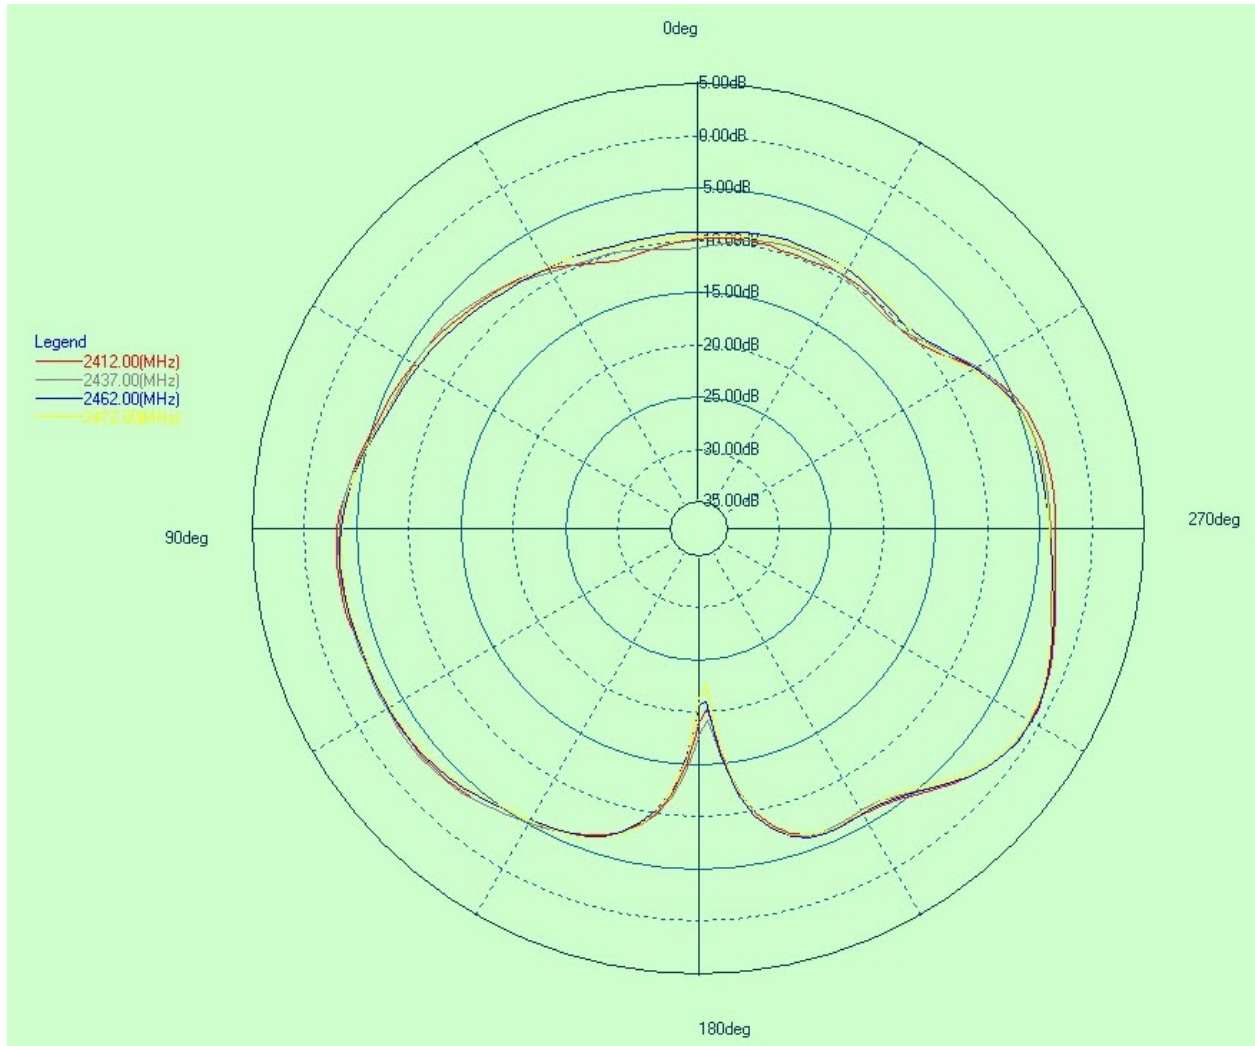


Figure 12-5. Antenna Radiation Pattern when Theta = 90 Degree

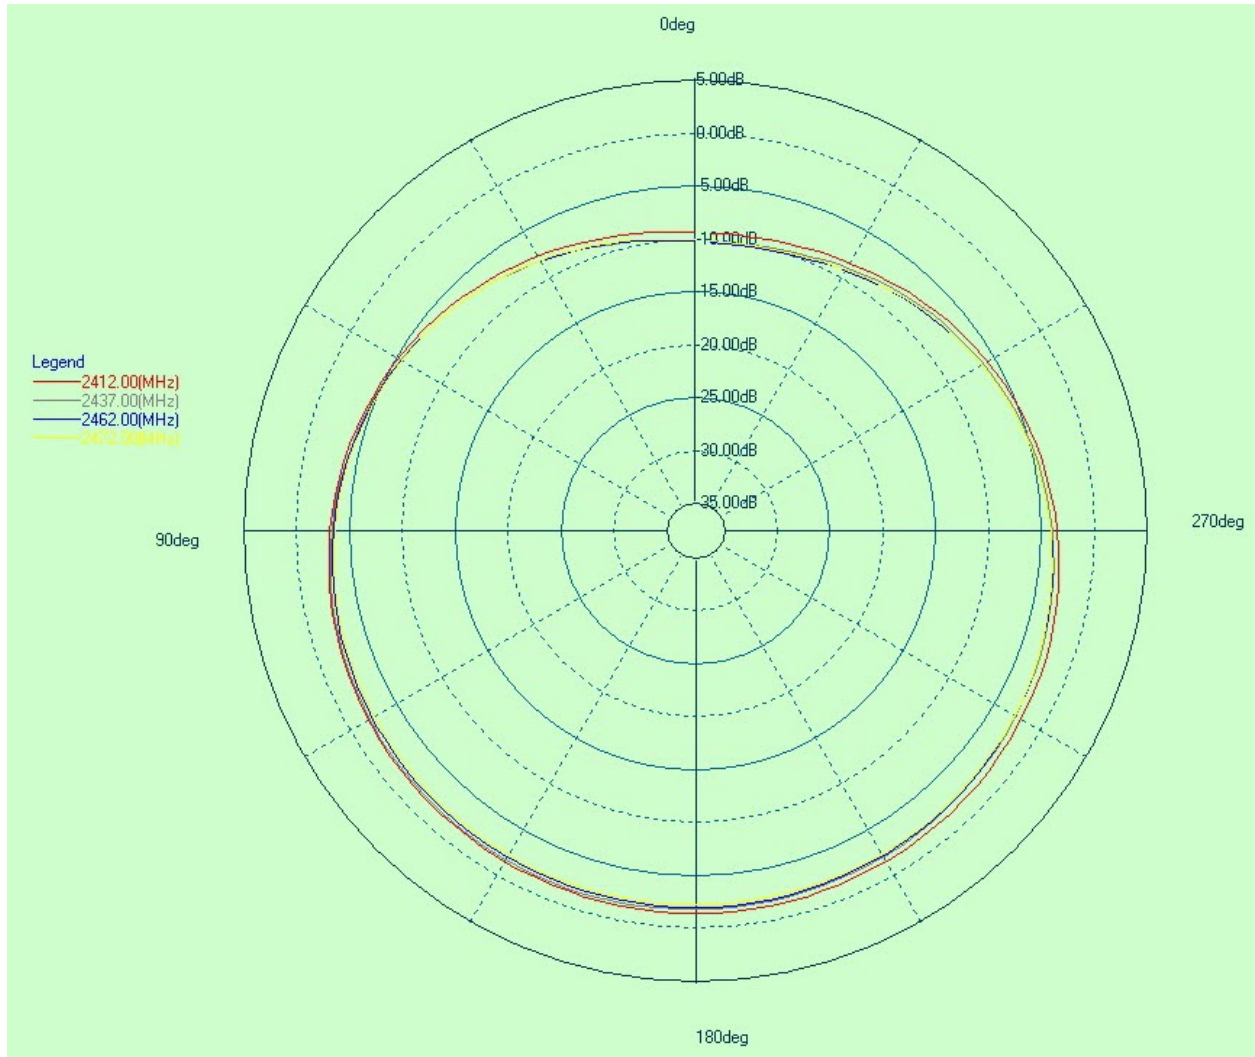

12.3 ATWILC1000-MR110UB Placement and Routing Guidelines

The ATWILC1000-MR110UB module has an Ultra Small Miniature RF Connector (U.FL) for the external antenna.

The choice of antenna is limited to the antenna types that the module was tested and approved for. For a list of tested and approved antennas that may be used with the module, refer to the respective country in the Regulatory Approval section.


An approved list of external antennas tested and certified with ATWILC1000-MR110UB module is shown in [Table 12-1](#).

It is critical to follow the recommendations listed below to achieve the best RF performance:

1. Avoid routing any traces on the top layer of the host board, which is directly below the module area.
2. Place the GND polygon pour below the complete module area. Do not have any breaks in this GND plane.
3. Place sufficient GND vias in the GND polygon pour below the module area for better RF performance.
4. It is recommended to have a 3 x 3 grid of GND vias solidly connecting the exposed GND paddle of the module to the inner layer ground plane of the host board. This will act as a good ground and thermal conduction path for the ATWILC1000-MR110UB module. The GND vias must have a minimum via hole size of 0.3 mm.
5. Keep large metal objects away from the external antenna to avoid electromagnetic field blocking.
6. Do not enclose the external antenna within a metal shield.

7. Keep any components that may radiate noise or signals within the 2.4 GHz – 2.5 GHz frequency band away from the external antenna and if possible, shield those components. Any noise radiated from the host board in this frequency band will degrade the sensitivity of the module.
8. Make sure the width of the traces routed to the GND, VDDIO and VBAT rails are sufficiently larger for handling the peak TX current consumption.
9. The antenna should preferably be placed at a distance greater than 5 cm away from the module. The following figure shows the antenna keep out area indication; where the antenna must not be placed in this area. This recommendation is based on an open-air measurement and does not take into account by any metal shielding of the customer end product. When a metal enclosure is used, the antenna can be located closer to the ATWILC1000-MR110UB module.
The following figure illustrates how an antenna cable should be routed based on the antenna's location with respect to the ATWILC1000-MR110UB PCB. There are two possible options for the optimum routing of the cable.

Figure 12-6. ATWILC1000-MR110UB Antenna Placement Guidelines

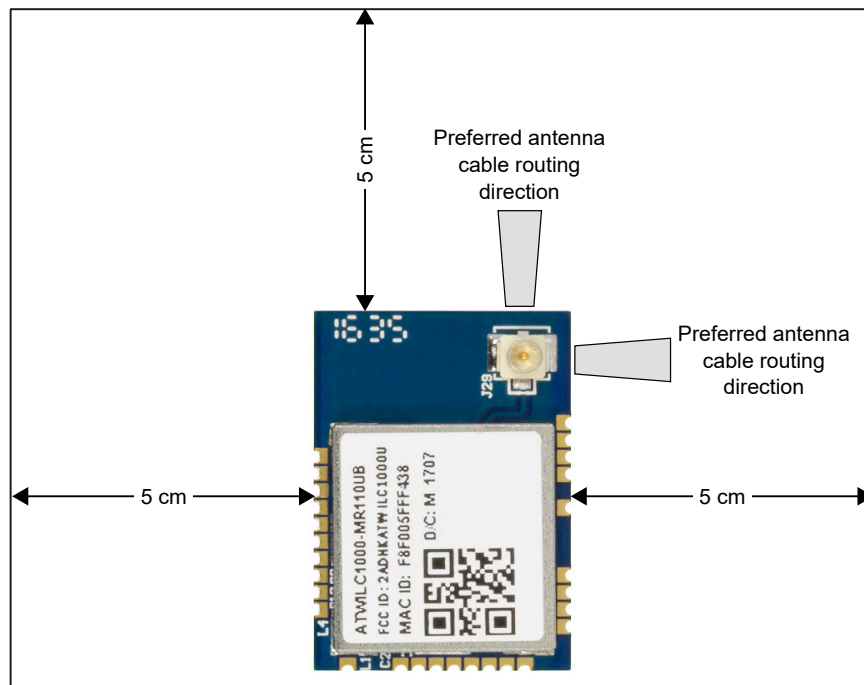

12.4 Recommended External Antennas

The ATWILC1000-MR110UB module is approved to use with the antennas listed in the following table.

It is permissible to use different antenna, provided the same antenna type, antenna gain (equal or less than), and similar in-band and out-of-band characteristics are present (refer to specification sheet for cutoff frequencies).

If other antenna types are used, the OEM installer must conduct the necessary assessments and authorize the antenna with respective regulatory agencies and ensure compliance. For more details on the corresponding regulatory approval sections, refer to [13. Regulatory Approval](#).

Table 12-1. List of External Antenna - Antenna Gain at 2.4 GHz (dBi)

List Item	Part Number	Manufacturer	Antenna Gain at 2.4 GHz Band	Antenna Type	Regulatory Authority ⁽¹⁾		
					FCC	ISED	CE
1	RFA-02-P33	Aristotle	2	PCB	X	X	X

.....continued							
List Item	Part Number	Manufacturer	Antenna Gain at 2.4 GHz Band	Antenna Type	Regulatory Authority ⁽¹⁾		
					FCC	ISED	CE
2	RFA-02-D3	Aristotle	2	Dipole	X	X	X
3	RFA-02-G03	Aristotle	2	Metal Stamp	X	X	X
4	RFA-02-L2H1	Aristotle	2	Dipole	X	X	X
5	RFA-02-P05	Aristotle	2	PCB	X	X	X
6	RFA-02-C2M2 ⁽²⁾⁽³⁾	Aristotle	2	Dipole	X	X	X
7	86254	Delock	2	PCB	—	—	X
8	W3525B039	Pulse Electronics	2	PCB	X	X	X
9	RFDPA8709 20IMLB301	WALSIN	1.84	Dipole	X	X	X
10	RN-SMA-S	Microchip	0.56	Dipole	X	X	X

Notes:

1. X = Antennas covered under the certification.
2. If the end-product using the module is designed to have an antenna port that is accessible to the end user, an RP (Reverse Polarity)-SMA socket must be used.
3. If an RF coaxial cable is used between the module RF output and the enclosure, then an RP-SMA connector must be used in the enclosure wall for the interface with the antenna.
4. Contact the antenna vendor for detailed antenna specifications to review suitability to end-product operating environment and to identify alternatives.

12.5 Reflow Profile Information

For information on the reflow process guidelines, refer to the “Solder Reflow Recommendation” Application Note (www.microchip.com/DS00233).

12.6 Module Assembly Considerations

The ATWILC1000-MR110xB module is assembled with an EMI shield to ensure compliance with EMI emission and immunity rules. The EMI shield is made of a tin-plated steel (SPTE) and is not hermetically sealed. Solutions such as IPA and similar solvents can be used to clean this module. Cleaning solutions containing acid must never be used on the module.

12.7 Conformal Coating

The modules are not intended for use with a conformal coating and the customer assumes all risks (such as the module reliability, performance degradation and so on) if a conformal coating is applied to the modules.

13. Regulatory Approval

Regulatory approvals received:

ATWILC1000-MR110PB

- United States/FCC ID: 2ADHKATWILC1000
- Canada/ISED:
 - IC: 20266-ATWILC1000
 - HVIN: ATWILC1000-MR110PB
 - PMN: ATWILC1000-MR110PB
- Europe/CE
- Japan/MIC: 005-101763
- Korea/KCC: R-CRM-mcp-WILC1000MR110P
- Taiwan/NCC: CCAN18LP0310T7
- China/SRRC: CMIIT ID: 2018DJ1313

ATWILC1000-MR110UB

- United States/FCC ID: 2ADHKATWILC1000U
- Canada/ISED:
 - IC: 20266-WILC1000UB
 - HVIN: ATWILC1000-MR110UB
 - PMN:
- Europe/CE

Gain Table for Individual Regulatory Region

The ATWILC1000-MR110PB module has received regulatory approvals for many regions in the world, namely United States/FCC, Canada/ISED, Europe/CE, Japan/MIC, Korea/KCC, Taiwan/NCC, and China/SRRC. The ATWILC1000-MR110UB module has received regulatory approvals for United States/FCC, Canada/ISED and Europe/CE.

The default firmware uses a common gain table that meets IEEE 802.11 specifications, and regulatory regions as noted above.

In some cases, the output power is limited by the regulatory region with the most stringent transmit power limits. To optimize performance, and if end products' destination is known, the specific gain table for that region can be optionally embedded into the firmware.

The regulatory region certified gain table for individual regulatory region is available on ATWILC1000-MR110PB and ATWILC1000-MR110UB product page. Customers can update the gain table in firmware by following the instructions in section 6. Updating Application Gain Table into WILC1000 of *ATWILC1000 – Deriving Application Gain Table Application Note*.

13.1 United States

The ATWILC1000-MR110PB and ATWILC1000-MR110UB modules have received Federal Communications Commission (FCC) CFR47 Telecommunications, Part 15 Subpart C “Intentional Radiators” single-modular approval in accordance with Part 15.212 Modular Transmitter approval. Single-modular transmitter approval is defined as a complete RF transmission sub-assembly, designed to be incorporated into another device, that must demonstrate compliance with FCC rules and policies independent of any host. A transmitter with a modular grant can be installed in different end-use products (referred to as a host, host product, or host device) by the grantee or other equipment manufacturer, then the host product may not require additional testing or equipment authorization for the transmitter function provided by that specific module or limited module device.

The user must comply with all of the instructions provided by the Grantee, which indicate installation and/or operating conditions necessary for compliance.

A host product itself is required to comply with all other applicable FCC equipment authorization regulations, requirements, and equipment functions that are not associated with the transmitter module portion. For example,

compliance must be demonstrated: to regulations for other transmitter components within a host product; to requirements for unintentional radiators (Part 15 Subpart B), such as digital devices, computer peripherals, radio receivers, etc.; and to additional authorization requirements for the non-transmitter functions on the transmitter module (i.e., Verification or Declaration of Conformity) as appropriate (e.g., Bluetooth and Wi-Fi transmitter modules may also contain digital logic functions).

13.1.1 Labeling and User Information Requirements

The ATWILC1000-MR110PB and ATWILC1000-MR110UB modules have been labeled with their own FCC ID numbers. If the FCC ID is not visible when the module is installed inside another device, then the outside of the finished product into which the module is installed must display a label referring to the enclosed module. This exterior label can use wording as follows:

For the ATWILC1000-MR110PB:

Contains Transmitter Module FCC ID: 2ADHKATWILC1000 or

Contains FCC ID: 2ADHKATWILC1000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For the ATWILC1000-MR110UB:

Contains Transmitter Module FCC ID: 2ADHKATWILC1000U or

Contains FCC ID: 2ADHKATWILC1000U

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A user's manual for the finished product must include the following statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Additional information on labeling and user information requirements for Part 15 devices can be found in KDB Publication 784748, which is available at the FCC Office of Engineering and Technology (OET) Laboratory Division Knowledge Database (KDB) apps.fcc.gov/oetcf/kdb/index.cfm.

13.1.2 RF Exposure

All transmitters regulated by FCC must comply with RF exposure requirements. KDB 447498 General RF Exposure Guidance provides guidance in determining whether proposed or existing transmitting facilities, operations or devices comply with limits for human exposure to Radio Frequency (RF) fields adopted by the Federal Communications Commission (FCC).

From the FCC Grant: Output power listed is conducted. This transmitter is restricted for use with the specific antenna(s) tested in this application for Certification.

In the end product, the antenna(s) used with this transmitter must be installed to provide a separation distance of at least 6.5 cm from all persons and must not be co-located or operation in conjunction with any other antenna or transmitter. User and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying the RF exposure compliance.

13.1.3 Approved Antenna Types

To maintain modular approval in the United States, only the antenna types that have been tested shall be used. It is permissible to use a different antenna, provided the same antenna type and antenna gain (equal to or less than) is used. An antenna type comprises antennas having similar in-band and out-of-band radiation patterns.

Testing of the ATWILC1000-MR110PB module was performed with the integral PCB antenna.

Testing of the ATWILC1000-MR110UB module was performed with the antenna types mentioned in the [Table 12-1](#).

13.1.4 Helpful Websites

Federal Communications Commission (FCC): <http://www.fcc.gov>

FCC Office of Engineering and Technology (OET) Laboratory Division Knowledge Database (KDB): apps.fcc.gov/oetcf/kdb/index.cfm

13.2 Canada

The ATWILC1000-MR110PB and ATWILC1000-MR110UB module have been certified for use in Canada under Innovation, Science and Economic Development Canada (ISED, formerly Industry Canada) Radio Standards Procedure (RSP) RSP-100, Radio Standards Specification (RSS) RSS-Gen and RSS-247. Modular approval permits the installation of a module in a host device without the need to recertify the device.

13.2.1 Labeling and User Information Requirements

Label Requirements (from RSP-100 Issue 11, Section 3): The host device shall be properly labeled to identify the module within the host device.

The Innovation, Science and Economic Development Canada certification label of a module shall be clearly visible at all times when installed in the host device, otherwise the host device must be labeled to display the Innovation, Science and Economic Development Canada certification number of the module, preceded by the words "Contains", or similar wording expressing the same meaning, as follows:

For the ATWILC1000-MR110PB:

Contains IC: 20266-ATWILC1000

For the ATWILC1000-MR110UB:

Contains IC: 20266-WILC1000UB

User Manual Notice for License-Exempt Radio Apparatus (from Section 8.4 RSS-Gen, Issue 4, November 2014): User manuals for license-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both:

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Guidelines on Transmitter Antenna for License Exempt Radio Apparatus:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Immediately following the above notice, the manufacturer shall provide a list of all antenna types approved for use with the transmitter, indicating the maximum permissible antenna gain (in dBi) and required impedance for each.

13.2.2 RF Exposure

All transmitters regulated by Innovation, Science and Economic Development Canada (ISED) must comply with RF exposure requirements listed in RSS-102 - Radio Frequency (RF) Exposure Compliance of Radio communication Apparatus (All Frequency Bands).

This transmitter is restricted for use with a specific antenna tested in this application for certification, and must not be co-located or operating in conjunction with any other antenna or transmitters within a host device, except in accordance with Canada multi-transmitter product procedures.

The installation of the transmitter must ensure that the antenna has a separation distance of at least 6.5 cm from all persons or compliance must be demonstrated according to the ISED SAR procedures.

13.2.3 Approved Antenna Types

Testing of the ATWILC1000-MR110PB module was performed with the integral PCB antenna.

Testing of the ATWILC1000-MR110UB module was performed with the antenna types mentioned in the [Table 12-1](#).

13.2.4 Helpful Websites

Innovation, Science and Economic Development Canada: <http://www.ic.gc.ca/>

13.3 Europe

The ATWILC1000-MR110PB and ATWILC1000-MR110UB modules are Radio Equipment Directive (RED) assessed radio modules that are CE marked and have been manufactured and tested with the intention of being integrated into a final product.

The ATWILC1000-MR110PB and ATWILC1000-MR110UB modules have been tested to RED 2014/53/EU Essential Requirements mentioned in the following European Compliance table.

Table 13-1. European Compliance

Certification	Standards	Article
Safety	EN60950	3.1(a)
Health	EN62311	
EMC	EN 301 489-1	3.1(b)
	EN 301 489-17	
Radio	EN300 328	3.2

The ETSI provides guidance on modular devices in “*Guide to the application of harmonised standards covering articles 3.1b and 3.2 of the RED 2014/53/EU (RED) to multi-radio and combined radio and non-radio equipment*”

document available at http://www.etsi.org/deliver/etsi_eg/203300_203399/20_3367/01.01.01_60/eg_203367v010101p.pdf.

Note: To maintain conformance to the standards listed in the preceding European Compliance table, the module shall be installed in accordance with the installation instructions in this data sheet and shall not be modified. When integrating a radio module into a completed product, the integrator becomes the manufacturer of the final product and is therefore responsible for demonstrating compliance of the final product with the essential requirements against the RED.

13.3.1 Labeling and User Information Requirements

The label on the final product containing the ATWILC1000-MR110PB and ATWILC1000-MR110UB module must follow CE marking requirements.

13.3.2 Conformity Assessment

From ETSI Guidance Note EG 203367, section 6.1 Non-radio products are combined with a radio product:

If the manufacturer of the combined equipment installs the radio product in a host non-radio product in equivalent assessment conditions (i.e. host equivalent to the one used for the assessment of the radio product) and according to the installation instructions for the radio product, then no additional assessment of the combined equipment against article 3.2 of the RED is required.

13.3.3 Approved Antenna Types

Testing of the ATWILC1000-MR110PB module was performed with the integral PCB antenna.

Testing of the ATWILC1000-MR110UB module was performed with the antenna types mentioned in the [Table 12-1](#).

13.3.4 Simplified EU Declaration of Conformity

Hereby, Microchip Technology Inc. declares that the radio equipment type ATWILC1000-MR110PB and ATWILC1000-MR110UB are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity, for this product, is available at <http://www.microchip.com/ATWILC1000> (available under Documents > Certifications).

13.3.5 Helpful Websites

A document that can be used as a starting point in understanding the use of Short Range Devices (SRD) in Europe is the European Radio Communications Committee (ERC) Recommendation 70-03 E, which can be downloaded from the European Communications Committee (ECC) at: <http://www.ecodocdb.dk/>.

Additional helpful web sites are:

- Radio Equipment Directive (2014/53/EU):
https://ec.europa.eu/growth/single-market/european-standards/harmonised-standards/rte_en
- European Conference of Postal and Telecommunications Administrations (CEPT):
<http://www.cept.org>
- European Telecommunications Standards Institute (ETSI):
<http://www.etsi.org>
- The Radio Equipment Directive Compliance Association (REDCA):
<http://www.redca.eu/>

13.4 Japan

The ATWILC1000-MR110PB has received type certification and is labeled with its own technical conformity mark and certification number as required to conform to the technical standards regulated by the Ministry of Internal Affairs and Communications (MIC) of Japan pursuant to the Radio Act of Japan.

Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed. Additional testing may be required:

- If the host product is subject to electrical appliance safety (for example, powered from an AC mains), the host product may require Product Safety Electrical Appliance and Material (PSE) testing. The integrator must contact their conformance laboratory to determine if this testing is required.

- There is a voluntary Electromagnetic Compatibility (EMC) test for the host product administered by VCCI: http://www.vcci.jp/vcci_e/index.html.

13.4.1 Labeling and User Information Requirements

The label on the final product containing the ATWILC1000-MR110PB module must follow Japan's marking requirements. The integrator of the module must refer to the labeling requirements for Japan available at the Ministry of Internal Affairs and Communications (MIC) website.

For the ATWILC1000-MR110PB module, due to a limited module size, the technical conformity logo and ID is displayed in the data sheet and/or packaging label and cannot be displayed on the module label. The final product using this module must have a label referring to the type of certified module inside:



13.4.2 Helpful Websites

- Ministry of Internal Affairs and Communications (MIC): <http://www.tele.soumu.go.jp/e/index.htm>
- Association of Radio Industries and Businesses (ARIB): <http://www.arib.or.jp/english/>

13.5 Korea

The ATWILC1000-MR110PB received certification of conformity in accordance with the Radio Waves Act. Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed.

13.5.1 Labeling and User Information Requirements

The label on the final product which contains the ATWILC1000-MR110PB module must follow KC marking requirements. The integrator of the module must refer to the labeling requirements for Korea available on the Korea Communications Commission (KCC) website.

For ATWILC1000-MR110PB, due to a limited module size, the KC mark and ID are displayed in the data sheet and/or packaging and cannot be displayed on the module label. The final product requires the KC mark and certificate number of the module:



13.5.2 Helpful Websites

- Korea Communications Commission (KCC): <http://www.kcc.go.kr>
- National Radio Research Agency (RRA): <http://rra.go.kr>


13.6 Taiwan

The ATWILC1000-MR110PB module has received compliance approval in accordance with the Telecommunications Act. Customers seeking to use the compliance approval in their product must contact Microchip Technology Inc. sales or distribution partners to obtain a Letter of Authority.

Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed.

13.6.1 Labeling and User Information Requirements

For the ATWILC1000-MR110PB module, due to limited module size, the NCC mark and ID are displayed in the data sheet only and cannot be displayed on the module label.

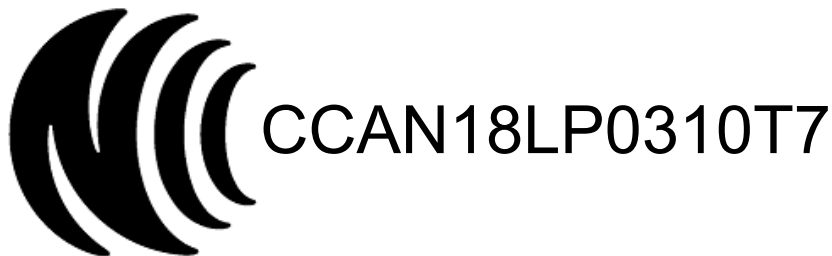

The user's manual must contain below warning (for RF device) in traditional Chinese:

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信規定作業之無線電信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用 電波輻射性電機設備之干擾。

13.6.2 Helpful Website

National Communications Commission (NCC): <http://www.ncc.gov.tw>

13.7 China

The ATWILC1000-MR110PB module has received certification of conformity in accordance with the China MIIT Notice 2014-01 of State Radio Regulation Committee (SRRC) certification scheme. Integration of this module into a final product does not require additional radio certification, provided installation instructions are followed and no modifications of the module are allowed. Refer to SRRC certificate available in ATWILC1000-MR110PB product page for expiry date.

13.7.1 Labeling and User Information Requirements

The ATWILC1000-MR110PB module is labeled with its own CMIIT ID as follows:

CMIIT ID: 2018DJ1313

When the host system is using an approved Full Modular Approval (FMA) radio: The host must bear a label containing the statement "This device contains SRRC approved Radio module CMIIT ID: 2018DJ1313".

13.8 Other Regulatory Information

- For information on the approvals received from the other countries' jurisdictions, which are not covered here, are available in the <http://www.microchip.com/ATWILC1000> (available under *Documents > Certifications*).
- If the customer needs other regulatory certification or to rectify the module for other reasons, they can contact Microchip for the required utilities and documentation.

14. Reference Documentation

The following table provides the set of collateral documents to ease integration and device ramp.

Table 14-1. Reference documents

Title	Content
ATWILC1000/ATWILC3000 Wi-Fi Link Controller Linux® User Guide	This user guide describes how to run Wi-Fi on the ATWILC1000 SD card and how to run Wi-Fi/BLE on the ATWILC3000 Shield board on the SAMA5D4 Xplained Ultra running with the Linux kernel 4.9.
ATWILC1000B-MU Data sheet	Data sheet for the ATWILC1000 SmartConnect Wi-Fi component.
ATWILC1000/ATWILC3000 Devices Linux Porting Guide	This user guide describes how to port the ATWILC1000 and ATWILC3000 Linux drivers to another platform and contains all the required modifications for driver porting.
ATWILC1000/ATWILC3000 Baremetal Wi-Fi/BLE Link Controller Software Design Guide	This design guide helps the user in integrating ATWILC1000/ATWILC3000 in the application using RTOS from Advanced Software Framework (ASF).
ATWILC1000B/ATWILC1000-MR110xB Errata	This document provides details on the anomalies identified in the ATWILC1000 family of devices.
ATWILC1000B – Deriving Application Gain Table Application Note	This application note describes the Wi-Fi gain table structure and procedure to derive the application gain table. This document provides further details on the steps to update the device with the gain table.

Note: For a complete listing of development support tools and documentation, visit <http://www.microchip.com/wwwproducts/en/ATWILC1000> or refer to the customer support section for contacting the nearest Microchip field representative.

15. Document Revision History

Revision	Date	Section	Description
D	10/2020	Features	Updated this section
		3. Pinout and Package Information	Updated this section
		4. Electrical Specifications	- Updated VDDIO and VBAT specification in 4.2 Recommended Operating Conditions - Added 4.3 DC Characteristics - Updated Table 4-5.
		6.3 Nonvolatile Memory (eFuse)	Updated this section with new information and Figure 6-1
		7. WLAN Subsystem	Added footnotes for Short GI feature
		8. External Interfaces	- Updated this section - Updated Figure 8-1
		10. Reference Design	Added Notes
		12. Design Consideration	- Updated 12.3 ATWILC1000-MR110UB Placement and Routing Guidelines - Added 12.4 Recommended External Antennas section - Updated following sections with standard text: 12.5 Reflow Profile Information 12.6 Module Assembly Considerations - Added 12.7 Conformal Coating section
		11. Module Outline Drawings	Added tolerance details for the mechanical dimensions
		13. Regulatory Approval	- Added 13. Gain Table for Individual Regulatory Region section - Updated 13.1 United States and 13.2 Canada with the details of antennas used for approval - Revamped 13.3 Europe - Updated module label information in 13.5 Korea - Updated expiry date information in 13.7 China - Added product webpage link in 13.8 Other Regulatory Information
		14. Reference Documentation	Updated

.....continued

Revision	Date	Section	Description
C	05/2019	1. Ordering Information and Module Marking	Updated Regulatory Certification
		13. Regulatory Approval	- Updated with ATWILC1000-MR110PB information - Added European Compliance table - Added 13.4 Japan, 13.5 Korea, 13.6 Taiwan, and 13.7 China
B	10/2017	MAC Features	Editorial updates
A	08/2017	Document	- Updated from Atmel to Microchip template. - Assigned a new Microchip document number. Previous version is Atmel 42503 revision C. - ISBN number added. - Updated module reference to ATWILC1000-MR110xB throughout the document. - Removed reference to Bluetooth coexistence - Added WFA certification details - Updated block diagram Figure 2-1 - Updated pin description in Table 3-1 - Updated VDDIO absolute maximum voltage rating in Table 4-1 and added caution footnote - Added operating temperature to Table 4-2 - Moved 4.5 Transmitter Performance, 4.4 Receiver Performance and 4.6 Timing Characteristics under 4. Electrical Specifications - Updated description in 6.3 Nonvolatile Memory (eFuse) - Revised the 4.5 Transmitter Performance and 4.4 Receiver Performance - Updated 10. Reference Design - Added 12. Design Consideration - Updated 14. Reference Documentation

(Atmel) Rev C - 11/2016

Section	Changes
Document	- Updated the device pinout drawing Figure 3-1 to make it easier to read - Added section regarding PCBA coatings - Updated Marking diagram in Figure 1-1 - Revised values for Transmit Power and added notes in Table 4-5 - Added Pins and Agencies to Ordering Information in Table 1-1 - Added section 12.3 ATWILC1000-MR110UB Placement and Routing Guidelines Types for ATWILC1000-MR110UB - Added Certification Notices - Added 13. Regulatory Approval - Updated Description to indicate both the MR110PB and MR110UB are covered - Removed "With seamless roaming capabilities" from description - Revised features to only support SPI and SDIO hosts - Removed references to WAPI - Removed UART - Moved Solder Pad drawing to be with POD drawings as in Figure 11-1 - Minor edits

(Atmel) Rev B - 5/2016

Section	Changes
Document	- Revised POD drawings in 11. Module Outline Drawings - Revised Footprint drawing in 11. Module Outline Drawings - Removed Module schematics and BOM's - Added Reflow profile 12.5 Reflow Profile Information - Updated SDIO timing content in SDIO Slave Timing - Added footnotes to recommended operating ratings in Recommended Operating Conditions - Updated SPI timing content in SPI Slave Timing

(Atmel) Rev A - 8/2015

Section	Changes
Document	Updated due to changes from ATWILC100A(42380D) to ATWILC1000B: - Updated power numbers and description, added high-power and low-power modes - Updated radio performance numbers - Fixed typos in SPI interface timing - Added hardware accelerators in feature list (security and checksum) - Increased instruction RAM size from 128KB to 160KB - Improved and corrected description of Coexistence interface - Miscellaneous minor updates and corrections

The Microchip Website

Microchip provides online support via our website at www.microchip.com/. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to www.microchip.com/pcn and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: www.microchip.com/support

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods being used in attempts to breach the code protection features of the Microchip devices. We believe that these methods require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Attempts to breach these code protection features, most likely, cannot be accomplished without violating Microchip's intellectual property rights.
- Microchip is willing to work with any customer who is concerned about the integrity of its code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable." Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication is provided for the sole purpose of designing with and using Microchip products. Information regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, IdealBridge, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Paralleling, Inter-Chip Connectivity, JitterBlocker, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICKit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SMART-I.S., storClad, SQL, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, TSHARC, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2020, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-6969-8

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: www.microchip.com/support Web Address: www.microchip.com	Australia - Sydney Tel: 61-2-9868-6733 China - Beijing Tel: 86-10-8569-7000 China - Chengdu Tel: 86-28-8665-5511 China - Chongqing Tel: 86-23-8980-9588 China - Dongguan Tel: 86-769-8702-9880 China - Guangzhou Tel: 86-20-8755-8029 China - Hangzhou Tel: 86-571-8792-8115 China - Hong Kong SAR Tel: 852-2943-5100 China - Nanjing Tel: 86-25-8473-2460 China - Qingdao Tel: 86-532-8502-7355 China - Shanghai Tel: 86-21-3326-8000 China - Shenyang Tel: 86-24-2334-2829 China - Shenzhen Tel: 86-755-8864-2200 China - Suzhou Tel: 86-186-6233-1526 China - Wuhan Tel: 86-27-5980-5300 China - Xian Tel: 86-29-8833-7252 China - Xiamen Tel: 86-592-2388138 China - Zhuhai Tel: 86-756-3210040	India - Bangalore Tel: 91-80-3090-4444 India - New Delhi Tel: 91-11-4160-8631 India - Pune Tel: 91-20-4121-0141 Japan - Osaka Tel: 81-6-6152-7160 Japan - Tokyo Tel: 81-3-6880-3770 Korea - Daegu Tel: 82-53-744-4301 Korea - Seoul Tel: 82-2-554-7200 Malaysia - Kuala Lumpur Tel: 60-3-7651-7906 Malaysia - Penang Tel: 60-4-227-8870 Philippines - Manila Tel: 63-2-634-9065 Singapore Tel: 65-6334-8870 Taiwan - Hsin Chu Tel: 886-3-577-8366 Taiwan - Kaohsiung Tel: 886-7-213-7830 Taiwan - Taipei Tel: 886-2-2508-8600 Thailand - Bangkok Tel: 66-2-694-1351 Vietnam - Ho Chi Minh Tel: 84-28-5448-2100	Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4485-5910 Fax: 45-4485-2829 Finland - Espoo Tel: 358-9-4520-820 France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 Germany - Garching Tel: 49-8931-9700 Germany - Haan Tel: 49-2129-3766400 Germany - Heilbronn Tel: 49-7131-72400 Germany - Karlsruhe Tel: 49-721-625370 Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 Germany - Rosenheim Tel: 49-8031-354-560 Israel - Ra'anana Tel: 972-9-744-7705 Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781 Italy - Padova Tel: 39-049-7625286 Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340 Norway - Trondheim Tel: 47-72884388 Poland - Warsaw Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50 Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 Sweden - Gothenberg Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820